



JUKEBOX

For the delight and amusement of all people age 14 and over. For indoor use only.

A. OPERATION

1. Open the battery compartment cover and insert 3 x AA batteries (included) into the battery compartment. Align "+" and "-" as marked on the battery compartment.
2. Close the battery compartment cover.
3. Turn the Volume knob switch to ON
4. Press the song button on the front panel to select a song. The music stops after the selected song plays.
5. Press and hold "Bluetooth" button for 3 second, will start "Bluetooth mold", find the equipment "Mr. Christmas Jukebox" and connected to play song.
6. During the Bluetooth Mold, Press and hold "Bluetooth button" for 3 second, will come back to music mold.
7. Adjust volume by pressing the Volume Up or Volume Down on the front panel.
8. The jukebox lights up when the song is played both music mold and bluetooth mold.
9. Turn to the "OFF" position to turn off the Jukebox.

Remarks

Under music mode: music stops after 30s, lights will OFF, Jukebox in STANDBY mode.

Under Bluetooth mode: songs from computer/ mobile stop after 30s, lights will OFF, Jukebox in STANDBY mode.

Under Bluetooth mode: Computer/ mobile OFF suddenly, Bluetooth mode will be CUT OFF, after 30s lights will OFF, Jukebox in STANDBY mode.

B. SONG LIST

1. Deck The Halls
2. Jingle Bells
3. God Rest Ye Merry Gentlemen

“Deck the Halls”

Performed by Smokey Robinson & The Miracles

Courtesy of Motown Records under license from Universal Music Enterprises

“Jingle Bells”

Performed by Bing Crosby & The Andrews Sisters

Courtesy of Geffen Records under license from Universal Music Enterprises

“God Rest Ye Merry Gentlemen”

Performed By Nat King Cole

All rights reserved. Used by permission.

C. TROUBLESHOOTING

PROBLEM	LIKELY CAUSE	SOLUTION
Songs not playing	Batteries not inserted correctly	Make sure to align the "+" and "-" as marked on the battery compartment
	Switch is in the "OFF" position	Turn the switch to from OFF to ON position
	Batteries exhausted	Change to new batteries

D. CARE INSTRUCTIONS

1. Do not expose this item to moisture or outdoors. This item is for indoor use only.
2. Before using or reusing, inspect product carefully. Discard any products that have cracks in enclosure or exposed wire.
3. When storing the product, carefully remove from the current location to avoid any undue strain or stress on the conductors, connections and wires.
4. When not in use, store neatly in a cool, dry location protected from sunlight and heat.
5. If necessary, clean product by wiping with a soft, dry cloth. Do not use any corrosive cleanser or chemical solution on this item.

E. BATTERY INSTRUCTIONS

1. Do not dispose batteries in fire. Batteries may explode or leak.
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
4. Replace batteries of the same brand.
5. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
6. Remove fully discharged batteries immediately.
7. Remove all the batteries for storage of the unit to avoid battery leakage.
8. Batteries should be recycled or disposed of as per state and local guidelines.

The following is only applicable to customers in the USA:

FEDERAL COMMUNICATIONS COMMISSION, PART 15:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Made by Mr. Christmas LLC
5425 E Raines Rd. Ste 5, Memphis, TN 38115-6701
Email: customerservice@mrchristmas.com

Made in China
20250319 (v.0)
12685