

## Smart Media Player

### Product Manual

#### Opening Note














- ▲Store the unit away from high temperature, extreme moisture or dust .
- ▲Avoid strong impact or any collision with the product.The unit is not water-proof.
- ▲This product is a high precision electronic product, do not disassemble or clean it with alcohol, thinner and benzene solution.
- ▲The maker reserves the right to upgrade the product, product specification and design is subject to change without prior notice.
- ▲Disclaimer: The maker assumes responsibility for warranty service of the product itself and assume no responsibility for the data loss.
- ▲Pictures contained in this manual are for reference only.

#### 1.Package Contents

Number	Items	Quantity
1	SMART TV BOX	1 PCS
2	HDMI CABLE	1 PCS
3	POWER ADAPTOR	1 PCS
4	INFRARED REMOTE CONTROLLER	1 PCS
5	USER MAUNAL	1 PCS

#### 2.The remote control

This device comes with a remote control,of which most functions can be operated with navigation keys. For some APK, switch the mouse mode by pressing the mouse key before operation.

Icon	Key	Function
	Power	Power on/off/standby
	SETUP	Enter Settings with one key
	Application	One key into the application
	Volume down	Increase the sound
	Volume up	Decrease the sound
	Menu	Menu
	Mouse	Mouse mode switching
	Home Page	Back to home page
	RETURN	Return to last page/operation
	Navigation	Upward. downward. left. right navigation using navigation mode for Enter confirmation
	Muet	Silent mode
	Numbers	Input of numbers
	Backspace	Move backwards and delete the character

Note: The accessories may be slightly different from the list above due to different models specifications and subject to the product purchased.

#### 3. BUTTONS AND PORTS

( Note : The ports and its layout may change for some models, please refer to silkscreen designators on the unit )

Items	Description/Function
DC+	Connect to power supply, please use or iginal power adapter
AV	Output for composite video signal, stream audio and video signal to TV or PC display with a 3 in 1 AV cable
OTG	OTG interface. Connect to a PC via an adapter
HDMI	HDMI interface
LAN	Standard RJ45, connect to internet through network cable
USB	Interface for 2.4GHZ USB device
TF	Interface for external memory card

#### 4 Get started

##### 4.1 Installing and setting up the device

The steps described below is for connection through a HDMI cable, if an AV cable is used, please connect it to AV(yellow、 R(red)、 L(white) ports respectively on TV.

- 1.Connect one end of the supplied HDMI cable to the Smart TV Box, the other end to an HDMI port on TV or other display device, and connect the AC power adapter (12V/1A)to the unit and the other end to the power socket.
- 2.Turn on the unit by pressing the power key until the LED indicator lights up.
- 3.Use TV remote control(the signal source key) to select right signal path for the HDMI port connected. There are normally several HDMI ports on a TV, and the connection can be enabled only when the right signal path is selected. If an AV cable is used, please select AV port instead.

Note : The LED indicator lights up constantly after the device is switched on or in operation. In standby state, short press once the power key on the device or on the remote control, the device is switched on and the LED indicator lights up.

>1<

>2<

>3<

## Smart Media Player

### Product Manual

#### Opening Note














- ▲Store the unit away from high temperature, extreme moisture or dust .
- ▲Avoid strong impact or any collision with the product.The unit is not water-proof.
- ▲This product is a high precision electronic product, do not disassemble or clean it with alcohol, thinner and benzene solution.
- ▲The maker reserves the right to upgrade the product, product specification and design is subject to change without prior notice.
- ▲Disclaimer: The maker assumes responsibility for warranty service of the product itself and assume no responsibility for the data loss.
- ▲Pictures contained in this manual are for reference only.

#### 1.Package Contents

Number	Items	Quantity
1	SMART TV BOX	1 PCS
2	HDMI CABLE	1 PCS
3	POWER ADAPTOR	1 PCS
4	INFRARED REMOTE CONTROLLER	1 PCS
5	USER MAUNAL	1 PCS

#### 2.The remote control

This device comes with a remote control,of which most functions can be operated with navigation keys. For some APK, switch the mouse mode by pressing the mouse key before operation.

Icon	Key	Function
	Power	Power on/off/standby
	SETUP	Enter Settings with one key
	Application	One key into the application
	Volume down	Increase the sound
	Volume up	Decrease the sound
	Menu	Menu
	Mouse	Mouse mode switching
	Home Page	Back to home page
	RETURN	Return to last page/operation
	Navigation	Upward. downward. left. right navigation using navigation mode for Enter confirmation
	Muet	Silent mode
	Numbers	Input of numbers
	Backspace	Move backwards and delete the character

Note: The accessories may be slightly different from the list above due to different models specifications and subject to the product purchased.

#### 3. BUTTONS AND PORTS

( Note : The ports and its layout may change for some models, please refer to silkscreen designators on the unit )

Items	Description/Function
DC+	Connect to power supply, please use or iginal power adapter
AV	Output for composite video signal, stream audio and video signal to TV or PC display with a 3 in 1 AV cable
OTG	OTG interface. Connect to a PC via an adapter
HDMI	HDMI interface
LAN	Standard RJ45, connect to internet through network cable
USB	Interface for 2.4GHZ USB device
TF	Interface for external memory card

#### 4 Get started

##### 4.1 Installing and setting up the device

The steps described below is for connection through a HDMI cable, if an AV cable is used, please connect it to AV(yellow、 R(red)、 L(white) ports respectively on TV.

- 1.Connect one end of the supplied HDMI cable to the Smart TV Box, the other end to an HDMI port on TV or other display device, and connect the AC power adapter (12V/1A)to the unit and the other end to the power socket.
- 2.Turn on the unit by pressing the power key until the LED indicator lights up.
- 3.Use TV remote control(the signal source key) to select right signal path for the HDMI port connected. There are normally several HDMI ports on a TV, and the connection can be enabled only when the right signal path is selected. If an AV cable is used, please select AV port instead.

Note : The LED indicator lights up constantly after the device is switched on or in operation. In standby state, short press once the power key on the device or on the remote control, the device is switched on and the LED indicator lights up.

>1<

>2<

>3<

## Smart Media Player

### Product Manual

#### Opening Note














- ▲Store the unit away from high temperature, extreme moisture or dust .
- ▲Avoid strong impact or any collision with the product.The unit is not water-proof.
- ▲This product is a high precision electronic product, do not disassemble or clean it with alcohol, thinner and benzene solution.
- ▲The maker reserves the right to upgrade the product, product specification and design is subject to change without prior notice.
- ▲Disclaimer: The maker assumes responsibility for warranty service of the product itself and assume no responsibility for the data loss.
- ▲Pictures contained in this manual are for reference only.

#### 1.Package Contents

Number	Items	Quantity
1	SMART TV BOX	1 PCS
2	HDMI CABLE	1 PCS
3	POWER ADAPTOR	1 PCS
4	INFRARED REMOTE CONTROLLER	1 PCS
5	USER MAUNAL	1 PCS

#### 2.The remote control

This device comes with a remote control,of which most functions can be operated with navigation keys. For some APK, switch the mouse mode by pressing the mouse key before operation.

Icon	Key	Function
	Power	Power on/off/standby
	SETUP	Enter Settings with one key
	Application	One key into the application
	Volume down	Increase the sound
	Volume up	Decrease the sound
	Menu	Menu
	Mouse	Mouse mode switching
	Home Page	Back to home page
	RETURN	Return to last page/operation
	Navigation	Upward. downward. left. right navigation using navigation mode for Enter confirmation
	Muet	Silent mode
	Numbers	Input of numbers
	Backspace	Move backwards and delete the character

Note: The accessories may be slightly different from the list above due to different models specifications and subject to the product purchased.

#### 3. BUTTONS AND PORTS

( Note : The ports and its layout may change for some models, please refer to silkscreen designators on the unit )

Items	Description/Function
DC+	Connect to power supply, please use or iginal power adapter
AV	Output for composite video signal, stream audio and video signal to TV or PC display with a 3 in 1 AV cable
OTG	OTG interface. Connect to a PC via an adapter
HDMI	HDMI interface
LAN	Standard RJ45, connect to internet through network cable
USB	Interface for 2.4GHZ USB device
TF	Interface for external memory card

#### 4 Get started

##### 4.1 Installing and setting up the device

The steps described below is for connection through a HDMI cable, if an AV cable is used, please connect it to AV(yellow、 R(red)、 L(white) ports respectively on TV.

- 1.Connect one end of the supplied HDMI cable to the Smart TV Box, the other end to an HDMI port on TV or other display device, and connect the AC power adapter (12V/1A)to the unit and the other end to the power socket.
- 2.Turn on the unit by pressing the power key until the LED indicator lights up.
- 3.Use TV remote control(the signal source key) to select right signal path for the HDMI port connected. There are normally several HDMI ports on a TV, and the connection can be enabled only when the right signal path is selected. If an AV cable is used, please select AV port instead.

Note : The LED indicator lights up constantly after the device is switched on or in operation. In standby state, short press once the power key on the device or on the remote control, the device is switched on and the LED indicator lights up.

>1<

>2<

 
>3<

4.2 Home interface

Plug the device into power socket, long press power key until LED indicator lights up, and after 3-5 seconds, the TV display shows starting up. After a while, home interface pop up, and click on APK listing to show icons of all installed APK on the device.

4.3 Language and input method

Go to SettingLanguage and input, select different languages here

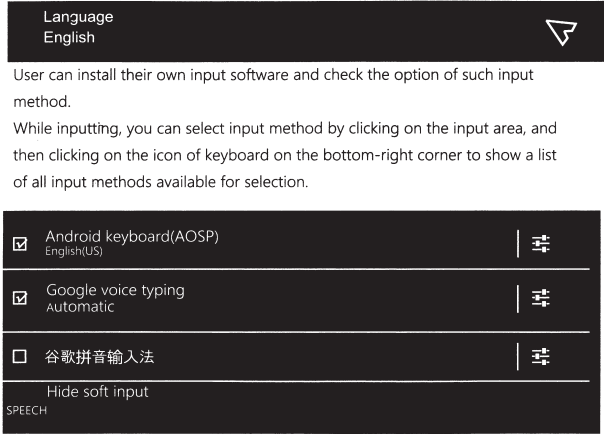

4.4 Connect to internet

Wireless connection

Go to Setting,Wi-Fi, click on the desired wifi hot spot, and input password of the wireless router for connection(A wifi icon pops up on the status bar after connection )

Note : Please ensure that the wireless router has access to external internet.

 
>4<

4.2 Home interface

Plug the device into power socket, long press power key until LED indicator lights up, and after 3-5 seconds, the TV display shows starting up. After a while, home interface pop up, and click on APK listing to show icons of all installed APK on the device.

4.3 Language and input method

Go to SettingLanguage and input, select different languages here

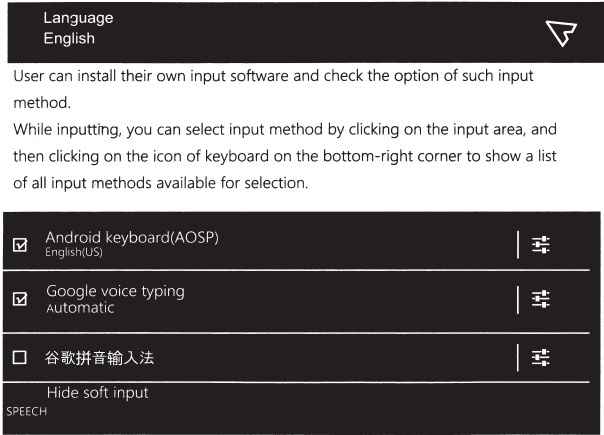

4.4 Connect to internet

Wireless connection

Go to Setting,Wi-Fi, click on the desired wifi hot spot, and input password of the wireless router for connection(A wifi icon pops up on the status bar after connection )

Note : Please ensure that the wireless router has access to external internet.

 
>4<

4.2 Home interface

Plug the device into power socket, long press power key until LED indicator lights up, and after 3-5 seconds, the TV display shows starting up. After a while, home interface pop up, and click on APK listing to show icons of all installed APK on the device.

4.3 Language and input method

Go to SettingLanguage and input, select different languages here

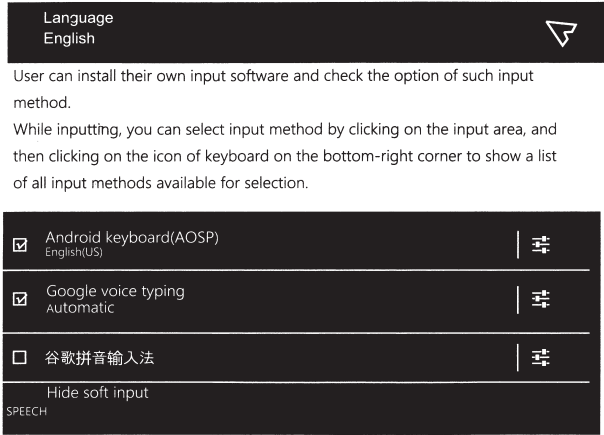

4.4 Connect to internet

Wireless connection

Go to Setting,Wi-Fi, click on the desired wifi hot spot, and input password of the wireless router for connection(A wifi icon pops up on the status bar after connection )

Note : Please ensure that the wireless router has access to external internet.

>4<

Wired connection

a)Plug one end of the network cable in the LAN port on the device, and the other end to the router.

b) Go to SettingTurn on Ethernet, after connection, an icon of cabled connection appears on bottom-right corner of the status bar.

ADSL Dial up ( connect with ADSL MODEM )

a)Plug one end of the network cable in the LAN port on the device, and the other end to the ADSL modem.

b)Observe the behaviour of LAN indicators, the green one lights up constantly and the orange one lights up flickeringly.

c)Go to Setting- Network -PPPOE dial up, input user name and password and press OK key for connection.

4.5 Install/uninstall APK

4.5.1 APK from unknown source

Please use Google market as the source for APK as much as possible, when installing APK from other sources, go to settingsecuritycheck the option of unknown source.


4.5.2 Install APK

Install from Local documents :

a) Copy downloaded APK to USB flash drive, hard drive or SD card etc , and connect to the TV box.

b) Go to"APK installing widget" , select the desired APK , and click on install ( dependent on memory device connected)

Install from internet :

Option 1 : Download APK from internet APK stores(files end with .APK) , and click on install ( if the downloading is performed through a browser, the status bar will show an icon of finish  after the download , click on install ) .

Option 2 : Install the APK of APK market first , and then download APK from the market directly.

>5<

Wired connection

a)Plug one end of the network cable in the LAN port on the device, and the other end to the router.

b) Go to SettingTurn on Ethernet, after connection, an icon of cabled connection appears on bottom-right corner of the status bar.

ADSL Dial up ( connect with ADSL MODEM )

a)Plug one end of the network cable in the LAN port on the device, and the other end to the ADSL modem.

b)Observe the behaviour of LAN indicators, the green one lights up constantly and the orange one lights up flickeringly.

c)Go to Setting- Network -PPPOE dial up, input user name and password and press OK key for connection.

4.5 Install/uninstall APK

4.5.1 APK from unknown source

Please use Google market as the source for APK as much as possible, when installing APK from other sources, go to settingsecuritycheck the option of unknown source.


4.5.2 Install APK

Install from Local documents :

a) Copy downloaded APK to USB flash drive, hard drive or SD card etc , and connect to the TV box.

b) Go to"APK installing widget" , select the desired APK , and click on install ( dependent on memory device connected)

Install from internet :

Option 1 : Download APK from internet APK stores(files end with .APK) , and click on install ( if the downloading is performed through a browser, the status bar will show an icon of finish  after the download , click on install ) .

Option 2 : Install the APK of APK market first , and then download APK from the market directly.

>5<

Wired connection

a)Plug one end of the network cable in the LAN port on the device, and the other end to the router.

b) Go to SettingTurn on Ethernet, after connection, an icon of cabled connection appears on bottom-right corner of the status bar.

ADSL Dial up ( connect with ADSL MODEM )

a)Plug one end of the network cable in the LAN port on the device, and the other end to the ADSL modem.

b)Observe the behaviour of LAN indicators, the green one lights up constantly and the orange one lights up flickeringly.

c)Go to Setting- Network -PPPOE dial up, input user name and password and press OK key for connection.

4.5 Install/uninstall APK

4.5.1 APK from unknown source

Please use Google market as the source for APK as much as possible, when installing APK from other sources, go to settingsecuritycheck the option of unknown source.

4.5.2 Install APK

Install from Local documents :

a) Copy downloaded APK to USB flash drive, hard drive or SD card etc , and connect to the TV box.

b) Go to"APK installing widget" , select the desired APK , and click on install ( dependent on memory device connected)

Install from internet :

Option 1 : Download APK from internet APK stores(files end with .APK) , and click on install ( if the downloading is performed through a browser, the status bar will show an icon of finish  after the download , click on install ) .

Option 2 : Install the APK of APK market first , and then download APK from the market directly.

>5<

4.5.3 Uninstall APK

- a)Go to settingAPKManage APK , a list of installed APK pops up.
- b)Click on the icon of the APK to show a delete box.
- c)Click on "uninstall"to remove the APK.

5 Trouble-shooting

1.Question : What to do if a screen problem appears, such as black screen, splash screen etc.

Answer : Check if the TV is powered on and if the correct signal route is enabled. If a HDMI cable is plugged into HDMI port 2 on TV, the signal route for this port should be enabled and also make sure that the terminal of HDMI cable is good.

2.Question : There is no access to internet after connection with wireless router.

Answer : Check if the wireless router works well ;

3.Question : A problem of jamming or stagnant video appears while playing online video.

Answer : This is due to a limited internet access speed and it is recommended that a dedicated cable is used for internet connection.

4.Question : There is no sound for AV output ?

Answer : Please check if the sound is muted or turned on on TV, and if there is sound output when the video is played on a computer. Check also if the audio cable (white and red strings) is plugged into audio input port on TV.

5.Question:The multimedia files are not found on SD card or USB flash drive ?

Answer : Please check if the connection with them is good.

6.Question : The device is stuck on boot screen.

Answer : The device has crashed and if the remote control does not work, just disconnect the power and reboot the device.

Please contact your seller if you have any other questions.

>6<

4.5.3 Uninstall APK

- a)Go to settingAPKManage APK , a list of installed APK pops up.
- b)Click on the icon of the APK to show a delete box.
- c)Click on "uninstall"to remove the APK.

5 Trouble-shooting

1.Question : What to do if a screen problem appears, such as black screen, splash screen etc.

Answer : Check if the TV is powered on and if the correct signal route is enabled. If a HDMI cable is plugged into HDMI port 2 on TV, the signal route for this port should be enabled and also make sure that the terminal of HDMI cable is good.

2.Question : There is no access to internet after connection with wireless router.

Answer : Check if the wireless router works well ;

3.Question : A problem of jamming or stagnant video appears while playing online video.

Answer : This is due to a limited internet access speed and it is recommended that a dedicated cable is used for internet connection.

4.Question : There is no sound for AV output ?

Answer : Please check if the sound is muted or turned on on TV, and if there is sound output when the video is played on a computer. Check also if the audio cable (white and red strings) is plugged into audio input port on TV.

5.Question:The multimedia files are not found on SD card or USB flash drive ?

Answer : Please check if the connection with them is good.

6.Question : The device is stuck on boot screen.

Answer : The device has crashed and if the remote control does not work, just disconnect the power and reboot the device.

Please contact your seller if you have any other questions.

>6<

4.5.3 Uninstall APK

- a)Go to settingAPKManage APK , a list of installed APK pops up.
- b)Click on the icon of the APK to show a delete box.
- c)Click on "uninstall"to remove the APK.

5 Trouble-shooting

1.Question : What to do if a screen problem appears, such as black screen, splash screen etc.

Answer : Check if the TV is powered on and if the correct signal route is enabled. If a HDMI cable is plugged into HDMI port 2 on TV, the signal route for this port should be enabled and also make sure that the terminal of HDMI cable is good.

2.Question : There is no access to internet after connection with wireless router.

Answer : Check if the wireless router works well ;

3.Question : A problem of jamming or stagnant video appears while playing online video.

Answer : This is due to a limited internet access speed and it is recommended that a dedicated cable is used for internet connection.

4.Question : There is no sound for AV output ?

Answer : Please check if the sound is muted or turned on on TV, and if there is sound output when the video is played on a computer. Check also if the audio cable (white and red strings) is plugged into audio input port on TV.

5.Question:The multimedia files are not found on SD card or USB flash drive ?

Answer : Please check if the connection with them is good.

6.Question : The device is stuck on boot screen.

Answer : The device has crashed and if the remote control does not work, just disconnect the power and reboot the device.

Please contact your seller if you have any other questions.

>6<

**FCC Warning Statement:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **FCC Radiation Exposure Statement**

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co - located for operating in conjunction with any other antenna or transmitter.