

Specifications

Materialien: Silikon, ABS Betriebsgeräusch: ≤60dB
Nutzungsdauer: >50 Minuten Ladezeit: 120 Minuten
Wasserdrückigkeitsgrad: IPX-6
Package includes: Dildo, Remote control, Instructions, Charging cable

Offline Usage Steps

- ◆ Hold the power button for 2 seconds to turn the device on and enter standby mode.
- ◆ Power On/Off Button: In standby mode, click once to activate the first vibration level; click again to switch to the next level; press and hold to turn off the device. After shutdown, you can manually reset it within one minute by pressing the power button. (The device is started by long-pressing the power button. Short presses cycle through the 3 modes, 9 vibration levels, and a double-click toggles the heating function on/off.)
- ◆ Remote control power button: In standby mode, click once to start the first vibration level, click again to switch to the next level, hold for a long time to return to standby mode
- ◆ Remote control vibration button: In standby mode, click once to start the first vibration level, click again to switch to the next level, hold for a long time to deactivate the vibration function.
- ◆ Remote control heat button: Click the heat button to activate the heat function, click again to deactivate the heat function.
- ◆ After 30 minutes of inactivity, the device will automatically turn off.

◆ Please charge the massager completely before use (the display blinks during the charging process, and when the charging is complete, the display lights up continuously) to avoid compatibility issues.

Cleaning Instructions

- ◆ After using the "toy," it is advisable to be cautious due to a large amount of secretions and residues of dirt. If not cleaned promptly, it can lead to bacterial growth. Please clean your "toy" as soon as possible after use.
- ◆ For cleaning, you can use warm water and soap. It is recommended to use a special cleaning agent for erotic toys, disinfectant, or 75% alcohol to disinfect (long-term use of alcohol is not recommended as it can damage the surface of the toy and accelerate aging).
- ◆ Drying: After rinsing, it is recommended to wipe it with a soft cloth or high-quality paper towel. Let it air dry after wiping and avoid direct sunlight.
- ◆ Store it in a dust-free place and avoid contact with other materials.

Safety Precautions

As a close companion for our customers, it is both our responsibility and yours to use this massager safely and healthily.

- ◆ This product is intended for personal use only. Please do not share it with others to protect your health.
- ◆ The massager has various vibration frequencies to meet the different needs of users. If you feel uncomfortable or have an allergic reaction, please stop using it immediately.
- ◆ It is recommended to use lubricant before using the massager to achieve better results.
- ◆ Do not use the massager if the head is not smooth enough or has sharp edges.
- ◆ If discomfort occurs during use, stop using it immediately.
- ◆ Store the massager and its parts in a place that is inaccessible to children and pets. If a child or pet swallows a part, please seek medical attention immediately.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement , the device can be used in portable exposure condition without restriction