G90说明书

尺寸: 110mm x 160mm

80g书写纸,黑白印刷,折页,双面印

料号: 416-00G90091-W0R



IMPORTANT

Please read this manual carefully before operating the soundbar, keep this user manual for further reference.

Model: G90

Important Safety Instructions

Read these Instructions.
 Keep these Instructions.
 Heed all Warnings.

4. Follow all instructions. 5. Do not use this apparatus near water.6. Clean only with a dry cloth.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other appara-tus (including amplifiers) that produce heat. 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10.Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by

the manufacturer.

12. Unplug this apparatus during lightning storms or when unused for long periods of time.

13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Special note: When placing your unit on a lacquered or natural fihish, protect your furniture with a cloth or other protective material.

Additional Warnings:

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus. L'appareil ne doit pas etre expose aux ecoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit etre place sur l'objet.

Caution marking is located at the rear or bottom of the apparatus. Attention marquage est situé sur le paneau arriere ou inferieur de l'unite.

The marking information is located at the rear or bottom of apparatus. Le marquage est situe sur le paneau arriere ou inferieur de l'unite.

FCC Warnings

WARNING:Changes or modifications to this unit not expressly approved by the party responsible for compli-ance could void the user's authority to operate the

This device complies with part 15 of the ECC Rules Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


comply with the limits for a Class B digital device, pursuar to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interfer ence in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and


· Connect the equipment into an outlet on a circuit Consult the dealer or an experienced radio/TV hnician for help. FCCRadiationExposureStatement This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your

This symbol indicates that this product hazardous mains voltage and user accessible parts.

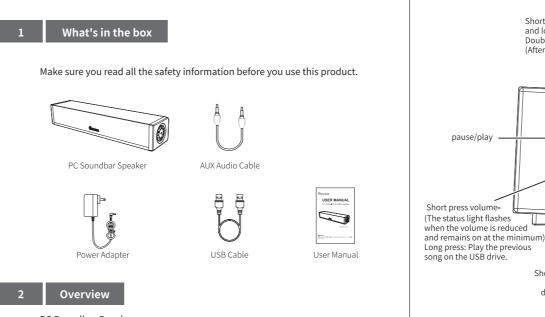

RGB Indicator

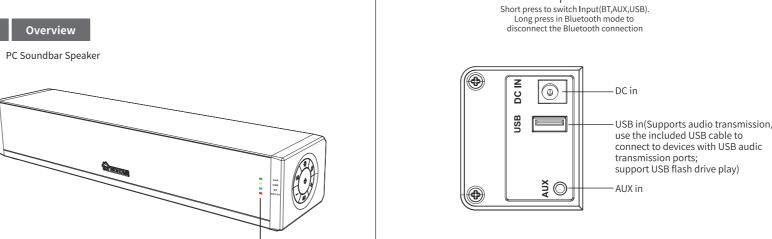

Short press to turn on the light/switch the light color, Sound Bar LED Indicator and long press to turn off the light.
Double-click to switch to the rhythm mode

> Press to change the EQ mode EQ1 red light(MUSIC) EQ2 blue light(MOVIE)

EQ3 green light(GAME)

Press to switch the

hort press volume+

when the volume is increased and remains

on at maximum)

(The status light flashes


Long press: Play the next song on the USB drive.


power on/off. (Long press to reset the speaker)

(After turning on the light, short press to switch the light color)


The LED indicator on the sound bar gives you information about the status of the


AUX Green light BT Blue light Red light USB EQ1 Yellow light EQ2 Blue light EQ3 Green light

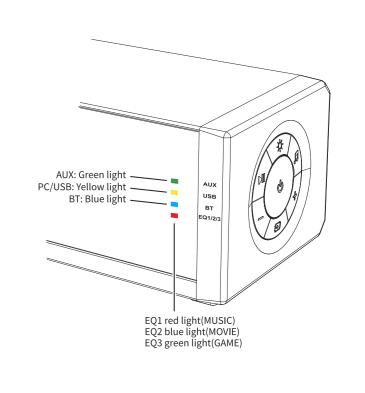

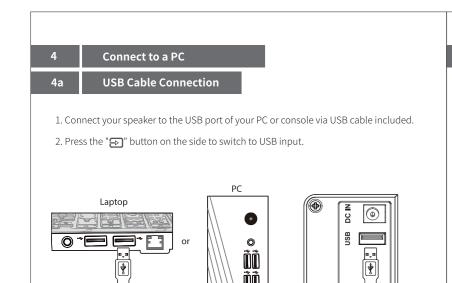


Tips: Connecting your speaker's USB port to a PC or laptop via a Type-C port for sound output is not supported.

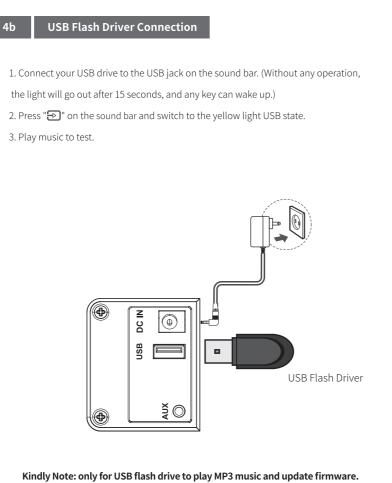

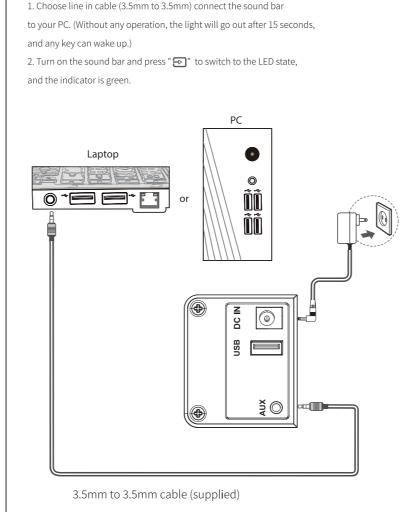

4c AUX

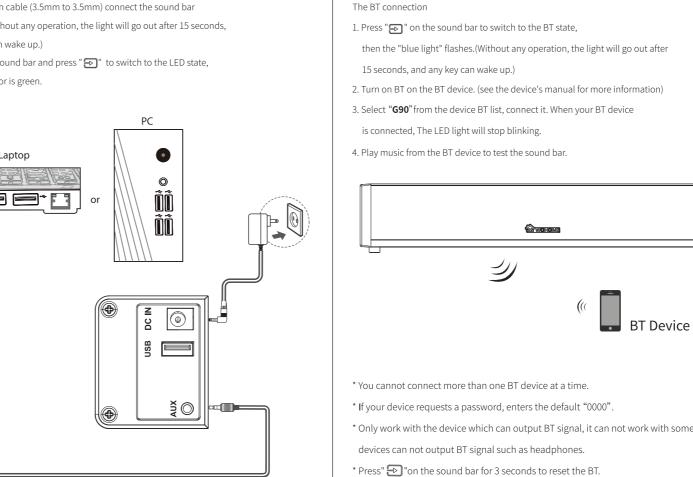

.
.
F
Pro
6
÷
l
For

 * Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.

when the connection fails or "G90" cannot be found in the device list.

Model	G90
Power Supply	DC15V
Speaker	2.25" x3
Volume Level	0~50
BT Version	5.3
Distortion	<1%
Product Weight	1.4 kg
Product Dimension	405(L)x 90(D)x 75(H) mm

RGB Lights

Color Change Button:

Click: White light -> Purple light -> Blue light -> Orange light -> Pink light -> colorful breathing light -> colorful flow light

(The lighting effects in this flowing light mode gradually change from the middle to both sides) and switch in a loop successively. **Double-click:** Rhythm 1 (run from both ends to the middle)

> Rhythm 2 (run from the middle to both ends) > Turn off Rhythm in a loop

r more information, please follow us:

www.wohomeshop.com Email: support@wohomeshop.com

NOTE: One year warranty, 45 days money back guarantee, lifetime technical support, 100% satisfaction service, please feel free to contact us for any questions.