



148.5mm


USAGE INTRODUCTION HANDBOOK

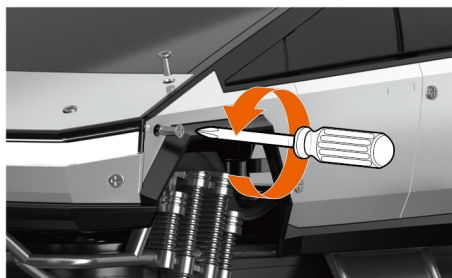

Unscrew the screw

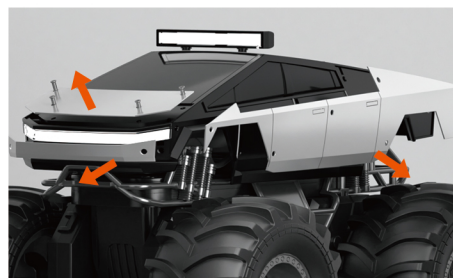

Remove the alloy steel plate

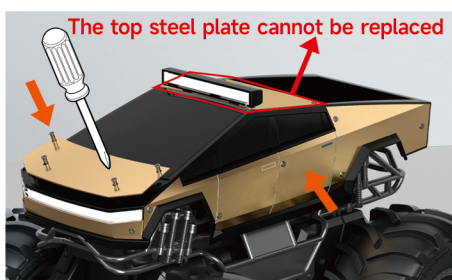

Replace the steel plate and tighten the screws back

6+
AGES



HIGH SPEED
MOTOR



LIGHT

2.4
GHZ

4WD




**PREVENT CHILDREN
FROM SWALLOWING**

⚠ Precautions



Do not use quick charge

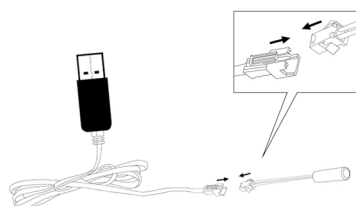

POWER BANK



COMPUTER USB



LOW POWER CHARGER

The battery of this product can be recharged using the above three methods. Please refer to the above diagram for the USB charging cable and battery installation method.

INTRODUCTION AND PRECAUTIONS FOR BATTERY INSTALLATION


1. Remote control car using 1 section of 3.7V (1200mAh) rechargeable lithium battery. The remote control uses 2 x 1.5V AA non-rechargeable batteries.
2. Only use the same or the same battery as the recommended battery.
3. Please pay attention to the polarity when installing or replacing the battery, and the battery should not be short-circuited.
4. Non-rechargeable batteries are not rechargeable.
5. Do not mix the old and new batteries or different types of batteries.
6. Remove the exhausted batteries from the toy.
7. The power terminal should not be short-circuited.
8. Rechargeable batteries can only be charged under adult supervision; do not let children charge themselves. Rechargeable batteries should be removed from the toy before charging.
9. Toys cannot be connected to more than the recommended number of power sources.
10. USB power cable must be regularly checked for damage to its wires, plugs, shells and other components, if found damaged should stop using until the repair is complete.
11. Products can only use the recommended USB power cable; the USB power cable is not a toy.
12. In the power supply process, the USB power cable will appear slightly warm, a normal phenomenon.
13. USB power cable can only be connected to a charger with an output voltage of 5.0V.

USAGE INTRODUCTION HANDBOOK

REMOTE CONTROL USAGE INSTRUCTIONS

FORWARD:
A+B CONTROL LEVER UP

BACKWARD:
A+B CONTROL LEVER DOWN

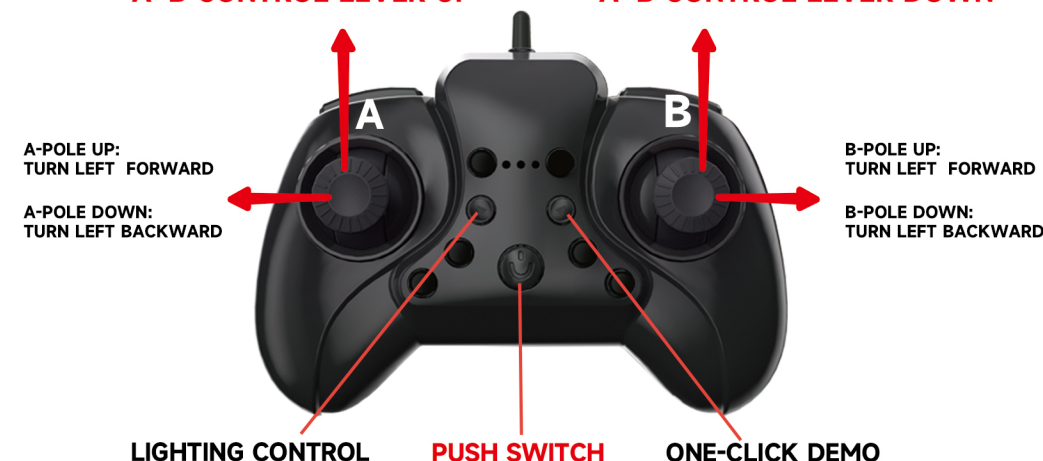

Amphibious gameplay, allowing for both land travel and free navigation in water

REMOTE OPERATION STEPS:


1. Install batteries on the vehicle body, install batteries on the remote control, and turn on the switches separately
2. If the red light on the remote control does not flash, it indicates successful frequency pairing. 60 seconds unpaired will enter sleep mode (You can press any key to re-pair).




THE RED LIGHT IS ALWAYS ON (PAIRING IS SUCCESSFUL)
RED LIGHT FLASHING (PAIRING FAILED)




Align the lock buckle with the slot
Both sides are like this

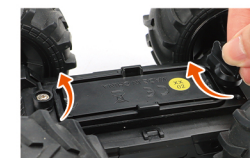

Rotate the locking buckles on both sides to remove the battery cover

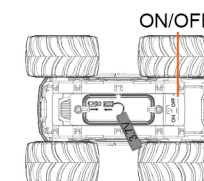

Use 1x3.7V (1200mAh) recharge battery (included)

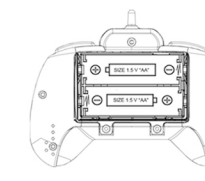

REMOTE CONTROL FUNCTION
Uses 2 "AA" size batteries

210mm

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.