


User's Guide – Wireless Speaker

At a glance (features)

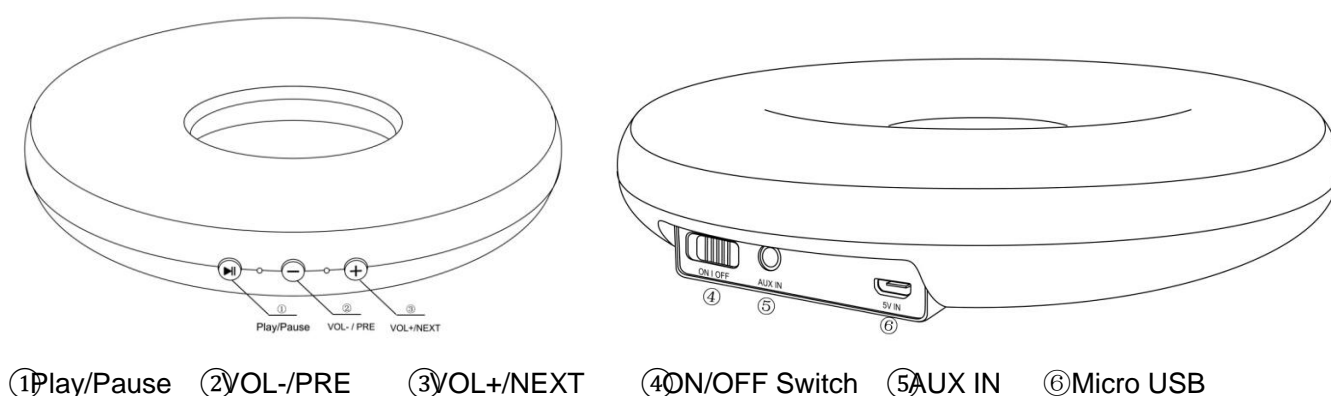

Getting Started

To avoid damage to the rechargeable battery, it is only half charged when supplied. Charge the battery fully before using the speaker for the first time

Charging the rechargeable battery

You can charge the speaker's rechargeable battery via a PC or via the USB mains adapter. We have enclosed a charging cable with a micro USB plug and USB connector for this purpose.

1. Insert the micro USB plug into the **"MICRO USB"** mains connection socket on the speaker.
2. Insert the USB connector into a USB port on your computer or into the mains adapter.

The battery charge indicator lights up red while the battery is charging.

Once the battery is fully charged the light will go off.

Battery charge indicator	Status
Red stays lit	Charging
Red goes off	Fully charged

3. Each charging cycle takes approximately 3 hours. The playback time via Bluetooth (depending on volume, environment conditions, ets.) is approximately 6 hours.

▷ You can use the speaker while it is charging.
However, this will increase the charging time

NOTE: When the remaining capacity of the rechargeable battery is down to 20% or less, 3x warning beeps every 10 seconds will alert you to charge the battery at this point.

NOTE: If you are not using the speaker for a prolonged period, please switch it off to protect the rechargeable battery. For this reason the speaker automatically switches to a battery-saving mode after 50 days without use.

To preserve the rechargeable battery's fully capacity for as long as possible, you should discharge and recharge the battery every 3 months, even if you do not use the speaker.

Canceling battery-saving mode

1. To exit the speaker from battery-saving mode, switch it off and then back to on.
2. Then connect the speaker to a USB port on your computer or to the mains adapter using the enclosed USB cable.

Connect with Bluetooth device

The speaker will automatically search available Bluetooth devices or pair with the last used device after being switched on. If you have connected a device by means of the connection socket AUX on the speaker, you only need to switch on speaker and playback device and start playback

NOTE: These instructions for use cannot explain the connecting procedure for every device available on the market. The iPhone is therefore used here as an example of how to connect the speaker.

To establish a new Bluetooth connection the speaker must first be in search mode and there must not be a cable plugged into the AUX connection socket. The speaker will be forced into new Bluetooth pairing mode after press the Play/Pause button briefly twice.

1. Switch on the speaker. Indicator light flashes blue. The speaker is in search mode with double beep.
2. Switch on the iPhone.
3. Activate the Bluetooth function on the iPhone as follows:
 - Open Settings.
 - Select General>Bluetooth
 - Set Bluetooth to On.

The iPhone immediately begins to search for available Bluetooth devices. As soon as any are found, they are displayed.

The speaker is displayed under Devices as XXX and Not Paired or Not Connected.

4. To connect the two devices, tap Not Paired or Not Connected.

The speaker is then displayed on the iPhone screen as Connected. The indicator light lights up blue. You can now begin to play music, for example, using the relevant function on your iPhone and this will be transmitted to the speaker.

NOTE:

- If no device connected and no Bluetooth connection within 10 minutes, the speaker will automatically switch to standby mode. To exit the speaker from standby mode, push the On/Off switch to OFF and then back to ON.
- If you switch the speaker off, after switching it on again you will need to re-establish the Bluetooth connection as described.
- If you connect a device to the AUX connection socket, it will be given priority for playback. Transmission from the Bluetooth device will be completely interrupted, and will not resume until you remove the plug from the AUX socket.
- The speaker will automatically connect to the Bluetooth device within 3 seconds after remove the AUX connection – provided that the device is nearby and switched on and Bluetooth is also activated. The indicator light will briefly go off, then blue as soon as it has found the Bluetooth device.
- AUX connection will always take precedence over incoming calls and Bluetooth playback.
Connection priority:
AUX > Incoming calls > Bluetooth
(iPhone is a trademark register by Apple Computer Inc.)

Bluetooth: Playing music & making a phone call

Playing music

The speaker can play music in all current file formats supported by your playback device. The speaker also supports the new A2DP transmission standard. This standard, which is supported by most current smartphones, has been specially developed for the wireless transmission of stereo audio signals via Bluetooth

NOTE: You might need to activate this type of transmission via A2DP manually on your smartphone. Refer to your smartphone's operation instructions for more information about this.

Depending on the smartphone, the speaker might not be able to initiate the start of music playback. In this case, you should start music playback manually. You will then be able to pause and resume music playback on each device.

To start music playback

- ▷ Open the relevant function on your smartphones and start playback.
Briefly press the Play/Pause button on the speaker.
- ▷ To pause playback part way through, briefly press the Play/Pause button on the speaker
- ▷ To then resume playback, briefly press the Play/Pause button on the speaker again.

Adjusting the Volume

▷ Hold and press + to increase the volume

▷ Hold and press – to decrease the volume

NOTE: In Bluetooth mode, 1X warning beep to be emitted at full volume. DO NOT press + button repeatedly which would lead to shortening the button's life.

Song Change

▷ Briefly press + to select next track

▷ Briefly press – to select previous track

Making a phone call

You can also use the speaker as a hands-free device. It features a built-in microphone.

As soon as a call comes in, music playback is interrupted and you will hear the ringing tone over the loudspeaker.

...To accept an incoming call

Briefly press the Play/Pause button on the speaker.

The call will be transmitted via the speaker. You can use the built-in microphone to talk hands-free.

Accept the call on your smartphone as usual.

You can select on your smartphone whether to transmit the call via the speaker or hold a private conversation directly on the smartphone.

Ending a call

▷ To end a call

...briefly press the Play/Pause button on the speaker.

...or end the call on your smartphone as usual.

Depending on the smartphone, music playback will resume automatically or you will need to start it again as described.

Playback from other devices& making a phone call

Playing music

You can connect mobile playback devices without Bluetooth function directly to the speaker. You will need an audio cable with a 3.5mm jack plug on each end.

NOTE: Please also follow the operating instruction for your mobile device.

1. Connect the headphone output of the mobile device to the AUX IN connection socket on the speaker using a suitable audio cable..
2. Switch on both devices.
3. Start playback on the playback device.
4. Set the maximum volume on the playback device and then adjust the volume using

the +/- buttons on the speaker.

▷ Switch the device off before disconnecting them again.

Making a phone call

When you connect a device to the AUX connection socket, transmission from the Bluetooth device will be completely interrupted (means that you can not hear the incoming call sounds from the speaker).

...To accept an incoming call via the speaker

- Remove the AUX connection first, the speaker will automatically connect to the Bluetooth device within 3 seconds. The indicator light will briefly go off, then blue as soon as it has found the Bluetooth device.

NOTE: the device should be nearby and switched on and Bluetooth is also activated.

- Briefly press the Play/Pause button on the speaker. The call will be transmitted via the speaker. You can use the built-in microphone to talk hands-free.

Ending a call

Refer to the operation instructions in Bluetooth mode for more information about this

Fault / remedy

-
- | | |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| · Not working | <ul style="list-style-type: none">· Is the rechargeable battery flat? Connect the speaker to a USB port on your computer or to the mains adapter.· Is the device in battery-saving mode? Switch the device off and on again. Then connect it to a USB port on your computer or to the mains adapter. |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
-

- | | |
|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| · No Bluetooth connection | <ul style="list-style-type: none">· Is your mobile device Bluetooth-compatible? Refer to the operating instructions for your mobile device.· Has Bluetooth been deactivated on the mobile device? Check the settings. Activate Bluetooth if necessary. Check whether the speaker appears in the list of found devices. If not, press the Bluetooth button again. Place both devices close together. Remove any other radio communication devices from the surrounding area.· Does your mobile device require a password? Check the settings.· Have you switched off the speaker between uses (On/Off switch on OFF)? You will need to reestablish the Bluetooth connection. |
|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
-

- | |
|---------------------|
| · No Music playback |
|---------------------|

- Are there no music files on your mobile device? Check out the relevant media folders. Refer to the operating instructions for the device if necessary.
- Is playback on pause? Briefly press the Bluetooth button on the speaker to resume playback.
- Is the volume on the playback device too low?
- Is there a device connected to AUX? Playback from the Bluetooth device will be paused as soon as you insert a plug into the AUX connection socket.

Specifications

Micro-USB port: 5V , 600mA

Rechargeable Battery: 1X3.7V , 1000mAh

Charging time: Around 3 hours to fully charge
 Battery Life: Around 6 hours of continuous play time
 (varies by volume level & audio content)

Connection: Bluetooth / AUX IN
 Output power: 2.5W x 2
 Frequency: 120Hz – 18KHz

Bluetooth:
 Version: 2.1+EDR
 Range: Max. 10m
 Working temperature: +10°C to +40°C

Contents in Box

- Wireless Speaker
- 3.5mm stereo cable
- Micro-USB cable (for charging speaker)

Safety warnings !

Intended use

The speaker is designed to output sound from mobile playback devices such as smartphones, tablet PCs, laptops, MP3 players and more via a Bluetooth or audio cable connection. The speaker is designed for private use and is not suitable for commercial purposes. Only use the product under moderate climatic conditions.

DANGER to children

- Children are not aware of the risks involved when handling electric appliances incorrectly. Keep children away from the device.
- Keep packing materials away from children

DANGER due to electricity

When you wish to charge the device, please note the following:

- Do not put any containers filled with liquid, such as vases, on or within close proximity of the device. They could topple over and the liquid impair the electrical safety of the device.
- Do not connect the speaker to the mains power supply if it shows visible signs of damage.
- Do not open or remove any part of the speaker casing or insert any objects into openings in the casing. There are live electrical parts inside the casing that could give you an electric shock if they are touched.
- Do not make any modifications to the product.
- You cannot and must not replace the rechargeable battery yourself.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED

BY AN INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING

TO THE INSTRUCTIONS

Attention should be drawn to the environmental aspects of battery disposal

WARNING – risk of burns/fire

- Do not operate the speaker in closed cabinets or on shelves with insufficient ventilation. The speaker must have at least 5 CM free on all sides.
- Do not place any naked sources of fire, such as burning candles, on or in the vicinity of the speaker.

CAUTION – MATERIAL DAMAGE

- Do not immerse the speaker or its mains and connection cables in water or other liquid. Do not use it outdoors or in rooms with high humidity.
- Do not connect the speaker to speaker output of a separate amplifier as this may damage the product.
- Protect the speaker from intense heat such as direct sunlight or heater.
- Keep magnetized ID cards, phone and credit cards, audio tapes, watches and anything similar away from the immediate vicinity of the speaker as they could be damaged by the integrated magnets.

- Never use caustic chemicals or aggressive or abrasive cleaning products for cleaning. Only use a soft, lint-free cloth.
- Some lacquers, synthetic substances or furniture polish may react adversely to the material of the non-slip feet and soften them. To avoid unwanted traces on furniture, place a non-slip mat under the product.
- If the speaker is taken from a cold to a warm location, condensation can form inside the device. Leave it switched off for a few hours.

CORRECT DISPOSAL OF THE PRODUCT



(Waste electrical and electronic equipment).

(Applicable in the European Union and in countries with selective waste collection systems).

The presence of this symbol on the product or on its accessories or informative material means that at the end of their useful lives neither the product nor its electronic accessories (charger, cables, etc.) should be disposed of together with other domestic waste. To avoid possible damage to the environment or to human health, separate these products from other types of waste, and re-cycle them correctly. This promotes the sustainable re-use of material resources. Private users can contact the establishment where they acquired the product or the appropriate local authorities to obtain information about how and where to take it for ecological and safe re-cycling. Business users can contact their supplier and consult the terms and conditions of the purchase contract. Neither this product nor its electronic accessories should be disposed of together with other types of business waste products.

FCC Statements:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.



EU Declaration of Conformity

according to the Radio Equipment and
Telecommunications Terminal Equipment Directive
1999/5/EC

For the following equipment

Product : Wireless Speaker
Type Designation/Trademark: WINLITE; I.SOUND
Manufacturer's Name : WINLITE INTERNATIONAL (HK) LTD.
Manufacturer's Address : Unit 1401, Tower A, Tian An Cyber Times,
Shennan Avenue, Futian district, Shenzhen,
PEOPLE'S REPUBLIC OF CHINA ZIP: 518048

is herewith confirmed to comply with the requirements set out in the Council
Directive 1999/5/EC for radio equipment and telecommunications terminal equipment.
For the evaluation of the compliance with this Directive, the following standards
were applied:

Safety: EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013

Health: EN 62479:2010

EMC : EN 55022:2010/AC: 2011

EN 55024:2010

EN 301 489-1 V 1.9.2(2011-09)

EN 301 489-17 V2.2.1(2012-09)

Radio: EN 300 328 V1.8.1 (2012-06)

Responsible for making this declaration is the:

☒ Manufacturer Authorised representative established within the EU

Person responsible for making this declaration

Name, Surname : Yamma

Position/Title : Sales

January 9, 2015
(Place) (Date)

(Company stamp and legal signature)

