

Proper handling of nanoSIM cards **Dual SIM**

This document explains installation and removal of nanoSIM cards into and from the transceiver.


This document contains warnings and other important information. Please be sure to read it before attempting the procedures.

Warning for handling the nanoSIM cards.

- To avoid damage from static discharge, touch a metal object such as a door knob or a metal window sash to remove any static electricity that may be accumulated in your body before handling the nanoSIM cards.
- Never directly touch the IC part (metal sections) of the nanoSIM, or the contacts in the transceiver that connect to the nanoSIM card, with your finger.
- Observe the proper direction when inserting the card.
- Always carefully insert and remove the card.
- Do not apply too much force against the slot cover when the nanoSIM card is removed or exchanged. If it is bent or damaged, a nanoSIM card cannot be used.

① If only one nanoSIM card is used, insert it to the SIM1 slot.

nanoSIM size (4FF)
(ETSI TS 102 221)

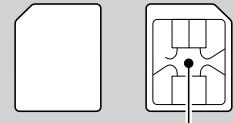

IC (metal sections)


■ How to insert the nanoSIM card

- 1** Upside down the transceiver and remove the 4 screws, then remove the bottom cover.


- 2** Open the slot cover by carefully sliding it in the direction of the arrow. (①)
Carefully lift the slot cover. (②)

① Do not apply too much force against the slot cover.

② Do not touch metal contacts of the nanoSIM card with your finger.

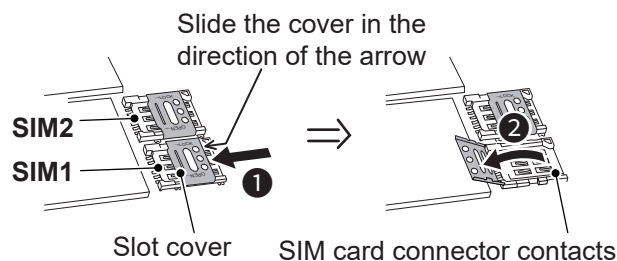


- 3** Observe the angled corner of the nanoSIM card and insert it as shown below.

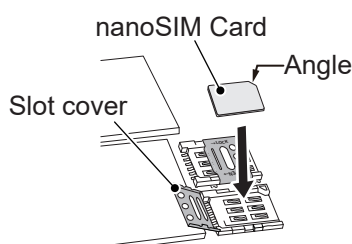

- 4** Close the slot cover and slide it in the direction of the arrow until it locks.

① Do not apply too much force against the slot cover.

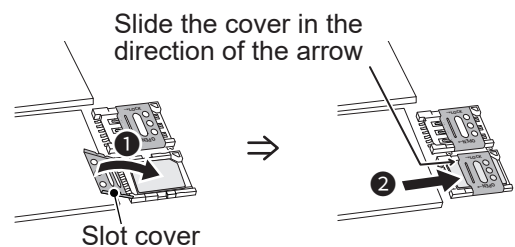

- 5** If you insert 2 nanoSIM cards, repeat step 2 ~ 4.


- 6** Attach the bottom cover that was removed in step 1, and tightened it with the 4 screws.

■ How to exchange the nanoSIM card


- 1 Turn OFF the transceiver, and then remove the power cable.

- 2 Upside down the transceiver and remove the 4 screws, then remove the bottom cover.


- 3 Open the slot cover by carefully sliding it in the direction of the arrow. (1)
Carefully lift up the slot cover. (2)
① Do not apply too much force against the slot cover.
① Do not touch the metal contacts of the nanoSIM card with your finger.

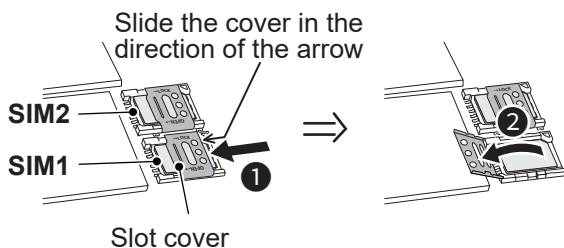


- 4 Carefully remove the nanoSIM card from the slot.

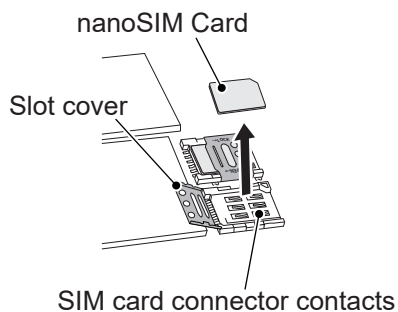

- 5 Observe the angled corner of the nanoSIM card and insert the new nanoSIM card, as shown below.

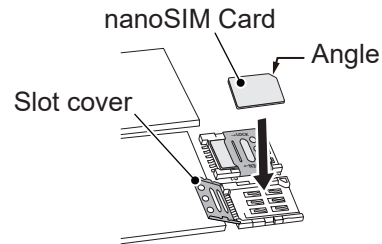

- 6 Close the slot cover and slide it in the direction of the arrow until it locks.
① Do not apply too much force against the slot cover.

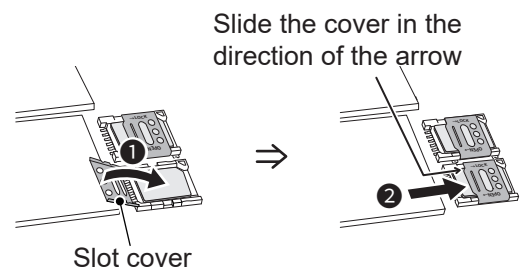

- 7 Attach the bottom cover that was removed in step 2, and tightenned it with the 4 screws.

- 8 Connect the power cable that was removed in the first procedure.
① Confirm that the power cable is properly connected.