



Disassembly Picture for DSX-S310BTX

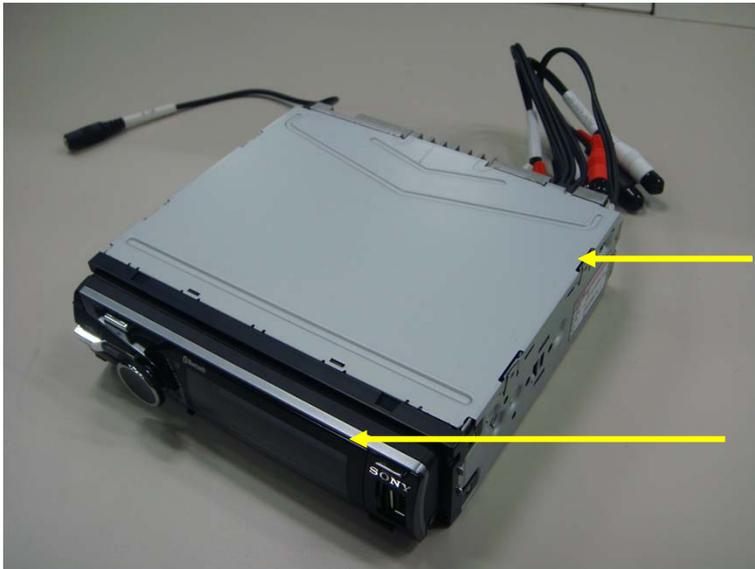

MAIN ASSY

Panel Front ASSY

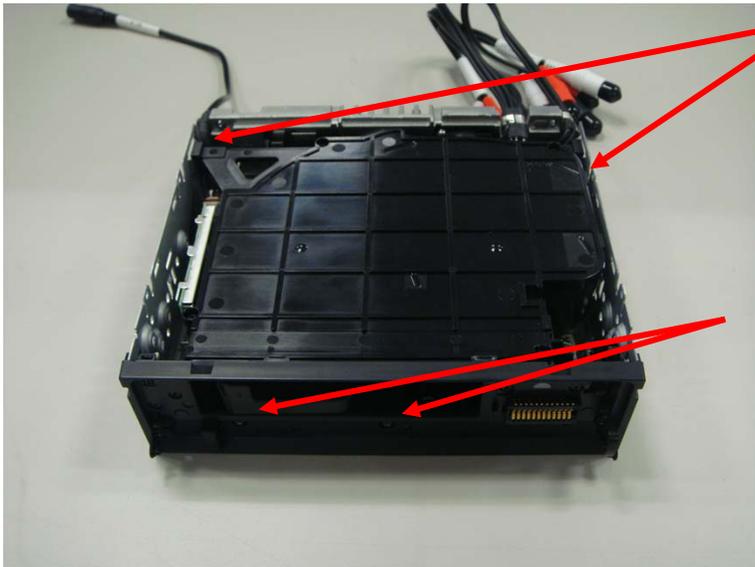


Screw (2 portion For Tray Unit)

Screw (2 portion For Tray Unit)




Panel Sub ASSY

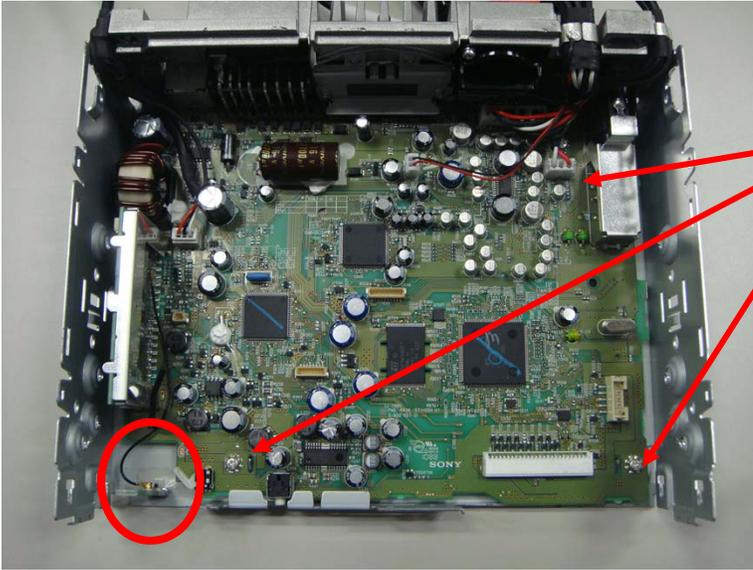

Screw (3 portion For For MAIN PWB)

Screw (1 portion Antenna)

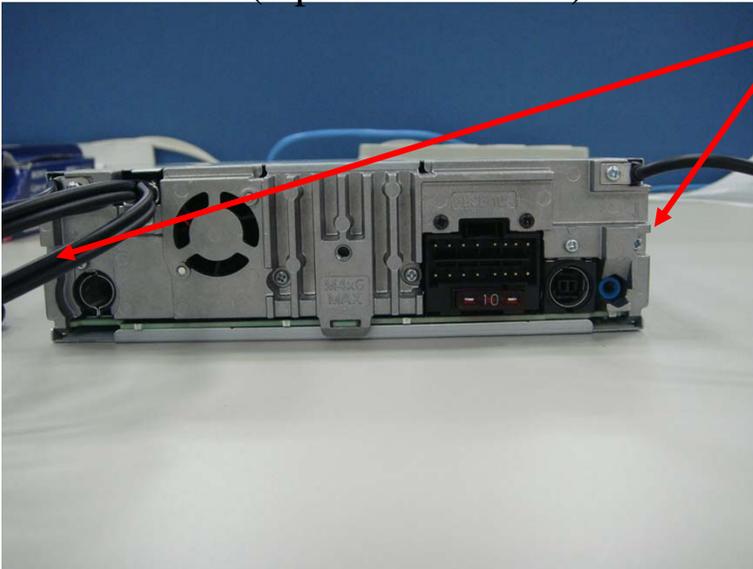



Screw (2 portion For For Heatsink)




Picture of content (1/2)



Picture of content (2/2)

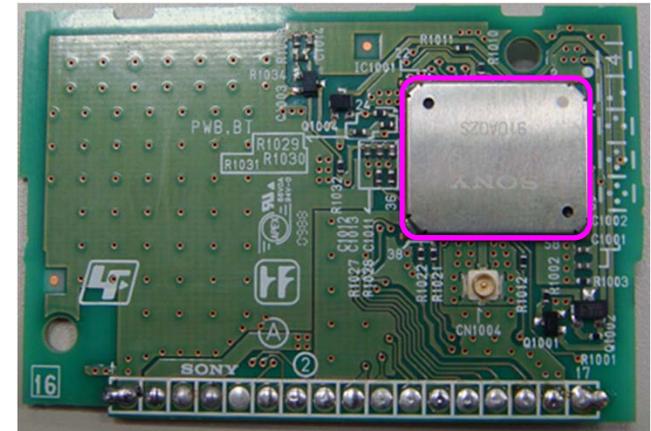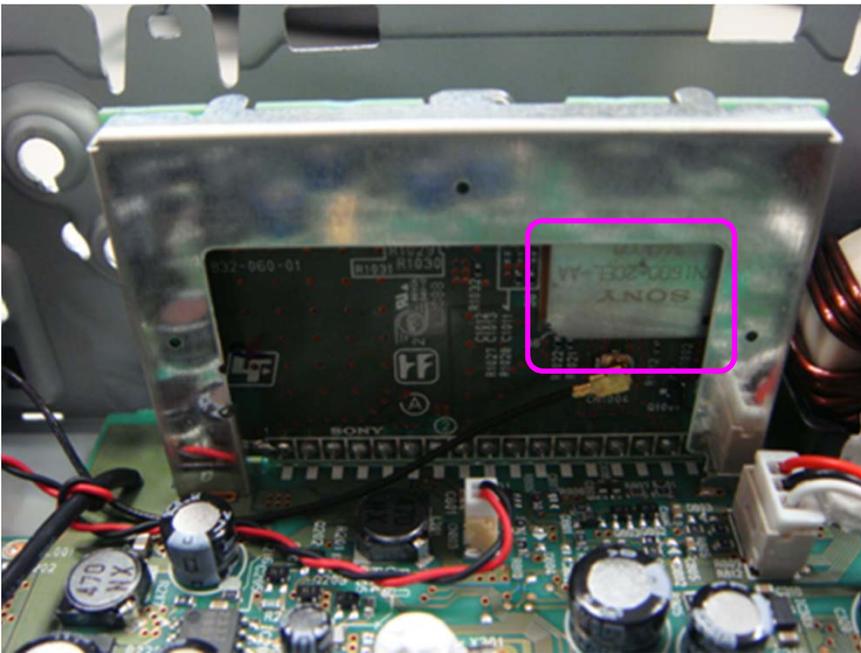

Side-A

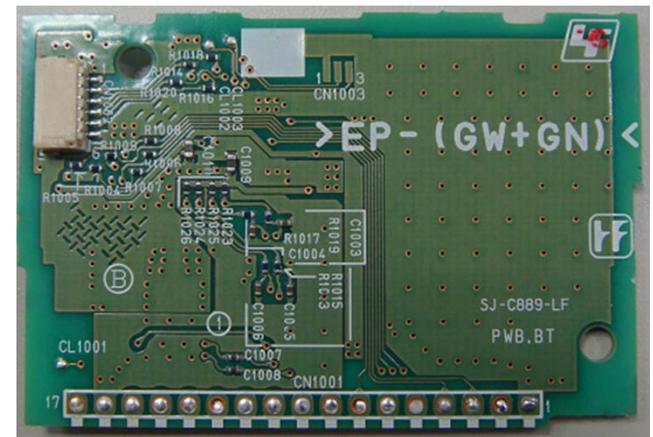

Side-B


Picture of Bluetooth Transmitter



TOP




Inside

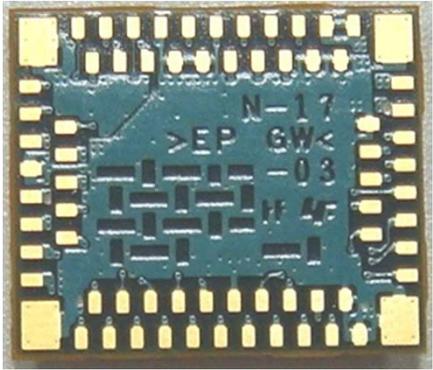

Bottom


ET101 Shield case

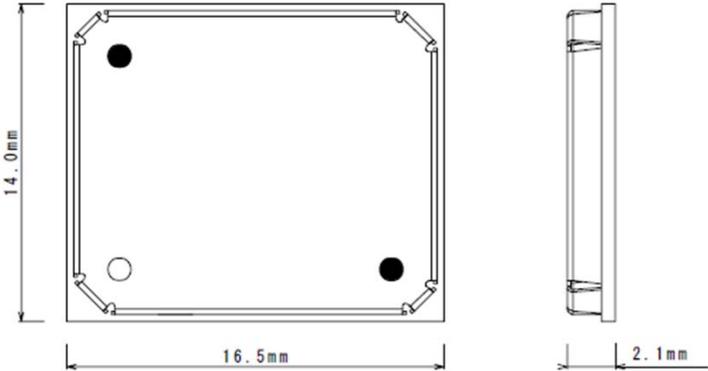


Position of Antenna



Photograph of Antenna

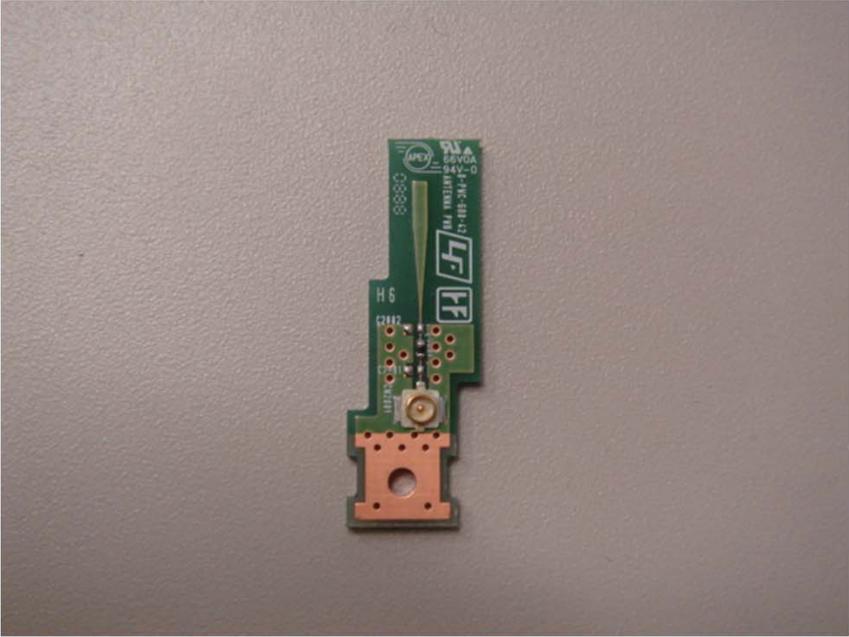

A side

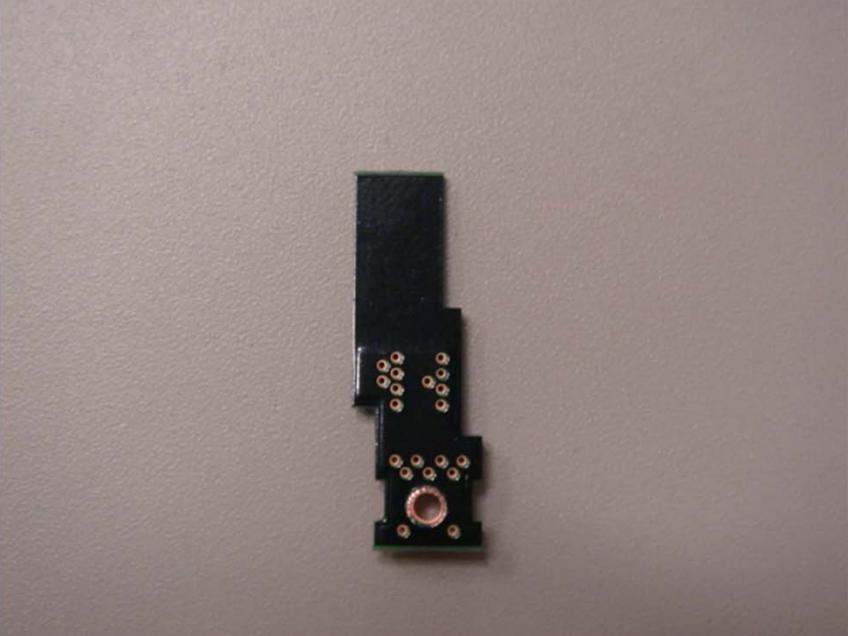

B side