

**Figure 9**  
General Appearance of the EUT




**Figure 10**  
Inside Configuration of the EUT




**Figure 11**  
Inside Configuration of the EUT




**Figure 12**  
Inside Configuration of the EUT

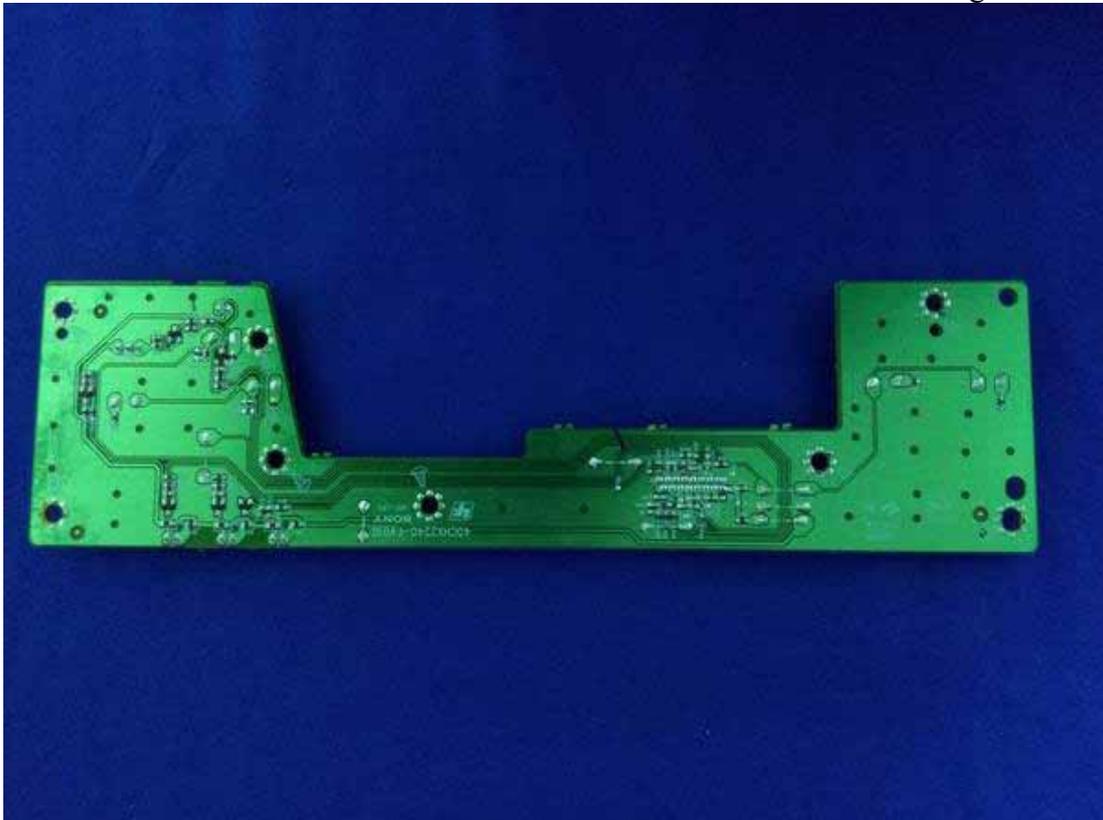


**Figure 13**  
Inside Configuration of the EUT

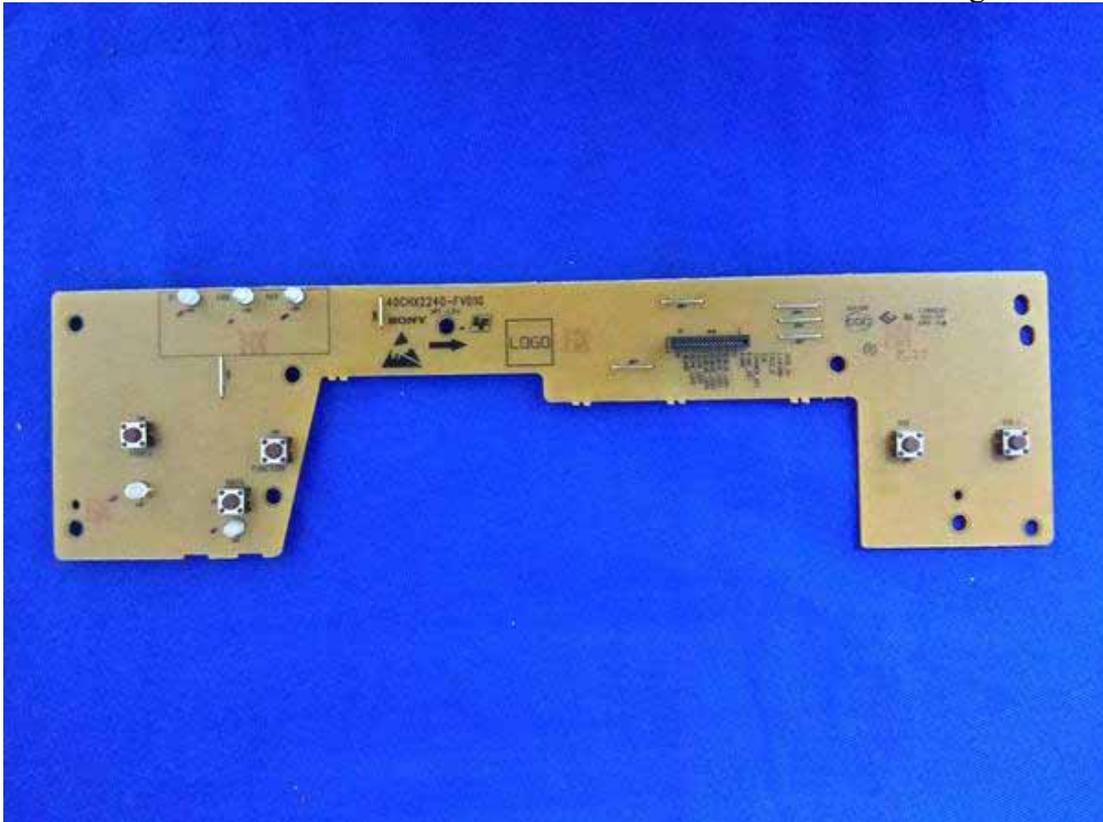

**Figure 14**  
Inside Configuration of the EUT

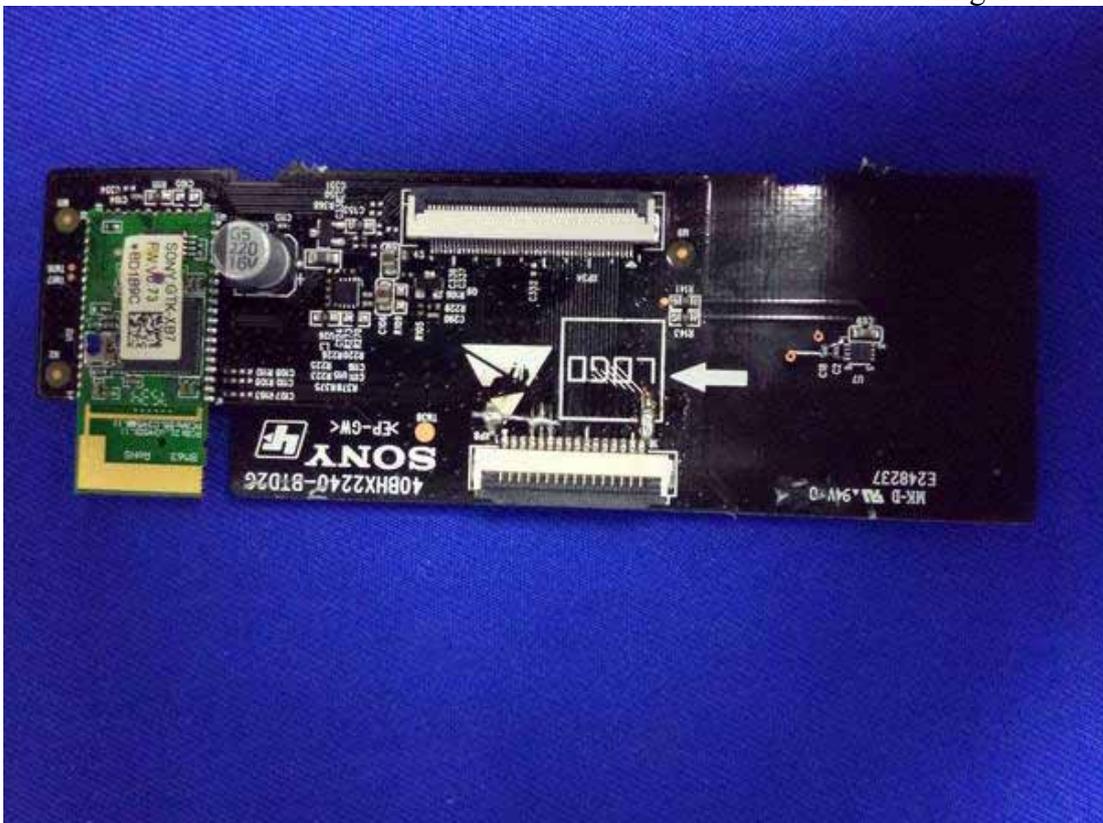

**Figure 15**  
Inside Configuration of the EUT

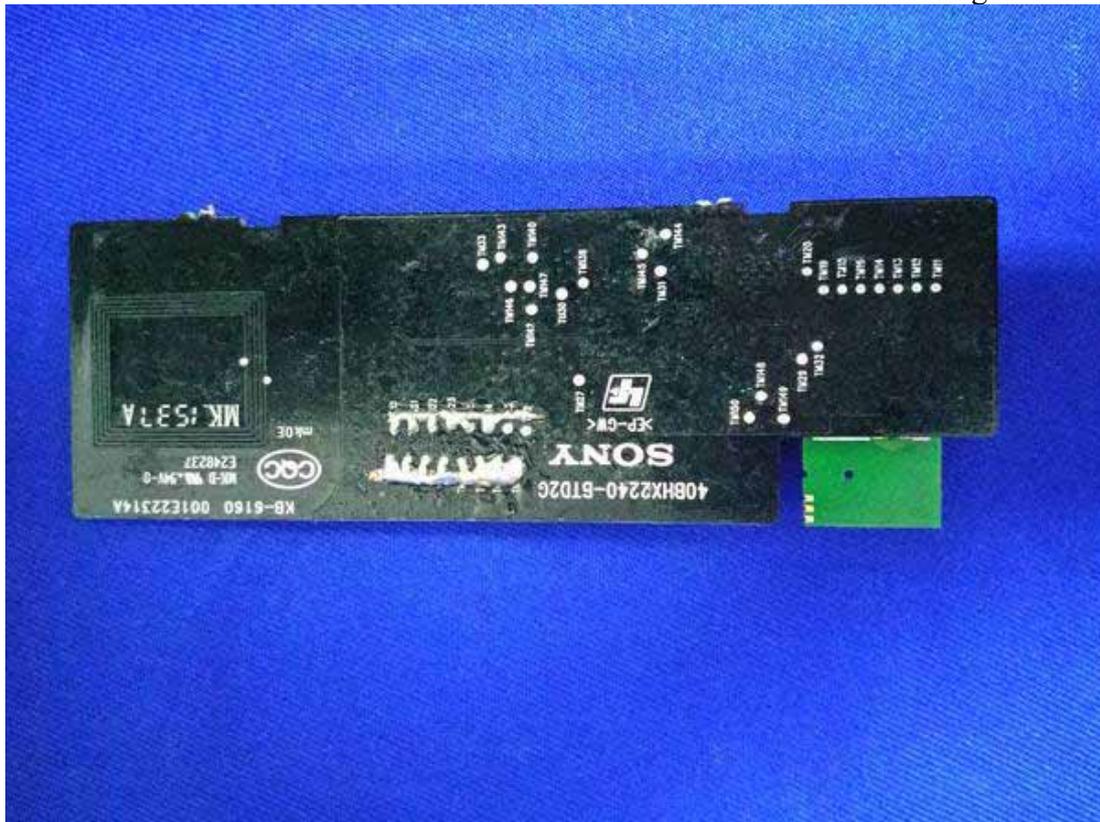

**Figure 16**  
Inside Configuration of the EUT




**Figure 17**  
Inside Configuration of the EUT



**Figure 18**  
Inside Configuration of the EUT




**Figure 19**  
Inside Configuration of the EUT

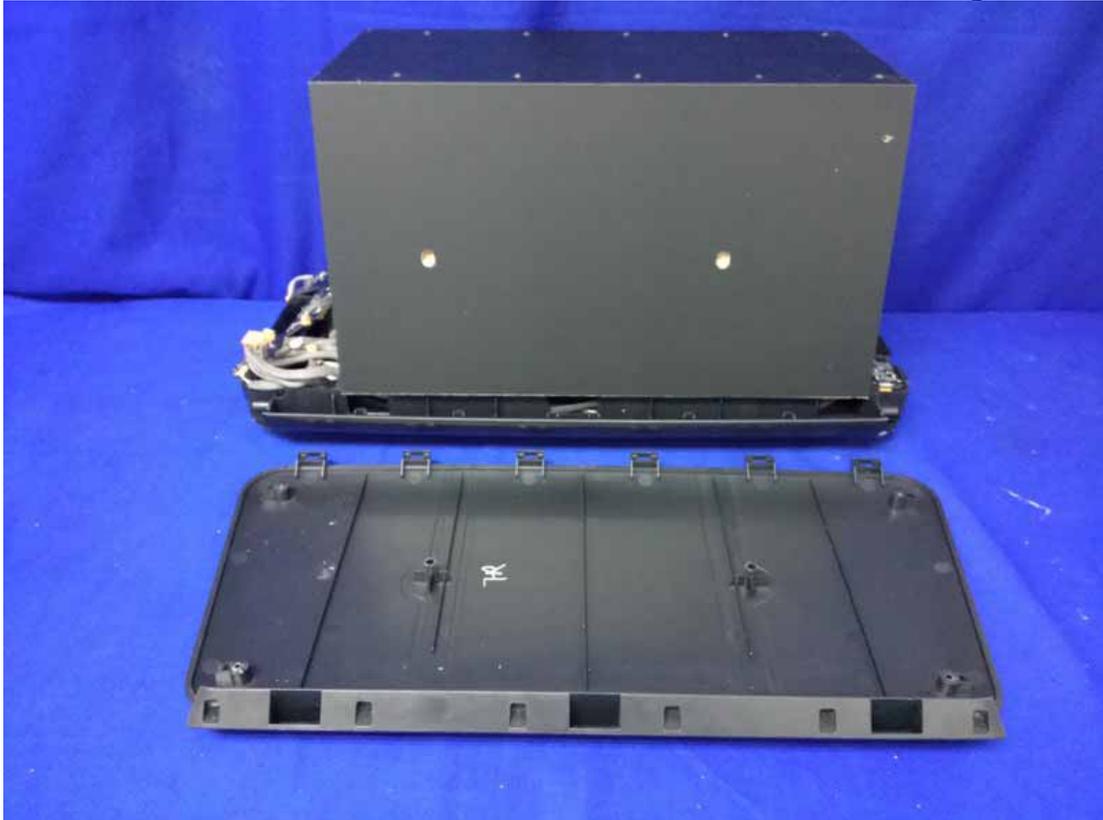


**Figure 20**  
Inside Configuration of the EUT



**Figure 21**  
Inside Configuration of the EUT

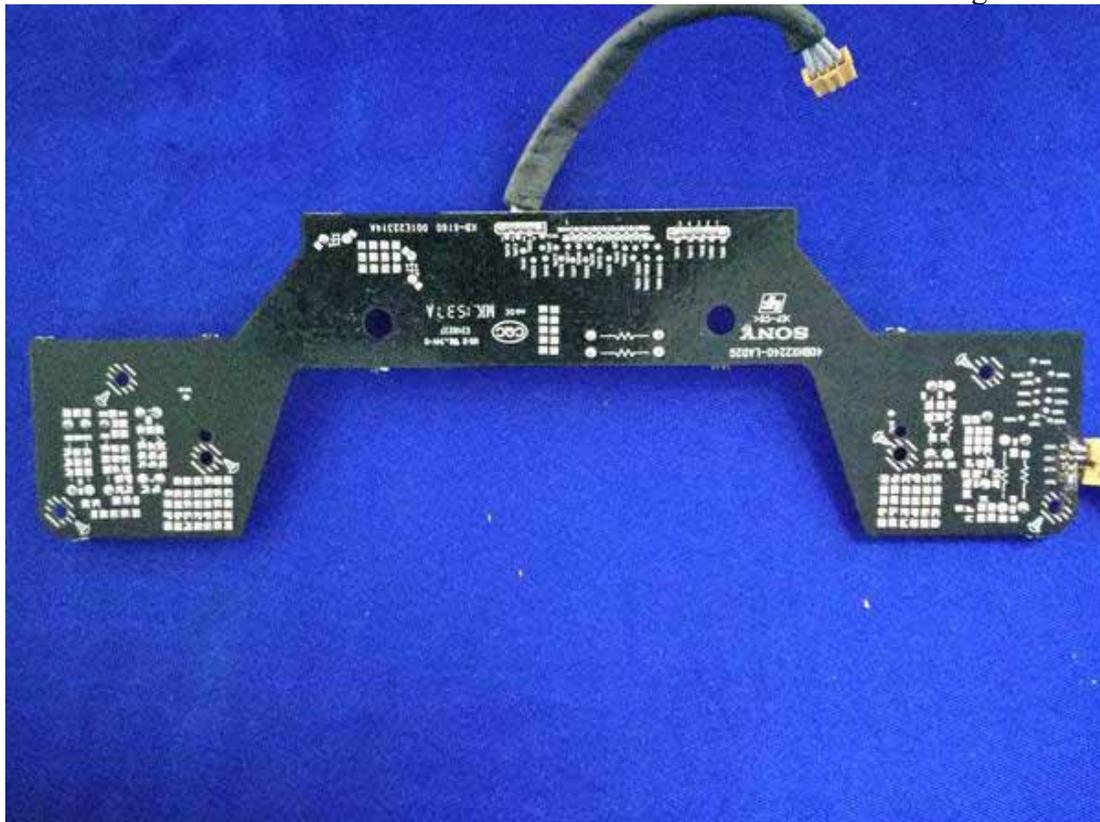

**Figure 22**  
Inside Configuration of the EUT

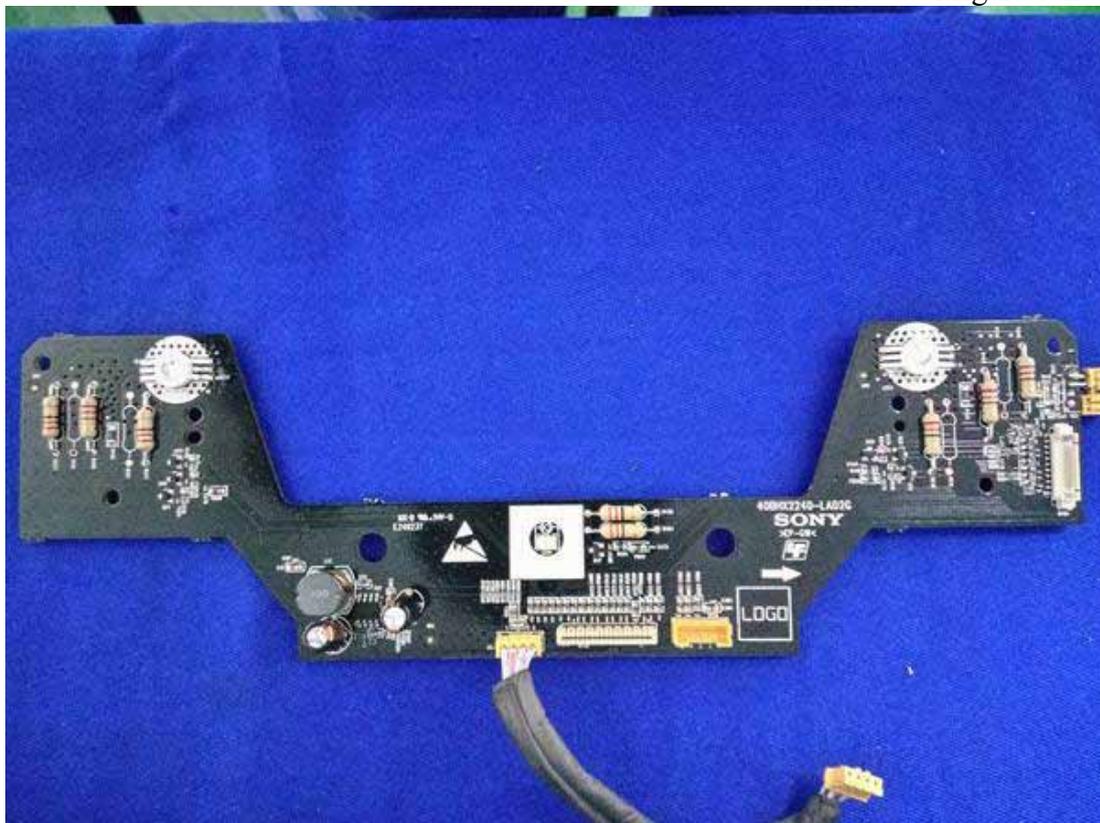


**Figure 23**  
Inside Configuration of the EUT




**Figure 24**  
Inside Configuration of the EUT



**Figure 25**  
Inside Configuration of the EUT

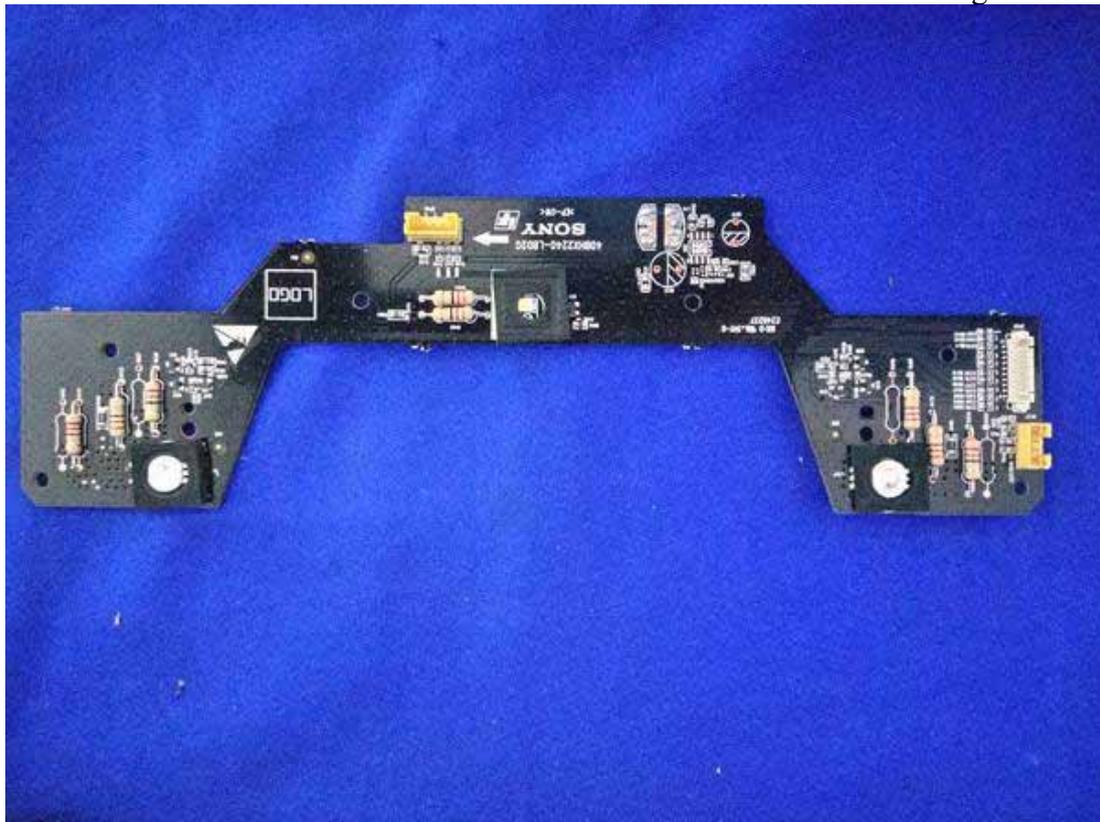


**Figure 26**  
Inside Configuration of the EUT

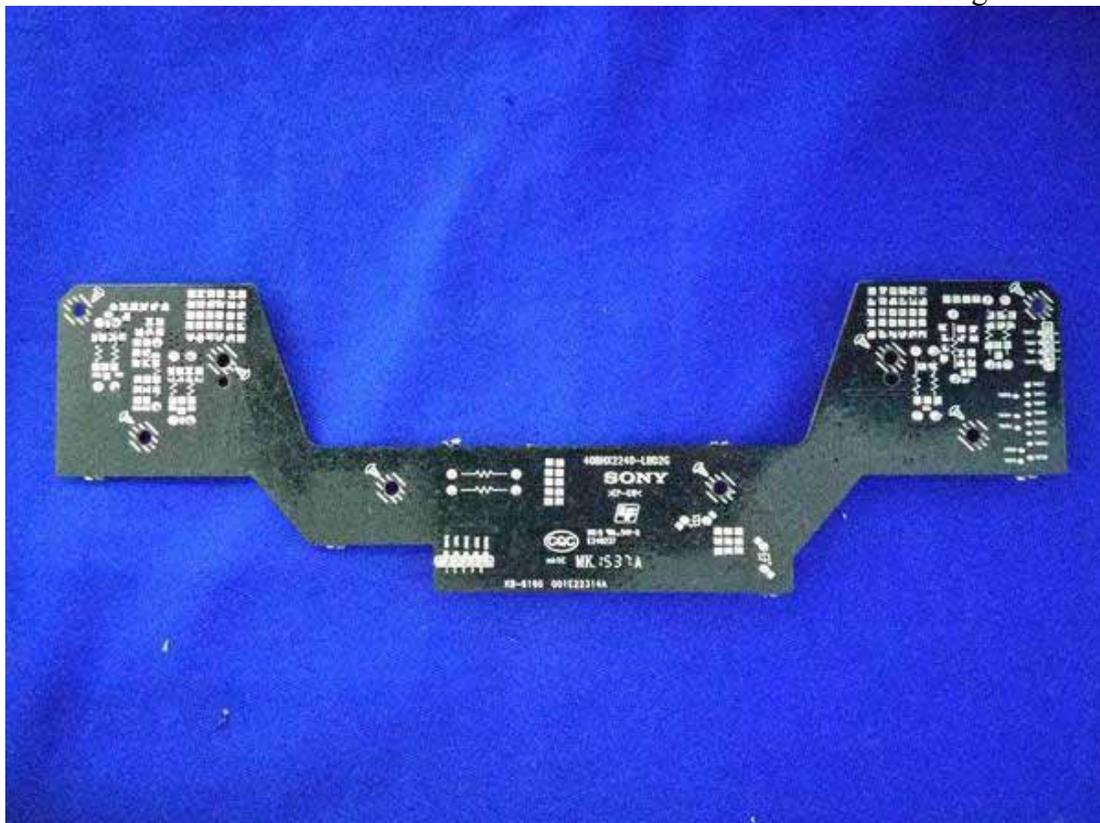


**Figure 27**  
Inside Configuration of the EUT



**Figure 28**  
Inside Configuration of the EUT

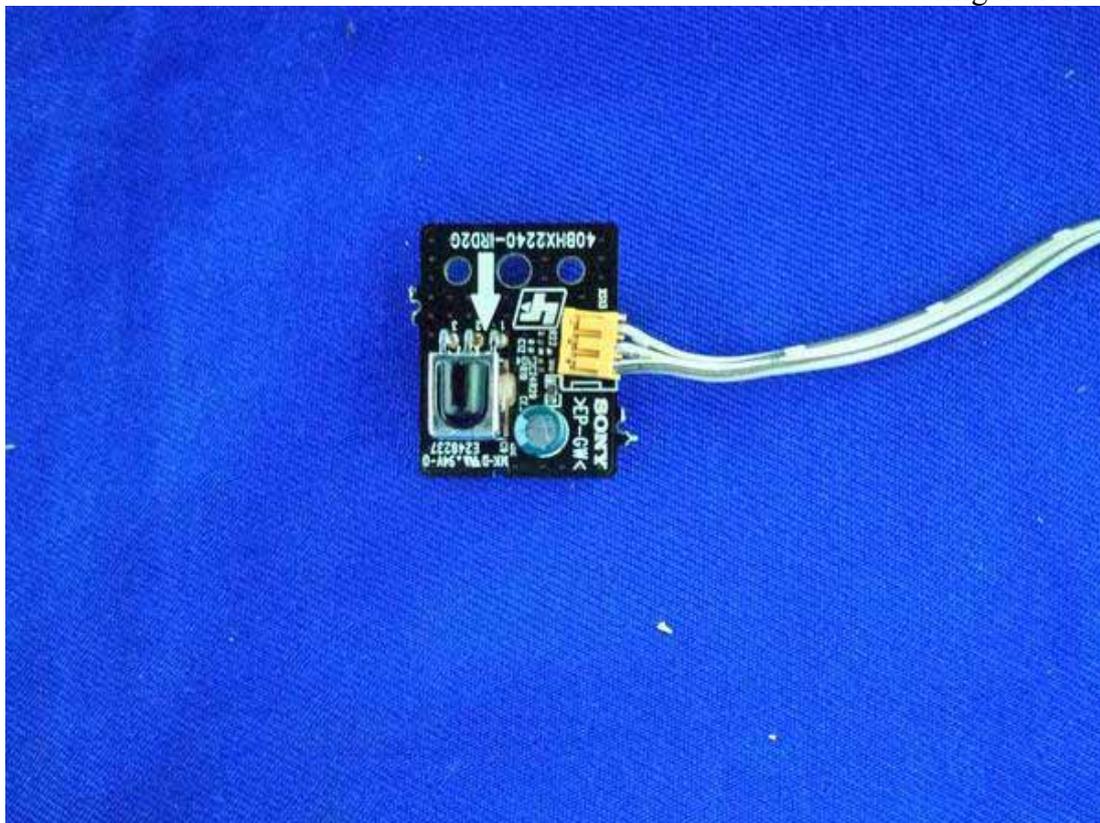

**Figure 29**  
Inside Configuration of the EUT

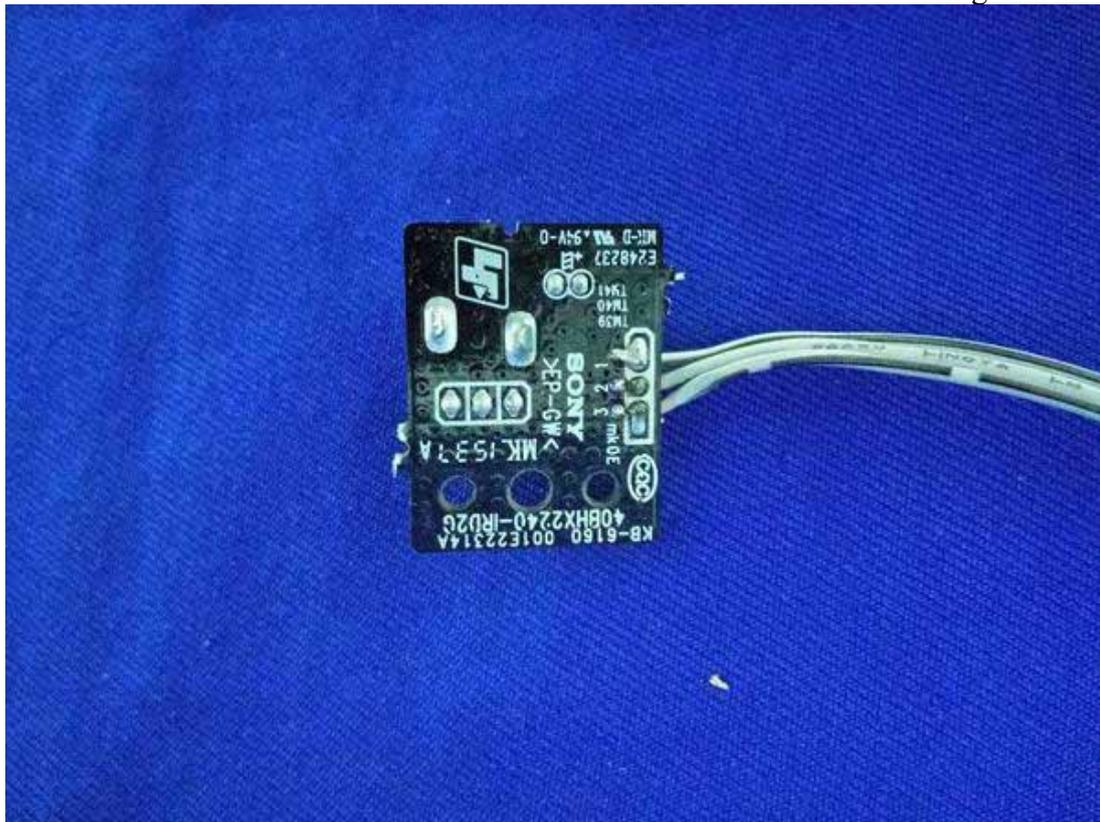

**Figure 30**  
Inside Configuration of the EUT



**Figure 31**  
Inside Configuration of the EUT



**Figure 32**  
Inside Configuration of the EUT



**Figure 33**  
Inside Configuration of the EUT



**Figure 34**  
Inside Configuration of the EUT



**Figure 35**  
Inside Configuration of the EUT



**Figure 36**  
Inside Configuration of the EUT




**Figure 37**  
Inside Configuration of the EUT




**Figure 38**  
Inside Configuration of the EUT



**Figure 39**  
Inside Configuration of the EUT

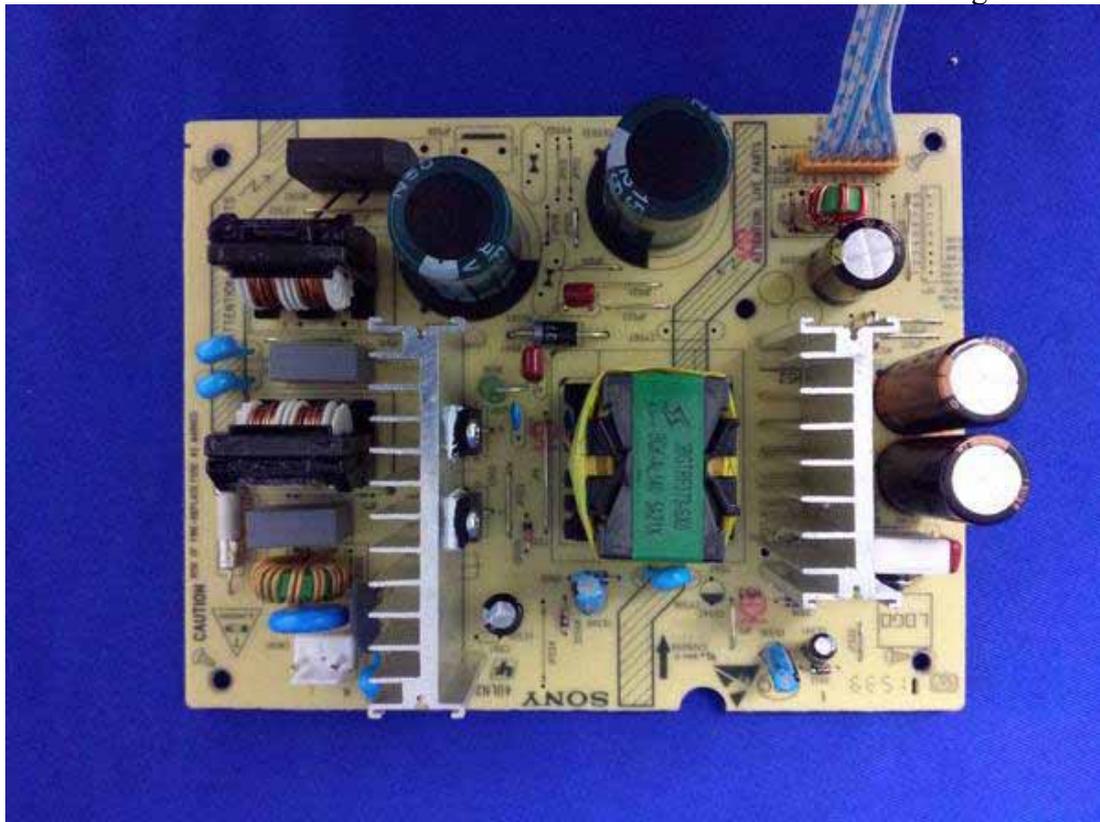


**Figure 40**  
Inside Configuration of the EUT

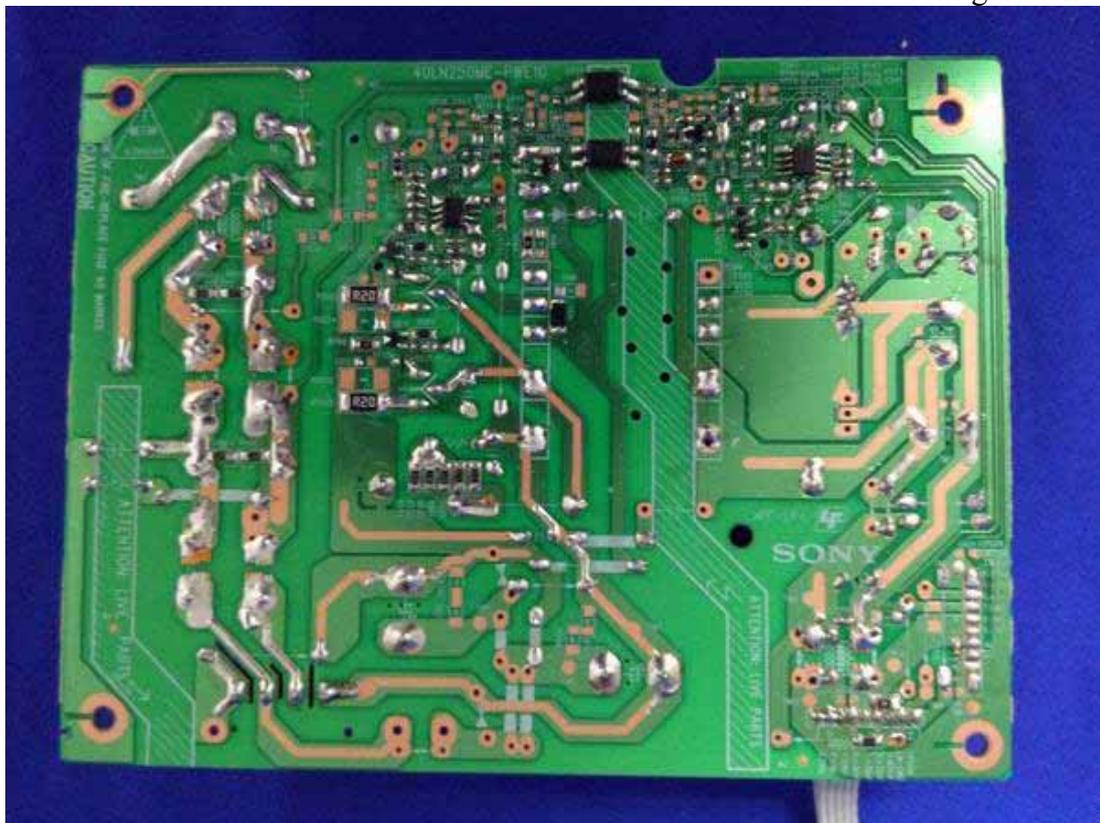

**Figure 41**  
Inside Configuration of the EUT



**Figure 42**  
Inside Configuration of the EUT

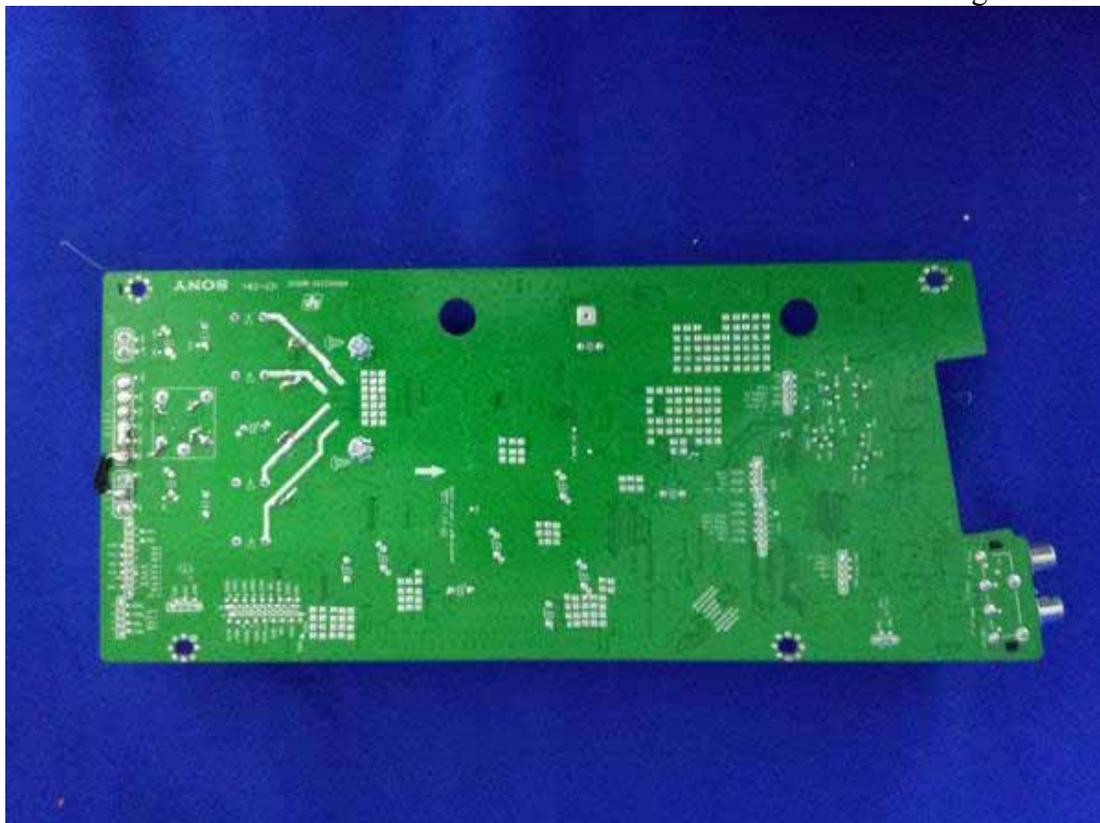


**Figure 43**  
Inside Configuration of the EUT




**Figure 44**  
Inside Configuration of the EUT




**Figure 45**  
Inside Configuration of the EUT

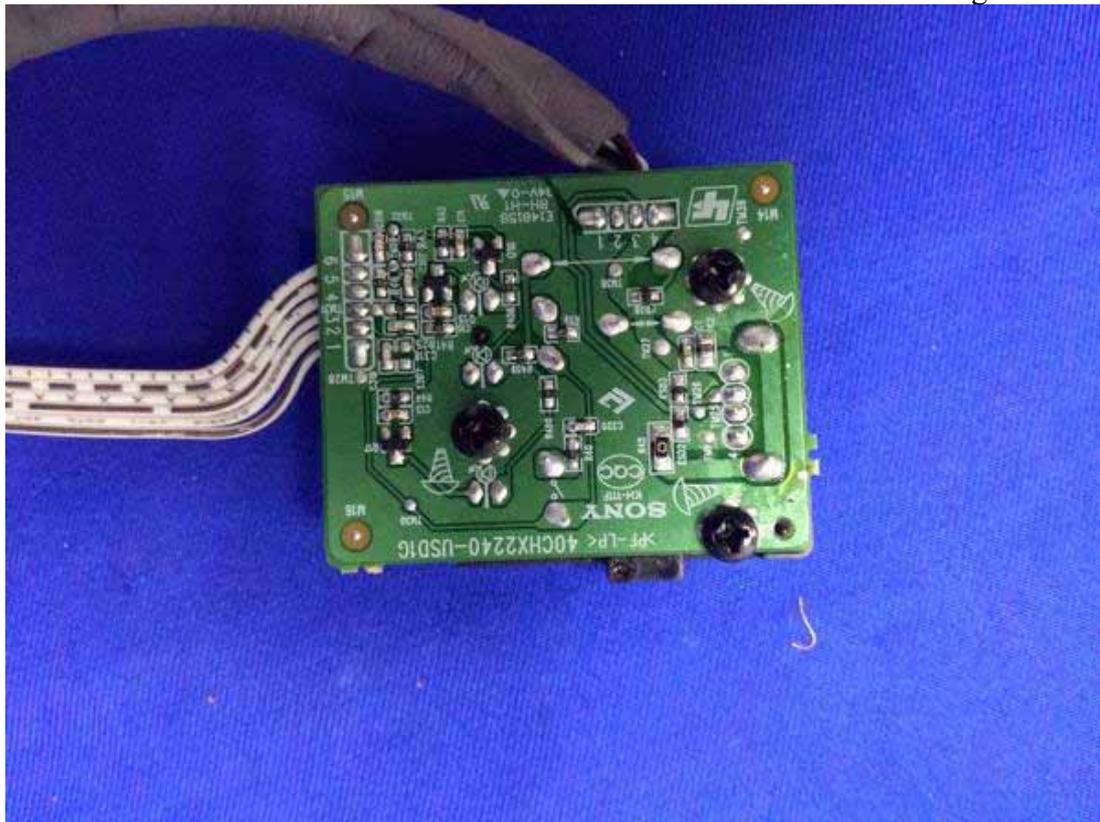

**Figure 46**  
Inside Configuration of the EUT

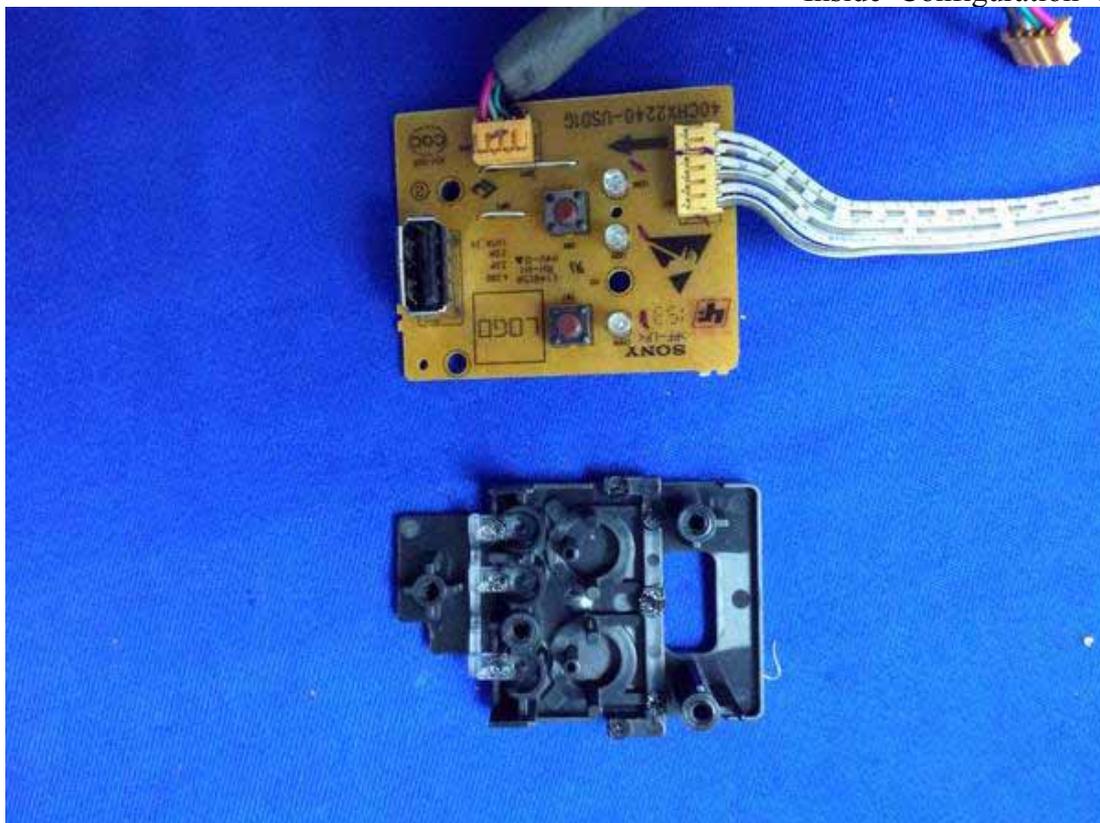

**Figure 47**  
Inside Configuration of the EUT

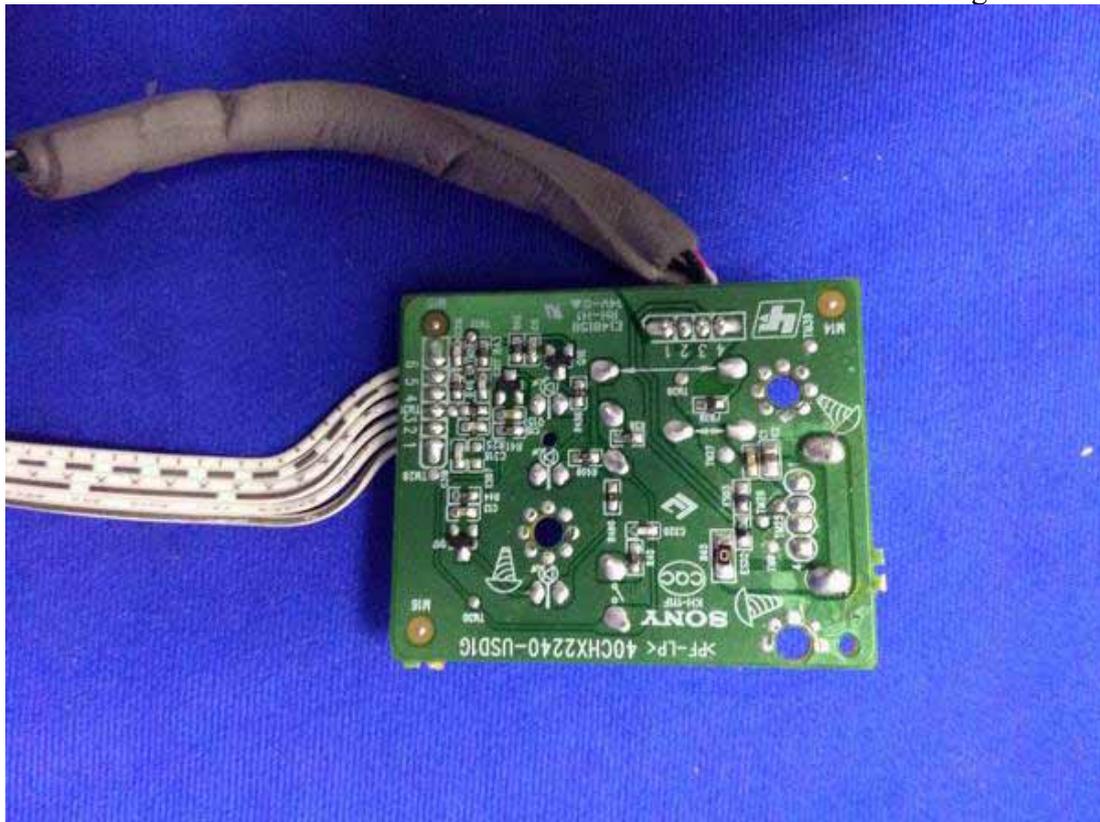

**Figure 48**  
Remote Controller



**Figure 49**  
Remote Controller



**Figure 50**  
AC Cable

