 



Scene1 bottom版下〔AUTO VOLUME無し〕

ボタン線	
DIMMER/RESTART	DIMMER SonyIDType HRC / H=1.9 RESTART SonyIDType HRC / H=1.8
HOLD	 HOLD SonyIDType HRC / H=1.9


DC IN 15V  W=10

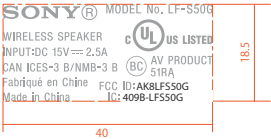