

Car Cradle

Operating Instructions

Owner's Record

The model number and serial number are located on the back of the product. Record the model number and the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. PEGA-CC5 Serial No. _____

For installation and connections, see the supplied installation/connections manual.
For details about the StreetFinder[®] C³ Travel Navigation Software, see the supplied StreetFinder[®] C³ Travel Navigation Software User's Guide.



PEGA-CC5

WARNING

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The car cradle is only for use in the U.S.A.

Table of Contents

| | |
|----------------------|---|
| Before use | 7 |
|----------------------|---|

| | |
|---|----------|
| What you can do with CLIÉ™ handheld during in-vehicle mode | 8 |
|---|----------|

| | |
|------------------------------------|---|
| Introducing applications | 8 |
|------------------------------------|---|

| | |
|---------------------------------------|-----------|
| Location of controls | 11 |
|---------------------------------------|-----------|

| | |
|-----------------------|----|
| Front panel | 11 |
|-----------------------|----|

| | |
|----------------------|----|
| Side panel | 12 |
|----------------------|----|

| | |
|--|----|
| Wireless card remote commander | 13 |
|--|----|

| | |
|----------------------------------|-----------|
| Getting started | 15 |
|----------------------------------|-----------|

| | |
|--|----|
| Initial setup of your CLIÉ™ handheld | 15 |
|--|----|

| | |
|--|----|
| Installing software for the car cradle | 15 |
|--|----|

| | |
|---|----|
| Setting up your CLIÉ™ handheld for the car cradle | 19 |
|---|----|

| | |
|--|----|
| Mounting your CLIÉ™ handheld in the car cradle | 20 |
|--|----|

| | |
|---------------------------------------|----|
| Charging your CLIÉ handheld | 22 |
|---------------------------------------|----|

| | |
|---|----|
| Various in-vehicle mode systems/functions | 23 |
|---|----|

| | |
|---------------------------------|----|
| About in-vehicle mode | 23 |
|---------------------------------|----|

| | |
|----------------------------|----|
| About Sleep mode | 26 |
|----------------------------|----|

| | |
|---------------------------|----|
| About HOLD mode | 26 |
|---------------------------|----|

| | |
|-----------------------------------|----|
| About the caution alarm | 27 |
|-----------------------------------|----|

| | |
|-----------------------------------|-----------|
| Basic operations | 28 |
|-----------------------------------|-----------|

| | |
|-------------------------------------|----|
| Operating the touch panel | 28 |
|-------------------------------------|----|

| | |
|------------------------------|----|
| Using Car Launcher | 28 |
|------------------------------|----|

| | |
|-------------------------|----|
| Display items | 29 |
|-------------------------|----|

| | |
|-----------------------------|----|
| About Screensaver | 30 |
|-----------------------------|----|

| | |
|---|-----------|
| Using applications | 31 |
| Starting an application | 31 |
| Mail (Text-to-voice application) | 33 |
| Reading out mail | 33 |
| Display items | 34 |
| About filtering | 36 |
| Schedule | |
| (Text-to-voice application) | 38 |
| Reading out a schedule/event | 38 |
| Various reading out modes | 38 |
| Display items | 40 |
| Today (Text-to-voice application) | 43 |
| Music | 45 |
| Using the built-in FM transmitter | 46 |
| Using the SONY-BUS connection adapter (optional) | 47 |
| Using a cassette adapter (optional) | 48 |
| Display items | 49 |
| StreetFinder® C³ Travel Navigation | |
| Software | 51 |
| Photo | 52 |
| GPS Meter | 53 |
| Display items | 53 |
| Monitor | 54 |
| Display items | 55 |
| Other functions | 59 |
| Car Setting | 59 |
| Uninstalling the Car Cradle basic software on your CLIÉ handheld | 61 |
| Setting Sounds | 62 |
| Setting the Display Order | 63 |
| Assigning Applications to Application Buttons | 64 |
| Setting Screensaver | 65 |
| Setting Miscellaneous | 67 |

| | |
|---|----|
| Setting the voice pitch, speed and animation for reading out (Text-to-voice function) | 69 |
| Configuring the Mail settings | 70 |
| Configuring the Music settings | 72 |
| Configuring the Photo settings | 73 |
| Configuring the Schedule settings | 74 |

| | |
|---|-----------|
| Additional information | 75 |
| Maintenance | 75 |
| Troubleshooting | 77 |
| Specifications | 81 |
| Computer system requirements | 82 |
| INDEX | 83 |

Continued on next page

Notes on this manual

- The illustrations in this manual depict the short screen type of CLIÉ™ handheld.
- Depending on your CLIÉ handheld, the screen may differ.
- Screen images in this manual may be different from the actual displays in the supplied software.
- Contents of this manual are written for users with knowledge of using CLIÉ handheld and the Microsoft® Windows® operating system. For details about CLIÉ handheld, refer to the manuals supplied with CLIÉ handheld. For details about computer operation, refer to the manual for the computer.

No guarantee for lost data or damaged data

Sony does not provide any guarantee for lost or damaged data.

WARNING

To avoid the risk of injury or accident, read the following warning before installing and operating the unit.

On safety

- Comply with your local traffic laws and regulations.
- For your safety, do not operate equipment, mount or remove your CLIÉ handheld from the car cradle while driving.
- Do not watch the CLIÉ handheld while driving. It is dangerous and may cause a traffic accident.
- For your safety, when your CLIÉ handheld enters in-vehicle mode, the Warning message is displayed. To cancel the Warning message, tap the screen or press any button on the wireless card remote commander.
- For safe driving, the car cradle system restricts certain applications on your CLIÉ handheld while driving. To use applications other than in-vehicle mode, park your car in a safe place and detach your CLIÉ handheld from the car cradle to operate.
- When mounting your CLIÉ handheld in the car cradle, remove any supplied/optional accessories, such as headphones, cover, adapter, etc., from your CLIÉ handheld. They may fall or their cables may interfere with driving, causing a traffic accident or injury.
- When your CLIÉ handheld is mounted in the car cradle, be sure not to insert or remove the “Memory Stick” media.
- Be sure to take your CLIÉ handheld out of the car when leaving your car to prevent theft or high temperature damage inside the car.
- When the car battery adapter is not in use, disconnect it from the cigarette lighter socket. If battery power is not turned off when the ignition key is in the OFF position, battery drain may result.
- Do not place anything other than the specified CLIÉ handheld in the car cradle.
- Do not allow any liquid or foreign objects to enter the unit.
- Do not disassemble or modify the unit.
- This unit is designed for 12 V DC negative ground operation only.

On installation

- Before installing the unit, please check your local traffic laws and regulations.
- Make sure to install the unit properly according to the installation manual. Improper installation may result in a fire or an electric shock.
- Before installation, be sure to turn the ignition switch to the OFF position or take out the key out. Installing the unit with the ignition on may cause battery drain or a short circuit.
- For information about the polarity, battery voltage and location of the airbag of your car, please consult your car dealer.
- Do not damage any pipes, tubes, the fuel tank or electric wiring when installing the unit, as a fire or accident may result. If you drill a hole in car panels, make sure that any hidden car parts will not be damaged.
- Do not use any nuts or bolts for critical devices such as steering linkage, fuel supply or braking systems. This can cause a fire or an accident.
- Take care to prevent the cords and wires from getting tangled or crimped in the moving portion of a seat rail.
- Do not use any car battery adapter other than the one supplied.

Installing location

- Do not install the car cradle where:
 - It will obstruct the driver’s view when the car cradle is mounted in the car, or your CLIÉ handheld is in the car cradle.
 - It will obstruct the operation of the airbag system.
 - It will obstruct the operation of the vehicle, especially the steering wheel, shift lever, or brake pedal.
 - It will be subjected to heat/high temperature (on a dashboard etc.).
- Please consult qualified technician or service personnel if you cannot attach the car cradle to the car securely.

Replacing the fuse

- When replacing the fuse, be sure to use only a fuse of the same rating (ampere rating).
- Using a different fuse or bridging the contacts with a wire is highly dangerous and can lead to serious damage.

Continued on next page

About GPS

GPS (Global Positioning System) satellites continuously emit signals for positioning on the Earth. As a GPS antenna receives these signals, users can be informed of their location (latitude, longitude and altitude) anywhere on the Earth. Information must be received from three satellites in order to obtain two-dimensional fixes (altitude and longitude), and four satellites are required for three-dimensional positioning (latitude, longitude and altitude). As GPS satellites are controlled by the U.S. Department of Defense, a deliberate margin of error between a few feet (a few meters) and 30 feet (10 meters) exists. As a result, the GPS navigation system may include an error of between 30 feet (10 meters) and about 700 feet (200 meters), depending on the circumstances.

As GPS information is obtained using signal from satellites, it may be impossible or difficult to obtain the information when using the system in the following locations:


Between tall trees with dense foliage



Tunnel or underground



Under a highway

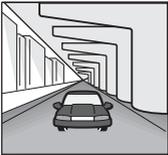

Between high buildings



Before use

Caution

IN NO EVENT SHALL SONY BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR OTHER DAMAGES INCLUDING WITHOUT LIMITATION LOSS OF PROFITS, LOSS OF REVENUE, LOSS OF DATA, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, DOWNTIME, AND PURCHASER'S TIME RELATED TO OR ARISING OUT OF THE USE OF THIS PRODUCT, ITS HARDWARE AND/OR ITS SOFTWARE.

On the supplied software

- Copyright laws prohibit reproducing the software or the software manual in whole or in part or renting the software without the permission of the copyright holder.
- In no event will SONY be liable for any financial damage or loss of profits, including claims made by third parties, arising out of the use of the software supplied with this product.
- In the event a problem occurs with this software as a result of defective manufacturing, SONY will replace it at SONY's option or issue a refund. However, SONY bears no other responsibility.
- The software provided with this product cannot be used with equipment other than that which it is designated for use with.
- Please note that, due to continued efforts to improve quality, the software specifications may be changed without notice.
- The software library incorporated in the CLIE handheld is based in part on the work of the Independent JPEG Group.

NOTES

- Sony does not support third party add-on applications. If you are having a problem with a third party application, please contact the developer or publisher of that software.
- The illustrations in this manual may differ from the actual software.
- Explanations in this manual assume that you are familiar with basic operations of Windows®. For how to use your computer and operating system, please refer to their respective manuals.

Program © 2003 Sony Corporation, © 2003 Palm, Inc., or its subsidiaries. All rights reserved.

Documentation © 2003 Sony Corporation

CAUTION

Please contact your nearest Sony dealer regarding any problems you have with your Sony product.

On the trademarks

Sony, CLIE, "Memory Stick", "Memory Stick Duo", "Memory Stick PRO", "MagicGate Memory Stick", Jog Dial, PictureGear Studio and their logos are trademarks of Sony Corporation.

Palm OS, Graffiti, HotSync and the HotSync logo are registered trademarks of Palm, Inc. and its subsidiaries, and Palm, Palm Powered, Palm Desktop, the Palm logo, the Palm Powered logo and Palm OS5 logo are trademarks of Palm, Inc and its subsidiaries.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

Pentium is registered trademarks of Intel Corporation.

StreetFinder C³ software © 2003, Rand McNally & Company. All right reserved. StreetFinder and Rand McNally are registered trademarks of Rand McNally & Company.

"StreetFinder® C³ Travel Navigation Software" is referred to as "StreetFinder" in the following pages.

Bluetooth is a trademark that is owned by the proprietor and used by Sony under license.

Adobe and Adobe Acrobat Reader are trademarks of Adobe Systems Incorporated.

All other trademarks are trademarks of their respective owners.

What you can do with CLIÉ™ handheld during in-vehicle mode

Introducing applications

Car Launcher

This application uses large icons to allow you to finger tap the screen (without using the stylus) for quick access to desired applications. During in-vehicle mode, tapping/pressing the Home  button (short screen) or the Home icon (long screen) returns you to the **Car Launcher** screen. Applications for in-vehicle mode are listed automatically on the **Car Launcher** screen.




Mail

This application allows you to listen to mails stored in the **CLIE Mail™** application, by having your CLIÉ handheld read them out to you, using the Text-to-voice function.




Schedule

This application allows you to listen to your schedules/events stored in the **Date Book** application, by having your CLIÉ handheld read them out to you, using the Text-to-voice function.

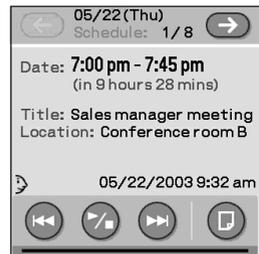

Today

When you place your CLIÉ handheld in the car cradle for the first time that morning and again that afternoon, the **Today** application activates automatically and reads out today's date, your current/next schedule and number of unread mails.

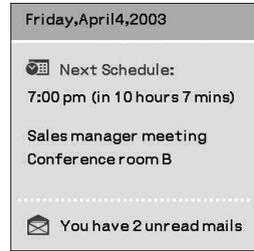

Music


This application allows you to play music data, such as MP3/ATRAC3 files. You can listen to music via your car audio speakers if you are in your car.



StreetFinder

This application allows you to view maps on your CLIÉ handheld. By using the built-in GPS function of the car cradle, your current location can be monitored on-screen. If the route* has been downloaded to your CLIÉ handheld or "Memory Stick" media by performing a HotSync® operation before traveling, the Text-to-voice function will provide voice guidance.

* Internet connection and PC required for initial Route setup

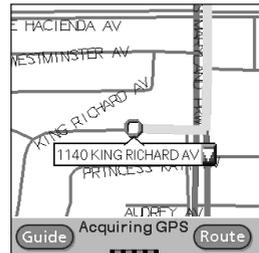


Photo

This application shows you full-screen images stored on your CLIÉ handheld/"Memory Stick" media. Use it as an in-car photo stand, or even for showing your family photos of the holiday you have just taken during the return journey.




GPS Meter

This application allows you to view GPS signal reception conditions.

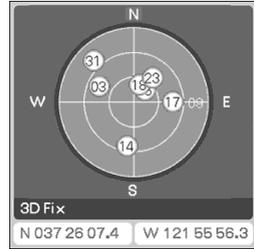


Monitor

This application displays the playing/receiving information of a Sony car audio when connected to the optional SONY-BUS connection adapter (XA-CC1).

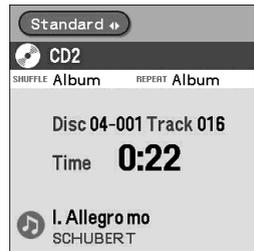

Location of controls

Front panel

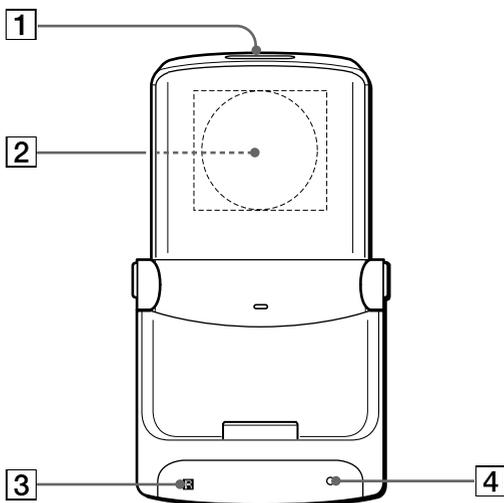

1 Auto dimmer eye

Receptor for the dimmer.

2 Built-in speaker for the Text-to-voice function (located at the back of the car cradle)


- While your CLIÉ™ handheld is mounted in the car cradle, the speaker of your CLIÉ handheld will be disabled.
- This speaker is only for the Text-to-voice application; music is not produced by this speaker.

3 Receptor for the card remote commander

4 Power indicator LED

Lights green when the power is on.
(It also lights during the in-vehicle sleep mode and HOLD mode.)

Side panel

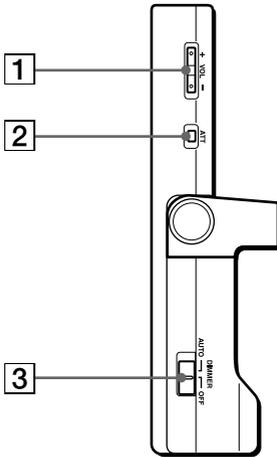

1 VOL +/- buttons for the built-in speaker

- These buttons control only the built-in speaker of the car cradle.
- The volume indicator appears only while you adjust the volume level. Shortly after you finished adjusting the volume, the volume indicator disappears.
- You can adjust the volume level only when the Text-to-voice application is being used.

2 ATT button for the built-in speaker

- The ATT function quickly lowers the volume level.
- Press to lower.
 - “ATT On” appears on the screen.
- Press again, or press the VOL + button.
 - “ATT Off” appears on the screen and attenuation is canceled.
- You can adjust the volume level only when the Text-to-voice application is used.


3 Dimmer AUTO/OFF switch

- The Auto dimmer function adjust the brightness of the screen automatically, adapting to the surrounding brightness. For example, when driving through a tunnel or at nighttime.
- The brightness default setting is maximum.
 - select AUTO to dim the screen automatically.
 - select OFF to deactivate the Dimmer.

Wireless card remote commander

Refer to the pages listed for details.

- For details about the **StreetFinder**[®] application, refer to the StreetFinder User's Guide.
- For details about replacing the batteries, refer to "Replacing the lithium battery" on page 76.

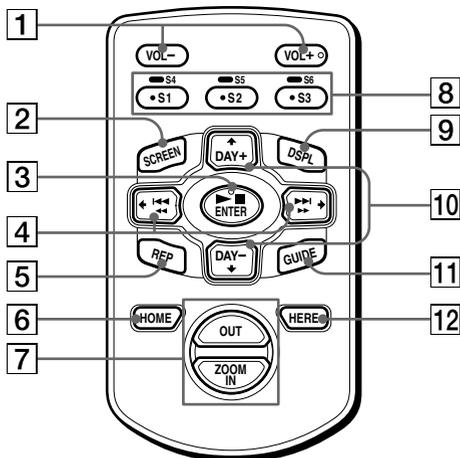

1 VOL +/- buttons for the built-in speaker

- These buttons control only the built-in speaker of the car cradle.
- The volume indicator appears only while you adjust the volume level. Shortly after you finished adjusting the volume, the volume indicator disappears.
- You can adjust the volume level only when the Text-to-voice application is being used.

2 Screen button

- To change the screen mode for the **Music/Monitor** application. 49, 55, 56, 57
- To switch between the map and the text instruction screens (**StreetFinder** application).

3 ENTER/▶/■ button

- To activate an application. 31
- To start/stop music playback, mail and schedule/event read out. 35, 41, 50
- To select the map on the context menu (**StreetFinder** application).

Continued on next page

4 buttons

Press to:

- move the cursor left/right on the **Car Launcher** screen. 31
- go to the previous/next track. 50
- go to the previous/next mail/schedule. 36, 42
- move the map left/right, back/forward on the text instruction screen (**StreetFinder**[®] application).

Hold down to:

- go backwards/forwards through tracks. 50
- go backwards/forwards through mails/schedules. 36, 42

5 **REP button**

To switch the repeat mode for the **Music** application. 50

6 **Home button**

To display **Car Launcher**. 28

7 **ZOOM OUT/IN buttons**

To zoom the map out and in or pages back and forth in the text instructions (**StreetFinder** application).

8 **S1 to S3 (S4 to S6) buttons**

S1 to S3:

- Press to activate an application.

S4 to S6:

- Hold down to activate an application.

Tip

You can assign your favorite applications to these buttons (page 64).

9 **DSPL button**

- To change the display items for the **Music** application. 50
- To change the image on **Photo/Screensaver**. 30, 52
- To open the Display menu when your car is stopped (**StreetFinder** application).

10 **DAY ↓/↑ (+/-) buttons**

- To move the cursor down/up on the **Car Launcher** screen. 29
- To move the listed item down/up on the **List** screen of the **Music** application. 49
- To switch the folder for **Mail**. 35
- To go to the previous/next day for **Schedule**. 40
- To move the map down/up, and the cursor down/up on the map selection screen (**StreetFinder** application).

11 **GUIDE button**

To repeat last audio instruction (**StreetFinder** application).

12 **HERE button**

To re-center the current GPS location on the map or return to the current text instruction (**StreetFinder** application).

Getting started

Initial setup of your CLIÉ™ handheld

Follow the procedure below prior to using your CLIÉ handheld with the car cradle.

Step 1: Installing software for the car cradle

Step 2: Setting up your CLIÉ™ handheld for the car cradle

Step 3: Mounting your CLIÉ™ handheld in the car cradle

Step 1: Installing software for the car cradle

Before using your CLIÉ™ handheld with the car cradle, you have to install software for the car cradle on your CLIÉ handheld.

Install the Car Cradle basic software from the supplied Installation CD-ROM. When you use the **StreetFinder®** application, install the StreetFinder® C³ Travel Navigation Software, too.

- ▶ For details about installing the StreetFinder® C³ Travel Navigation Software, refer to the StreetFinder User's Guide.
- ▶ For details of the required computer specifications, refer to "Computer system requirements" on page 82.

Installing the Car Cradle basic software

Note

Before installing the Car Cradle basic software, install the Palm™ Desktop for CLIÉ software. If the Palm™ Desktop for CLIÉ is not installed on your computer, you will not be able to complete the car cradle software installation.

- ▶ For details about the Palm™ Desktop for CLIÉ, refer to the manuals supplied with your CLIÉ handheld.

1 Quit all applications running in the Windows® operating system.

2 Insert the supplied Installation CD-ROM into the CD-ROM drive of your computer.

The **Installation Launcher** window is displayed.

Note

If the CD-ROM is not activated automatically, activate the CD-ROM manually.

3 Click the **INSTALL** button for the Car Cradle basic software.

The setup program starts and the **InstallShield Wizard** window is displayed.

4 Click **Next**.

The **Select Features** window is displayed.

5 Select the feature you want to install on your CLIÉ handheld with the car cradle.

Basic Applications: The basic applications for the car cradle.

Audio Monitor: The application for a Sony car audio via the SONY-BUS connection adapter (optional) (page 54).

6 Click **Next**.

The **Start Copying Files** window is displayed.

Confirm the settings.

7 Click **Next**.

The **Install Tool** window is displayed.

➔ For details about installing sample pictures, refer to page 17.

Note

When performing the HotSync® operation, make sure **Destination** of files is set to **Handheld**. Do not select **Memory Stick** as the **Destination**.

Tip

If there are two or more user names stored in Palm™ Desktop for CLIÉ, the window to select a user name is displayed. Select a user name then click **OK**.

8 Click **Done**.

Installation of the Car Cradle basic software on your computer is completed.

The Information dialog box is displayed.

9 Click **OK**.

10 Click **Finish**.

Tip

If you want to install sample pictures, follow the procedure in “Installing sample pictures” (page 17).

11 To install the Car Cradle basic software on your CLIÉ handheld, press the HotSync® button on the cradle.

The HotSync® operation starts and the selected software is downloaded to your CLIÉ handheld.

➤ For details about the HotSync® operation, refer to the manuals supplied with your CLIÉ handheld.

12 After HotSync® operation is completed, display the **CLIE Launcher** screen on your CLIÉ handheld then tap the **Car Installer** icon.

The information screen is displayed. Tap **Reset**.

After resetting, the **Car Installer** icon disappears, the **Car Setting** icon appears.

Installation of the Car Cradle basic software on your CLIÉ handheld is completed.

➤ For details about additional installation, refer to the manuals supplied with your CLIÉ handheld.

Note

After performing a hard reset on your CLIÉ handheld, you need to reinstall the Car Cradle basic software.

Installing sample pictures

You can install sample pictures stored on the Installation CD-ROM for the **Photo**, Screensaver and **Music** applications.

1 Click the **Picture** button after performing steps 1 and 2 on page 16.

Continued on next page

2 Click the **INSTALL** button.

The setup program starts and the **InstallShield Wizard** window is displayed.

3 Click **Next**.

4 Select **Long Screen Type** or **Short Screen Type** of your CLIÉ handheld.

5 Click **Next**.

6 Select **Nature/Sports/Others**.

7 Click **Next**.

The **Start Copying Files** is displayed.
Confirm the settings.

8 Click **Next**.

The **Install Tool** window is displayed.

Tip

If there are two or more user names stored in Palm™ Desktop for CLIÉ, the window to select a user is displayed. Select a user then click **OK**.

9 Click **Done**.

10 Click **Finish**.

11 To install the selected pictures on your CLIÉ handheld, press the HotSync® button on the cradle.

The HotSync® operation starts and the selected pictures are downloaded to your CLIÉ handheld.

- ➔ For details about the HotSync® operation, refer to the manuals supplied with your CLIÉ handheld.
- ➔ For details about installing sample pictures to “Memory Stick” media, refer to the manuals supplied with your CLIÉ handheld.
- ➔ For details about additional installation or more, refer to the manuals supplied with your CLIÉ handheld.


Step 2: Setting up your CLIÉ™ handheld for the car cradle

Follow the setup procedure according to your CLIÉ handheld type.

Removing the protection cover (short screen type)

Before mounting and using your CLIÉ handheld in the car cradle, you need to remove the protection cover.

Whenever you use your CLIÉ handheld with the car cradle, remove the protection cover.

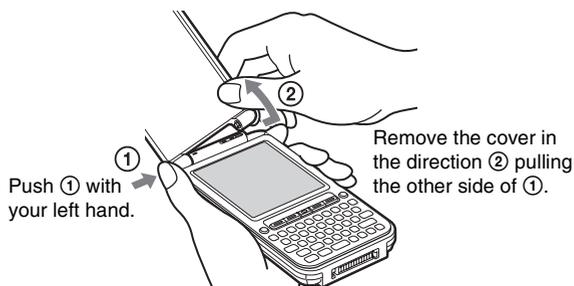


► For details about attaching the cover, refer to the manual supplied with your CLIÉ handheld.

Changing the operating style (long screen type)

Before mounting, you need to change the operating style.

Set your CLIÉ handheld to the “turned style.”

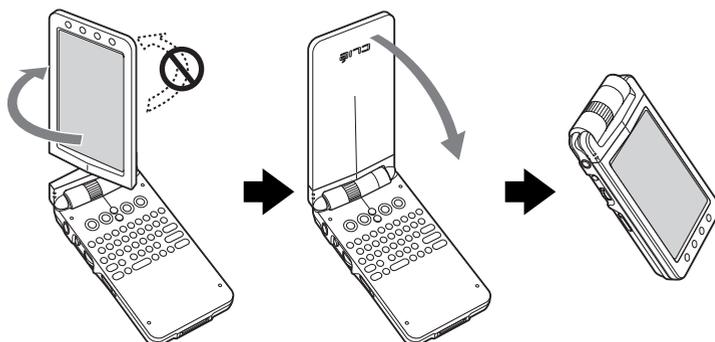

Open the display and rotate it as indicated by the arrow until it clicks into place.

Fold the display over the keyboard.

► For details about closing the display panel, refer to the manual supplied with your CLIÉ handheld.

Continued on next page

Step 3: Mounting your CLIÉ™ handheld in the car cradle



To operate applications/functions during in-vehicle mode, mount your CLIÉ handheld in the car cradle.

Notes



- Do not mount or remove your CLIÉ handheld while driving.
- When you operate **Car Setting**, detach your CLIÉ handheld from the car cradle. During in-vehicle mode, **Car Setting** is not displayed.
- Use the correct holding arm for your CLIÉ handheld screen type.

① Mount your CLIÉ handheld on the connector of the car cradle.


Short screen type

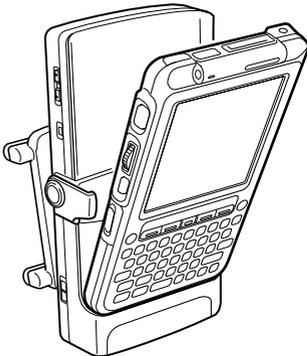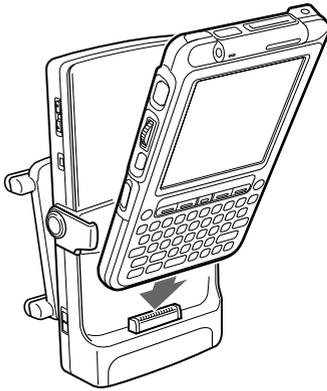

Long screen type

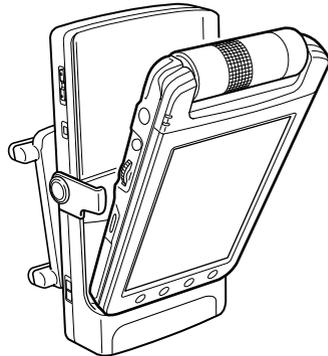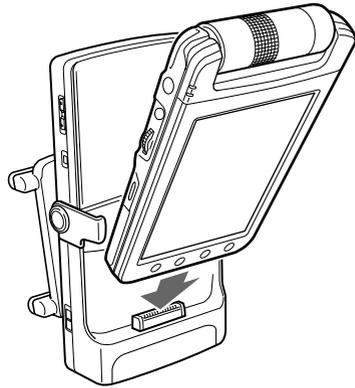


② Tilt back your CLIÉ handheld to rest in the car cradle.

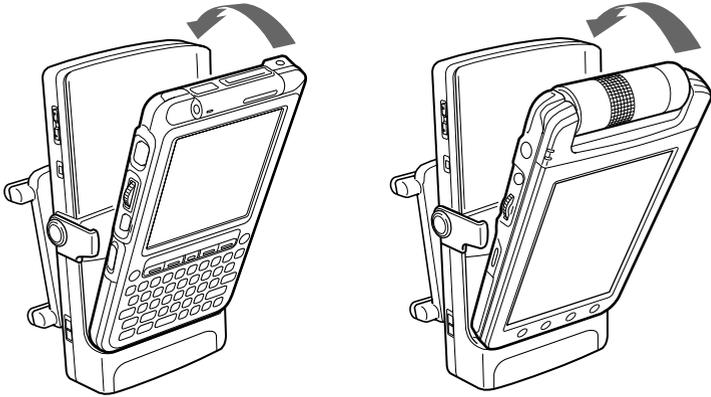

Note

Do not mount your CLIÉ handheld on the connector of the car cradle vertically.

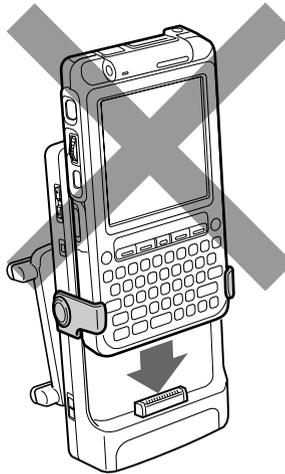

**Detaching your CLIÉ handheld from the car cradle/
turning off the car cradle**


The car cradle turns on when your CLIÉ handheld is mounted in the car cradle. When the car cradle is not in use, detach your CLIÉ handheld from the car cradle following the instructions below to turn off the car cradle. When you leave the car, take your CLIÉ handheld with you.

Continued on next page

Notes

- If battery power is not turned off when the ignition key is in the OFF position, detach your CLIÉ handheld from the car cradle as battery drain may result.
- Do not detach your CLIÉ handheld from the car cradle with one hand. It may cause a malfunction.

- ① Squeeze both **RELEASE** buttons simultaneously with one hand.
- ② Pull out the CLIÉ handheld towards you from the top with your other hand.

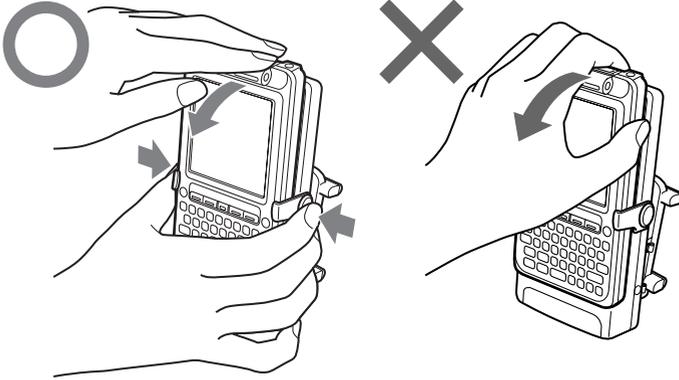

..... Charging your CLIÉ handheld

Your CLIÉ handheld battery is continuously being charged during in-vehicle mode. When the ignition switch is in the OFF position, power from the cigarette lighter socket terminates is stopped, the car cradle is turned off and battery charge stops.

Notes

- If your CLIÉ handheld battery is low, you cannot use the CLIÉ handheld in the car cradle. Be sure to charge the CLIÉ handheld before using with the car cradle.
- If battery power is not turned off when the ignition key is in the OFF position, detach your CLIÉ handheld from the car cradle. The car cradle will not be turned off when the ignition key is in the OFF position. Therefore, if your CLIÉ handheld is in the car cradle, battery drain may result.

Tip

If your CLIÉ handheld is turned off in the car cradle (in-vehicle sleep mode) during in-vehicle mode, battery charge continues.

Various in-vehicle mode systems/functions

For your safety, when your CLIE™ handheld enters in-vehicle mode, a Warning message is displayed. To cancel the Warning message, tap the screen or press any button on the wireless card remote commander.

During in-vehicle mode, the car cradle system restricts certain applications/functions on your CLIE handheld.

.....

About in-vehicle mode

When you use your CLIE handheld with the car cradle, your CLIE handheld enters in-vehicle mode.

Car Launcher home screen

You can use the Car launcher during in-vehicle mode.



➔ For details about **Car Launcher**, refer to “Using Car Launcher” on page 28.

CLIE Launcher home screen

You **cannot** use CLIE Launcher™ during in-vehicle mode.



Note

The Palm OS® standard screen is not available during in-vehicle mode.

Notes on unusable functions during in-vehicle mode

The following applications/functions cannot be used during in-vehicle mode.

- CLIE Launcher™ /Palm OS® standard screen
- Beaming
- Bluetooth™ function
- To display the alarm dialog of schedule
- Automatic power-off

➔ For details, refer to each application/function in this manual.

Normal CLIÉ mode → In-vehicle mode

When your CLIÉ handheld is mounted in the car cradle, it enters in-vehicle mode. If the car cradle is off, the CLIÉ handheld remains in normal CLIÉ mode.

If the current application is not compatible with in-vehicle mode.



Applications incompatible with in-vehicle mode.



When your CLIÉ handheld is mounted in the car cradle...*



Car Launcher appears.

* The Warning message will always displayed first, tap the screen to cancel the Warning message (page 23).

If the current application is compatible with in-vehicle mode.



Audio Player/CLIE Mail™/
Date Book/Car Setting for
each application/
StreetFinder



When your CLIÉ handheld is mounted in the car cradle...*



The application switches to in-vehicle mode.

* The Warning message will always displayed first, tap the screen to cancel the Warning message (page 23).

Tips


- If the current application is **Audio Player**, the application switches to **Music** in-vehicle mode. Playback continues only when the background play is enabled. Enable background play from **Preferences** of **Audio Player** in normal CLIÉ mode.
- If the current application is **CLIE Mail** or **Date Book**, **Mail** or **Schedule** is displayed automatically, respectively, when your CLIÉ handheld enters in-vehicle mode.
- When your CLIÉ handheld enters in-vehicle mode, **Today** is activated automatically for the first time in the morning or afternoon of the day (page 43).

■ In-vehicle mode → Normal CLIÉ mode

- When your CLIÉ handheld is detached from the car cradle, the CLIÉ handheld enters the normal CLIÉ mode.
- If the car cradle is turned off while your CLIÉ handheld is mounted in it, the CLIÉ handheld enters the normal CLIÉ mode. After 5 seconds, a caution alarm will sound. In this case, detach your CLIÉ handheld from the car cradle to turn off the alarm.
 - ➔ For details about the caution alarm, refer to “About the caution alarm” on page 27.



When your CLIÉ handheld is detached from the car cradle...

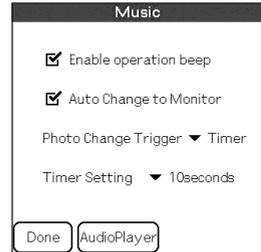

- **Car Launcher**
- Applications during in-vehicle mode

- **CLIÉ Launcher™**
- **Car Setting** for each application*¹/
Applications in normal CLIÉ mode*²

*1 If the current application is **Music**, **Mail**, **Schedule** or **Photo**, they switch to their respective setting screens.

*2 If the application is not usable in normal CLIÉ mode, **CLIÉ Launcher** appears.

Tip

If the current application is **Music** or **Monitor**, the application switches to **Audio Player** (normal CLIÉ mode) only when the background play is enabled. Enable background play from **Preferences** of **Audio Player** in normal CLIÉ mode.

.....

About Sleep mode

If your CLIÉ handheld is turned off during in-vehicle mode, it enters in-vehicle sleep mode.

To exit in-vehicle sleep mode

- Switch to in-vehicle mode:
 - turn on your CLIÉ handheld.
- Switch to normal CLIÉ mode:
 - detach your CLIÉ handheld from the car cradle.

Note

Your CLIÉ handheld battery is continuously charged during in-vehicle sleep mode.

.....

About HOLD mode

If you set your CLIÉ handheld to HOLD mode and mount your CLIÉ handheld in the car cradle, HOLD mode continues and your CLIÉ handheld enters in-vehicle mode.

- The screen is turned off after the Warning message is displayed and touch panel/button operation is not available.
 - The wireless card remote commander of the car cradle is available.
 - Car audio operation is available only when the SONY-BUS connection adapter is connected.
 - The caution alarm is available.
- ➔ For details about HOLD mode, refer to the manuals supplied with your CLIÉ handheld.

Note

Before turning off the HOLD mode, park your car in a safe place and detach your CLIÉ handheld from the car cradle, then turn off the HOLD mode.

.....

About the caution alarm

The caution alarm alerts you to not to leave your CLIÉ handheld in the car. After 5 seconds the car cradle is turned off during in-vehicle mode, the caution alarm sounds and the screen flashes.

To stop the caution alarm, do any of the following

- Detach your CLIÉ handheld from the car cradle.
- Turn on the car cradle (in-vehicle mode).
- Turn off your CLIÉ handheld.

Note

If battery power is not turned off when the ignition key is in the OFF position, the caution alarm does not sound, even if your CLIÉ handheld is in the car cradle and the ignition key is in the OFF position.

Tip

When automatic powered off is performed, the caution alarm will stop.

Basic operations

Operating the touch panel

During in-vehicle mode, it is recommended to tap the screen with your finger.

Notes

- Do not tap with excessive force.
- Be careful not to lose or damage the stylus if you use it in the car.

Using Car Launcher

Car Launcher shows applications only for in-vehicle mode.

Car Launcher home screen

(Short screen type)



To display **Car Launcher**, press the Home  button on your CLIÉ handheld.

Car Launcher home screen

(Long screen type)



To display **Car Launcher**, tap the Home  icon.

Tip


You can also display **Car Launcher** by pressing the HOME button on the wireless card remote commander.

Display items

Short screen type



Long screen type

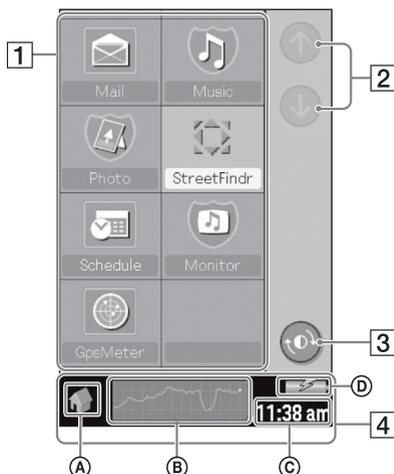

1 Application icons

Tap any icon to start an application.

2 Arrow ↑/↓ icons

Tap to display either the previous/ next page.

Available only when previous/next page exists.

3 Color mode switch icon

Tap to change day/night mode.

➔ For details, refer to “Setting color changing” on page 67.

4 Info Area

Only for the long screen type.

 
(A) Home icon

Tap to display **Car Launcher**.

(B) GPS information

Tap this area to change the GPS information.

– Speed graphic



– Latitude and Longitude



– Compass and Altitude



– Speed machine (for the entertainment only)



If you hit the jackpot (three matching symbols), you will hear fanfare.

(C) Time indicator

Displays the current time. The time on your CLIÉ handheld is updated automatically by GPS.

(D) Battery indicator

Displays when the battery is being charged.

➔ For details about the time indicator and battery indicator, refer to the manual supplied with your CLIÉ handheld.

Continued on next page

Notes

- Depending on the screen type of your CLIÉ handheld, the **Car Launcher** screen items are different. [4] is only for the long screen type of your CLIÉ handheld. If your CLIÉ handheld is the short screen type, [4] is not displayed.
- When your CLIÉ handheld is mounted in the car cradle, only the Home  button (for the short screen type) can be used. Other buttons, including the Jog Dial™ navigator, etc., cannot be used.
- GPS information ([4]-ⓑ) is displayed based on GPS data. When the GPS signal is not received or GPS signal reception conditions are poor, incorrect GPS information could be displayed.

About Screensaver

If there is no operation on the **Car Launcher** screen for a certain period of time, the screensaver is activated. The default setting of the screensaver is off.

Required formats

- JPEG on “Memory Stick” media or your CLIÉ™ handheld
- PictureGearPocket file on “Memory Stick” media or your CLIÉ handheld

Tips

- Images are automatically scaled to fit the screen.
- If no images are set in the screensaver it will not be activated.

To switch the images

Press the DSPL button on the wireless card remote commander.

To exit the screensaver

Tap the screen or press any button other than the DSPL button on the wireless card remote commander.

Using applications

Before using your CLIÉ™ handheld with the car cradle, you have to install software for the car cradle on your CLIÉ handheld.

Install the Car Cradle basic software from the supplied Installation CD-ROM. When you use the **StreetFinder®** application, install the StreetFinder® C³ Travel Navigation Software, too.

- For details about installing the Car Cradle basic software, refer to “Installing software for the car cradle” on page 15.
- For details about installing the StreetFinder® C³ Travel Navigation Software, refer to the StreetFinder User’s Guide.

Starting an application

- 1** Mount your CLIÉ handheld in the car cradle.
The Warning message is displayed.
- 2** Tap the screen to cancel the Warning message (page 23).
The **Car Launcher** screen is displayed.
- 3** Tap an application icon on the **Car Launcher** screen.
The application screen is displayed.

Another way to start an application (by the wireless card remote commander)

- 1** Mount your CLIÉ handheld in the car cradle.
The Warning message is displayed.
- 2** Press any button on the remote commander to cancel the Warning message.
The **Car Launcher** screen is displayed.

Tip

If an application screen is displayed, press the HOME button to display the **Car Launcher** screen.

- 3** Press the ◀/▶ or ▲/▼ button to select the desired application on the **Car Launcher** screen.
- 4** Press the ENTER button.
The application screen is displayed.

Continued on next page

➔ For details, refer to the listed pages.

| Applications | Details |
|-------------------------|--|
| Mail 33 | This application reads out mails on the CLIE Mail™ application. |
| Schedule 38 | This application reads out schedules/events on the Date Book application. |
| Today 43 | This application reads out current information. |
| Music 45 | This application allows you to enjoy music on the “Memory Stick” media inserted in your CLIE handheld by the car audio. |
| StreetFinder® 51 | <p>This application allows you to view maps on your CLIE handheld. By using the built-in GPS function of the car cradle, your current location can be monitored on-screen. If the route* has been downloaded to your CLIE handheld or “Memory Stick” media by performing a HotSync® operation before traveling, the Text-to-voice function will provide voice guidance.</p> <p>* Internet connection and PC required for initial Route setup</p> |
| Photo 52 | This application displays images on your CLIE handheld/“Memory Stick” media. |
| GPS Meter 53 | This application allows you to view GPS signal reception conditions. |
| Monitor 54 | This application allows you to view you the Sony car audio information on the CLIE handheld screen. |

Mail (Text-to-voice application)

The **Mail** application reads out the mail stored in the **CLIE Mail™** application. The body of mail text is not displayed. The **Mail** application restricts certain functions on the **CLIE Mail** application.

➤ For details about the **CLIE Mail** application, refer to the manuals supplied with your CLIE™ handheld.

Notes

- You cannot send/receive/edit mail.
- Some characters cannot be read out.

..... Reading out mail

1 Tap the **Mail** icon on the **Car Launcher** screen.
The **Mail** screen (the first unread mail) is displayed. The selected folder name and the number of unread mails are read out.

2 Tap the ►/■ icon on the **Mail** screen.
Reading out starts from the currently displayed mail.
At the beginning of the mail/reply message and at the end of the reply message, a chime sound will be heard.

➤ For details about reply messages, refer to “About filtering” on page 36.

Note

If there is no mail in the current folder, “NO MAIL” is displayed. Only the folder switch icon for the **Mail** application is available.

To stop reading out

Tap ►/■.

To adjust the volume

Press the VOL +/- buttons.

To lower the volume quickly

Press the ATT button on the side of the car cradle (page 12).

To configure the Mail settings

➤ For details, refer to “Configuring the Mail settings” on page 70.

Display items

Notes

- If a name consists of many characters, the end is displayed as “...”
- If there is no mail in the current folder, “NO MAIL” is displayed. Only the folder switch icon for the **Mail** application is available.



1 Folder name

Displays the folder name. The folder name is given on the **CLIE Mail** application.

- ➔ For details about folder name, refer to the manuals supplied with your CLIE handheld.

2 Number of mails in the folder

current mail number/total number of mails (number of unread mails)

3 Read/unread icon



: read icon



: unread icon

4 Subject of mail

5 Sender of mail

- If there is a sender name, it is displayed.
- If there is only the mail address of the sender, the name of the sender is searched for by **Address Book** and displayed. If there is no name in the **Address Book**, the mail address is displayed.

- ➔ For details about **Address Book**, refer to the manuals supplied with your CLIE handheld.

6 Reading out animation (Voice animation)

- ➔ For details about Voice animation setting, refer to page 69.

7 icons

For details, refer to page 36.

Tip

You cannot go to the previous/next mail from the first/last one.

8 icon

To start/stop reading out the mail.

9 **Folder switch icon**

When the folder switches, current read out stops and then the folder name and the number of unread mails is read out and the unread mail is displayed. (If there are no unread mails, the first read mail is displayed.)

Tip

If there is only one folder, the folder switch icon will not be available.

10 **Length of mail body**

The number of  symbols increases according to the mail length. The attached file is not included.

11 **Date of mail**

Displays the date of a mail by month/day (day of the week) and hour/minute.

12 **Image of sender**

If an image of the sender is in **Address Book**, the image is displayed on the screen.

➔ For details about **Address Book**, refer to the manuals supplied with your CLIE handheld.

13 / icons

: unread skip icon

- If the 'Mark a message as read' setting of Mail settings is 'when starting'/'never' (page 70) :
 - changes a read mail to unread, and skips to the next mail.
 - keeps an unread mail unread, and skips to the next mail.

: read skip icon

- If the 'Mark a message as read' setting of Mail settings is 'when finished' (page 70) :
 - changes an unread mail to read, and skips to the next mail.
 - keeps a read mail read, and skips to the next mail.

Tip

If you tap the  or  icon while the mail is being read out, the current reading out stops and switches to the next mail, which is then read out.

While read out is stopped, you cannot start read out of the next mail by tapping the  or  icon.

14 **Progress bar**

The progress bar shows you the mail read out status.

7 ⏪/⏩ icons

| | |
|---|---|
| Go to the beginning of the current mail | Tap ⏪ after reading out the header. |
| Go to the beginning of the previous mail | <ul style="list-style-type: none">• Tap ⏪. (While the header is reading out.)• Tap ⏪ twice. (While the body of mail is reading out.) |
| Go to the previous mail | Tap ⏪ repeatedly. |
| Go to the beginning of the next mail | Tap ⏩. |
| Go to the beginning of a following mail | Tap ⏩ repeatedly. |
| Go backwards | Press and hold ⏪. |
| Go forwards | Press and hold ⏩. |

..... About filtering

Filtering is to filter the contents of the mail to prevent the read out of a specific letter string when the body of the mail is read.

➔ For details about filtering setting, refer to “Configuring the Mail settings” on page 70.

Content

Text from an original mail, such as a reply, will also be read out.

If the first character of a line matches a character stored in the filter (page 71), a chime sound will be heard at the beginning and end of a reply message when the mail is read out.

Characters stored in the filter are not read out.


Signature

Letter strings corresponding to the signature are not read out. You need to store a signature beforehand (page 71).

Symbol

Symbols are special characters in your mail (such as “&,” “*,” “_,” etc.). Only blocks of contiguous symbols containing fewer symbols than the number set in the **Symbol filter** (page 71) will be read out.

Example: If you select “4 or more” on the **Use Symbol filter** setting (page 71).

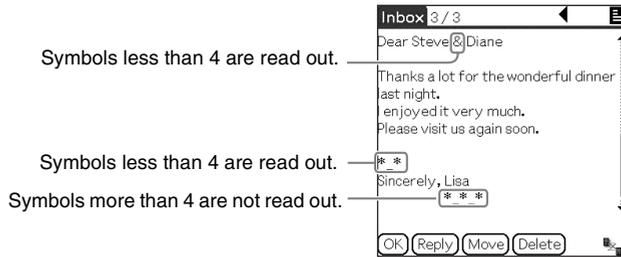

Schedule (Text-to-voice application)

The **Schedule** application reads out the schedules/events stored in the **Date Book** application on your CLIÉ™ handheld.

➤ For details about **Date Book**, refer to the manuals supplied with your CLIÉ handheld.

Notes

- You cannot edit the schedule/event.
- Some characters cannot be read out.
- The current schedule/event is updated automatically.

If there is no schedule/event of the current day, the following schedule/event within the 'Search next schedule' (page 74) is displayed.

- All past schedules/events are ignored.

Reading out a schedule/event

Tap the **Schedule** icon on the **Car Launcher** screen.

The **Schedule** screen is displayed and the current/next schedule starts to read out.

To stop reading out

Tap ►/■.

To adjust the volume

Press the VOL +/- buttons.

To lower the volume quickly

Press the ATT button on the side of the car cradle (page 12).

To configure the Schedule settings

➤ For details, refer to "Configuring the Schedule settings" on page 74.

Various reading out modes

Normal reading out mode

The schedule/event continues to be read out from the beginning to the end of the current day.

Tip

You can set whether or not to read out the event (page 74).

Start time reading out mode

The schedule starts to read out automatically when the start time of the schedule is reached.

Tips

- This mode starts automatically even if **Schedule** is not activated.
- An event is read out only during Normal reading out mode.

Alarm reading out mode

The schedule starts to read out automatically when the alarm time is reached.

- For details about setting the alarm, refer to the manuals supplied with your CLIÉ handheld.


Tips

- This mode starts automatically even if **Schedule** is not activated.
- An event is read out only during Normal reading out mode.
- If the next alarm time is reached during Alarm reading out mode, after reading out the current schedule, the next schedule is read out.

Display items

Note

If a name consists of many characters, the end is displayed as “...”

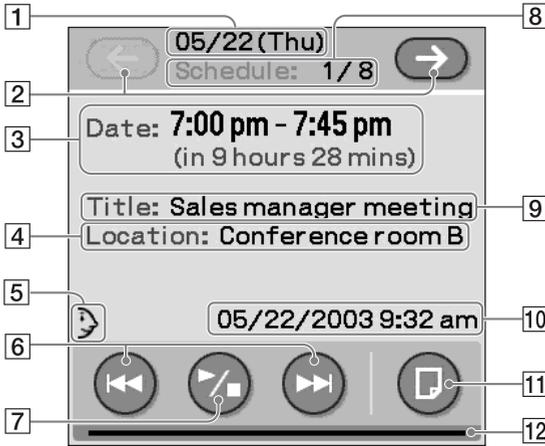

1 Date of the schedule/event

Displays the date of a schedule/event by month/day/day of the week. If the date is current day, the ← icon is not available.

2 ←/→ icons

To go to the previous/next day.

Tip

You cannot go to a previous day from the present day.

3 Time of schedule

- The remaining time (hour/minute) before the start of a schedule is shown in parentheses. It is updated automatically.
- In the case of event, “event” is displayed. If the starting/ending day is stored on event, they are displayed.

- If the current schedule is in progress, “now on schedule” is displayed.

4 Location of schedule/event

Any text input placed in the parentheses of the title of the event/schedule is interpreted to be the location.

- ➔ For details about the location setting, refer to page 74.

Tip

If schedule/event location is not stored, it is not read out/displayed.

5 Reading out animation (Voice animation)

- ➔ For details about the Voice animation setting, refer to page 69.

6 | ⏪/⏩ icons

For details, refer to page 42.

Tips

- The schedule/event cannot go to the previous one:
 - If the current schedule/event is the first one of today.
 - If the current schedule/event is in progress.
- The schedule/event proceeds into the next day.
 - If the current schedule/event is the last one of the day.

7 | ▶/■ icon

To start/stop reading out a schedule/event.

Tips

- If you tap the ▶/■ icon, all current/following schedules of the same day will be read out.
- Reading out of a schedule/event again will always start from the beginning.
- If there is no schedule/event, “NONE” is displayed.
 - If you tap ▶/■, “no schedule” is read out.

8 | Number of schedules/events on the current day

The current schedule number/total number of schedules of the current day

9 | Title of schedule/event

Displays the schedule/event title.

Tip

If a schedule/event title is not stored, nothing is read out/displayed.

10 | Present time

Displays the present date by month/day/year/hour/minute.

11 | Note icon

To read out the note attached to an event/schedule.

- If there is no note,  is not available.
- If you tap  while reading out is stopped, only note starts to read out.
- If you enable ‘Read notes’ (page 74),  is not usable while reading out.
- If you do not enable ‘Read notes’ (page 74), when you tap , the note is read out after the schedule/event has been read out.

12 | Progress bar

The progress bar shows you the schedule/event read out status.

6 ⏪/⏩ icons

Go to the beginning of the current schedule/event Tap ⏪. (While reading out the current schedule/event.)

Go to the beginning of the previous schedule/event Tap ⏪.

Go to the previous schedule/event Tap ⏪ repeatedly.

Go to the beginning of the next schedule/event Tap ⏩.

Go to the beginning of a following schedule/event Tap ⏩ repeatedly.

Go backwards Press and hold ⏪.

Go forwards Press and hold ⏩.

Today (Text-to-voice application)


When your CLIE™ handheld enters in-vehicle mode for the first time in the morning or afternoon of the day, **Today** activates automatically and starts to read out today's date, current/next schedule and number of unread mails. After reading out, **Car Launcher** or the previous application is displayed automatically.

This function is linked to the **CLIE Mail™** and **Date Book** application of the normal CLIE mode.

Tips

- **Today** appears only when it is enabled (page 67).
- Some characters cannot be read out.

Display items

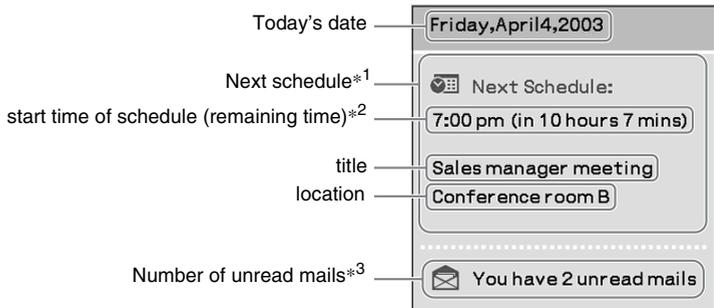

*1 If there is no schedule, no display items appear, and “no schedule” is read out.

*2 If the current schedule is in progress, “end time of schedule (now on schedule)” is read out/displayed.

*3 If there are no unread mails, no display item appear and “no unread mail” is read out.

To adjust the volume

Press the VOL +/- buttons.

To lower the volume quickly

Press the ATT button on the side of the car cradle (page 12).

To stop Today

Press the Home  button (short screen type), the Home icon (long screen type) or any button (other than the VOL +/- button) on the wireless card remote commander.

Reading out is stopped and returns to **Car Launcher** or the previous application.

Tips

- You can activate the **Schedule** or **Mail** application by tapping on the screen area of each application on the **Today** screen.
- If **Today** is assigned to any of the S1 to S6 buttons (page 64) and you press the button, **Today** is activated. This is the only way to activate **Today** manually since there is no icon available on the **Car Launcher** screen.

Music

Using the **Music** application, you can listen to music on the “Memory Stick” media inserted in your CLIÉ™ handheld by a car audio.

To listen to music, do any of the following.

- Using the built-in FM transmitter (page 46)
 - The car cradle has a built-in FM transmitter. By tuning the car audio radio frequency to that of the FM transmitter, you can listen to music in your CLIÉ handheld via the car audio speakers.
- Connecting the car cradle to a Sony car audio via the SONY-BUS connection adapter (optional) (page 47)
- Using a cassette adapter (optional) (page 48)
 - If your car audio has a cassette player, a cassette adapter can be used.

Listening to music

1 Complete each setting, refer to the instructions on the following pages.

2 Tap the **Music** icon on the **Car Launcher** screen.
The **Music** screen is displayed.

3 Tap ►/■ on the **Music** screen.
Music from your CLIÉ handheld is heard through the car audio speakers.

To adjust the volume

Use the volume control of the car audio to adjust the volume level.

To configure the Music settings

► For details, refer to “Configuring the Music settings” on page 72.

Note

Playback stops if **PROGRAM** play is set to a different mode during in-vehicle mode.

Tips

- Background play is always enabled during in-vehicle mode. Playback continues if another application is selected.
- If background play is enabled, playback continues when your CLIÉ handheld enters in-vehicle mode. (Enable background play from **Preferences** of **Audio Player** in normal CLIÉ mode.)
- The system sound depends on the **Music** setting. Only when the **System Sound** (page 62) is enabled, the system sound of **Music** will be heard. To adjust the volume level of the system sound, refer to page 62.
- A-B repeat function is not available in-vehicle mode. When your CLIÉ handheld returns to normal CLIÉ mode, A-B repeat function is reinstated.

..... Using the built-in FM transmitter

- The built-in FM transmitter of the car cradle modulates the audio signal into an RF (Radio Frequency) signal so it can be received by the FM tuner of your car audio. You can enjoy music in your CLIÉ handheld with your car audio even if it does not have input terminals for other devices, or if the SONY-BUS connection adapter (optional) is not connected.
- If interference noise occurs during audio playback, change the frequency of the transmitter.

- 1** Enable and set the **FM Transmitter** in the **Sound** configuration of **Car Setting** (page 62).
- 2** Mount your CLIÉ handheld in the car cradle.
- 3** Select **Tuner** as the source on the car audio.
- 4** Tune the frequency of the car audio to that which you set in **Car Setting**.
- 5** Tap the **Music** icon on the **Car Launcher** screen.
The **Music** screen is displayed.
- 6** Tap ►/■ on the **Music** screen.
Music from your CLIÉ handheld is heard through the car audio speakers.

To adjust the volume

Use the volume control of the car audio to adjust the volume level.

Note

Music data information is not displayed on the car audio display.

.....

Using the SONY-BUS connection adapter (optional)

You can operate the **Music** application with a Sony car audio by connecting the SONY-BUS connection adapter. The track number and elapsed playing time is displayed on the Sony car audio display.

► For details about the SONY-BUS connection adapter, refer to the manual supplied with the SONY-BUS connection adapter.

Car Cradle Ready Sony car audio units are;

- (1) Units with CD/MD Changer Control from 2003 forward
- (2) Following units

**MEX-5DI, CDX-MP70, CDX-MP30, CDX-M730, CDX-M630,
CDX-CA900X, CDX-CA720X, CDX-CA700X, CDX-CA705M,
XR-CA630X, XR-CA430X**

1 Connect the SONY-BUS connection adapter to a Sony car audio and the car cradle.

► For details about connection, refer to the Installation/Connections manual of the car cradle and the SONY-BUS connection adapter.

2 Tap the **Music** icon on the **Car Launcher** screen.
The **Music** screen is displayed.

3 Tap **▶/■** on the **Music** screen.

Music from your CLIÉ handheld is heard through the car audio speakers.
“PDA” or “MD” is displayed on the Sony car audio.

To select PDA (your CLIÉ handheld) as a source on the Sony car audio

The Sony car audio recognizes your CLIÉ handheld as an MD unit.

When you want to play your CLIÉ handheld, press the SOURCE button to select “PDA” or “MD.” If “PDA” appears in the source display, your CLIÉ handheld starts to play. If “MD” appears in the source display, press the MODE button to select your CLIÉ handheld to start playback.

To adjust the volume

Use the volume control of the car audio to adjust the volume level.

Notes

- When playback stops, the clock (OFF) display appears on the Sony car audio display.
- The **Music** screen switches to the **Monitor** screen depending on the setting (page 73).
- LINE OUT is turned off and the built-in FM transmitter is deactivated when the SONY-BUS connection adapter is connected.

Using a cassette adapter (optional)

A cassette adapter enables you to listen to music on your CLIÉ handheld by the car audio cassette player.

➔ For details about the cassette adapter, refer to the manual supplied with the cassette adapter.

- 1** Connect the stereo mini plug of the cassette adapter to the LINE OUT of the car cradle.
- 2** Insert the cassette adapter into the cassette player of the car audio.
- 3** Select **TAPE** as the source on the car audio.
- 4** Tap the **Music** icon on the **Car Launcher** screen.
The **Music** screen is displayed.
- 5** Tap **▶/■** on the **Music** screen.
Music from your CLIÉ handheld is heard through the car audio speakers.

To adjust the volume

Use the volume control of the car audio to adjust the volume level.


Notes

- Music information is not displayed on the car audio display. Music on your CLIÉ handheld is recognized as a cassette tape.
- The output level of LINE OUT is set as cassette adapter input level.

Display items

Notes

- “No Music Data” indicates there is no music data in the “Memory Stick” media inserted in your CLIÉ handheld.
- “No Memory Stick” indicates there are no “Memory Stick” media and no music data in your CLIÉ handheld.

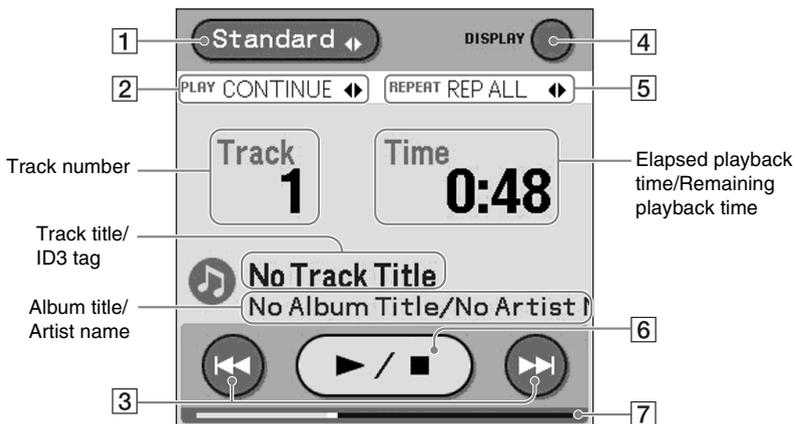

1 Screen mode icon

To select the **Standard/List/Photo/Effect** screen.

- **List** screen:
 - To show another list page, tap the arrow \downarrow/\uparrow .
 - To switch the **Title/Album/Artist/Genre** list, tap the **DISPLAY** icon.
- **Photo** screen:
 - To display a photo image in full screen, tap the  icon on the photo screen. To return to the normal photo screen, tap anywhere on the full screen.

Tips

- To set the photo change trigger, refer to page 73.
- The same set of images selected in Screensaver (page 66) is displayed.
- **Effect** screen:
 - To switch the effect pattern (5 types are stored), tap the **DISPLAY** icon.

Tip

Depending on the effect pattern, the album title/artist name is not displayed.

Continued on next page

2 Play mode icon

To select **CONTINUE/SHUFFLE/REVERSE/PROGRAM***.

* **PROGRAM** is available when your CLIÉ enters in-vehicle mode only if **Program Play** is selected and background play is enabled. (Enable background play from **Preferences of Audio Player** in normal CLIÉ mode.)
If you select another play mode, you cannot select **PROGRAM** again.

➔ For details about the Play mode, refer to the manuals supplied with your CLIÉ handheld.

Notes

- When the play mode changes from **PROGRAM** mode to **CONTINUE** mode, **Program Play** play list is canceled, the default play list is activated and playback stops. When your CLIÉ handheld returns to the normal CLIÉ mode, **Program Play** is reinstated.
- The play mode selected during in-vehicle mode is returned to the normal CLIÉ mode setting when your CLIÉ handheld returns to normal CLIÉ mode.

3 ⏪/⏩ icons

- Tap to go to the previous/next track.
 - Press and hold to go backwards/forwards through tracks.
- ➔ For details, refer to the manuals supplied with your CLIÉ handheld.

Tip

These functions can be operated by the car audio only when the SONY-BUS connection adapter is connected.

4 DISPLAY icon

- To switch between elapsed and remaining playback time on the **Standard** screen.
- To switch the listed item of **Title/Album/Artist/Genre** on the **List** screen.
- To switch the effect pattern on the **Effect** screen.

5 REPEAT icon

To switch **REP OFF*/REP ALL/REP 1**.

* If you connect the SONY-BUS connection adapter, **REP-OFF** is not available.

Notes

- The repeat mode selected during in-vehicle mode is returned to the normal CLIÉ mode setting when your CLIÉ handheld returns to normal CLIÉ mode.
- A-B repeat function is not available during in-vehicle mode.

6 ▶/■ icon

To play/stop the track.

7 Progress bar

The progress bar shows you track playback status.

StreetFinder® C³ Travel Navigation Software

This application allows you to view maps on your CLIÉ handheld. By using the built-in GPS function of the car cradle, your current location can be monitored on-screen. If the route* has been downloaded to your CLIÉ handheld or “Memory Stick” media by performing a HotSync® operation before traveling, the Text-to-voice function will provide voice guidance.

* Internet connection and PC required for initial Route setup
StreetFinder® C³ Travel Navigation Software is owned by Rand McNally & Company.

➔ For details, refer to the StreetFinder User’s Guide.

Preparing

- Installing the StreetFinder® C³ Travel Navigation software on your CLIÉ™ handheld after installing the Car Cradle basic software.
 - ➔ For details, refer to the StreetFinder User’s Guide.
- Installing and connecting the supplied GPS antenna.
 - ➔ For details, refer to the Installation/Connections manual of the car cradle.

To start the StreetFinder application

Tap the **StreetFinder** icon on the **Car Launcher** screen.
The **StreetFinder** screen is displayed.

Photo

The **Photo** application displays the images on your CLIÉ™ handheld/“Memory Stick” media.

- All images on your CLIÉ handheld and “Memory Stick” media are displayed.
- Images edited by your CLIÉ handheld can be displayed.
- ➔ For details about organizing images, refer to the manuals supplied with your CLIÉ handheld.

Required formats

- JPEG on “Memory Stick” media or your CLIÉ handheld
- PictureGearPocket file on “Memory Stick” media or your CLIÉ handheld

To start the Photo application

Tap the **Photo** icon on the **Car Launcher** screen.
The image is displayed.

To switch the images

- Press the DSPL button on the wireless card remote commander.
- The images are switched at the specified time set in **Photo** configuration of **Car Setting** (page 73).

To exit the Photo application

Tap the **Photo** screen or press any button other than the DSPL button on the wireless card remote commander.

To configure the Photo settings

- ➔ Refer to “Configuring the Photo settings” on page 73.

Note

If stored images are numerous or require considerable data, display time may be delayed.

Tips

- Images are automatically scaled to fit the screen.
- If no images are stored or are not available, “No data to be displayed. Tap the screen to quit.” is displayed.

GPS Meter

This application allows you to view GPS signal reception conditions.

To start the GPS Meter application


Tap the **GPS Meter** icon on the **Car Launcher** screen.
The **GPS Meter** screen is displayed.

To exit the GPS Meter screen.

Press the Home  button on your CLIE™ handheld (short screen type), tap the Home icon (long screen type) or press HOME on the wireless card remote commander.

.....

Display items

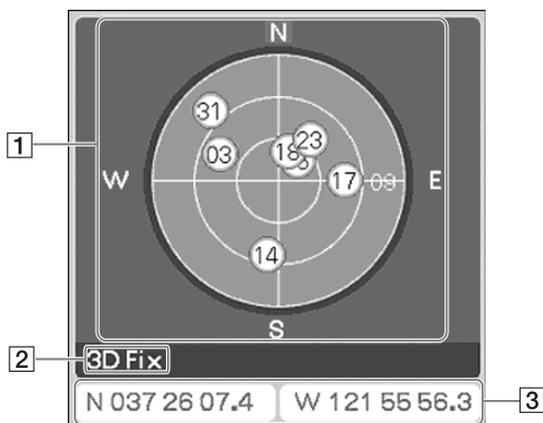

1 GPS satellite Sky position

The satellite position is displayed as an altitude from 0° to 90°.

- Solid satellite ball: Locked
- Satellite number only: Unlocked

2 GPS State

Displays current GPS status and GPS fix status.

- **GPS Off:** GPS is off.

- **Searching...:** Searching for a receivable satellite.
- **2D Fix:** Current location positioning available.
- **3D Fix:** 3D (three dimensional) positioning (including altitude) available.

3 Latitude and Longitude

Displays your current latitude and longitude.

Monitor

The **Monitor** application shows you playing/receiving information (title list of the disc in the CD/MD changer, title list of the FM station memo) on a Sony car audio.

Displaying the playing/receiving information on the Sony car audio on the screen of your CLIE™ handheld

To use the **Monitor** application, the SONY-BUS connection adapter (optional) and installation of the **Audio Monitor** software are necessary.

- ➔ For details about compatible Sony car audio units, refer to page 47.
- ➔ For details about the SONY-BUS connection adapter, refer to the manual supplied with the SONY-BUS connection adapter.
- ➔ For details about installing the **Audio Monitor** software, refer to step 5 on page 16.

1 Connect the SONY-BUS connection adapter between a Sony car audio and the car cradle.

- ➔ For details about connection, refer to the Installation/Connections manual of the car cradle and the SONY-BUS connection adapter.

2 Tap the **Monitor** icon on the **Car Launcher** screen. The **Monitor** screen is displayed.

3 Select a source on the car audio.

The playing/receiving information is displayed on the **Monitor** screen.

Notes

- If you select “PDA” as the source, the **Monitor** screen changes to the **Music** screen automatically.
- Nothing is displayed on the **Monitor** screen, if the SONY-BUS connection adapter (optional) is not connected between a Sony car audio and the car cradle. If you do not connect the SONY-BUS connection adapter, it is recommended not to install the **Monitor** application (**Audio Monitor** software, page 16), to save the memory of your CLIE handheld.

Display items

You can switch the **Standard** and **List** screen on the **Monitor** screen by using the **Standard/List** switch icon.


► For details about display items, refer to the manual supplied with the Sony car audio.

CD/MD

Standard screen



List screen

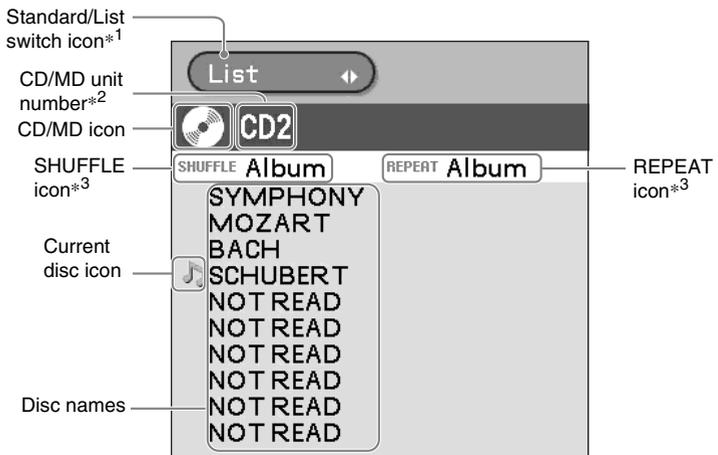


Continued on next page

- *1 Available only when one or more optional CD/MD changers are connected. To display the **List** screen, tap the **Standard/List** switch icon. If there is no list, "PUSH LIST BUTTON ON HEAD UNIT" is displayed. In this case, press the LIST button of the Sony car audio.
- *2 Available only when two or more optional CD/MD units are connected.
- *3 For details about SHUFFLE/REPEAT play, refer to the manual supplied with the Sony car audio.
- *4 Available only when an optional CD/MD changer is connected.
- *5 Available only when an MD containing groups is inserted in the Sony car audio and played.
- *6 Available only when an MP3 file is played or CD TEXT disc contains displayable information.
- *7 If the disc has been labeled by the Sony car audio using the CUSTOM FILE function, Disc Memo is displayed accordingly.
- *8 Only for CD TEXT discs with the artist name.


Notes

- Depending on the connected unit (Sony car audio), the display item may differ.
- If a name consists of many characters, the end is displayed as "..."
- Some characters cannot be displayed. Characters and signs which cannot be displayed appear as "*."
- Display items are not scrolled.
- The Sony car audio recognizes your CLIÉ handheld as an MD unit. When "PDA" is selected as a source, "MD" is displayed on the **Monitor** screen and the screen automatically changes to the **Music** screen.

Tuner

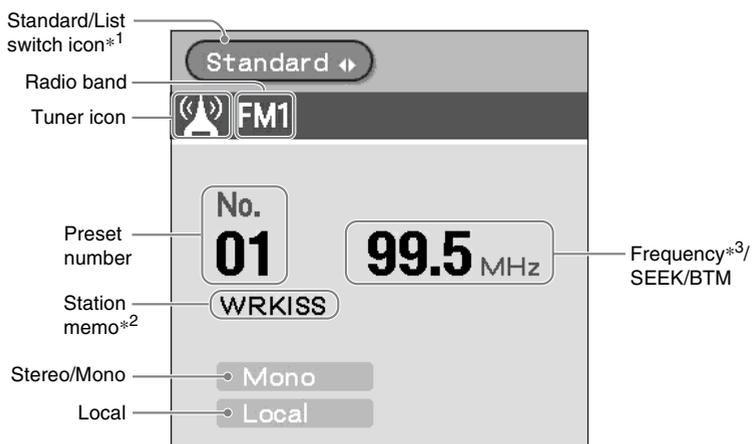

List screen

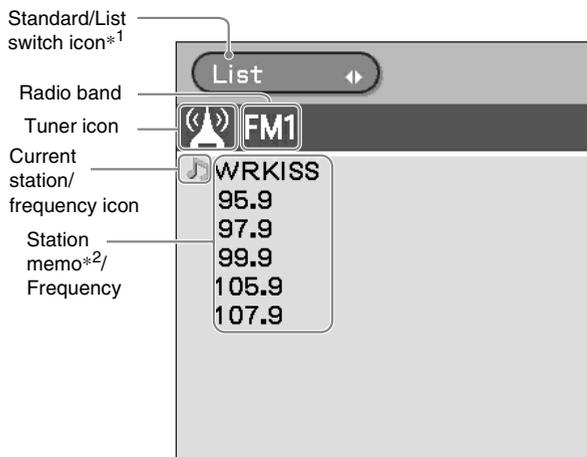

*1 To display the **List** screen, tap the **Standard/List** switch icon. If there is no list, “PUSH LIST BUTTON ON HEAD UNIT” is displayed. In this case, press the LIST button of the car audio (depending on the Sony car audio, the List screen may not display when you press the LIST button on the Sony car audio).

*2 Available only when a station memo is stored.

*3 “--ch” is displayed when a TV signal is received.

Cassette Tape



* The icon does not apply.

Others

- When the Clock (OFF) display is displayed on the Sony car audio, the current date and the clock is displayed on the **Monitor** screen. The time is controlled by the CLIÉ handheld. Indicated time may differ from that of the Sony car audio.
- When AUX is selected, “AUX” is displayed.
- When an undefined unit is selected, source name and some information are displayed.

Other functions

Car Setting

Car Setting enables you to customize the setting options on your CLIÉ™ handheld for in-vehicle mode.

Displaying the Car Setting screen for each menu

Notes

- When you operate **Car Setting**, detach your CLIÉ handheld from the car cradle. During in-vehicle mode, **Car Setting** is not displayed.
- After parking your car in a safe place, detach your CLIÉ handheld from the car cradle and operate.

- 1** Detach your CLIÉ handheld from the car cradle.
- 2** Tap the **Car Setting** icon on the **CLIE Launcher** screen.
The **Car Setting** screen is displayed.
- 3** Tap the arrow ▼ in the top right-hand corner of the screen and select the **Car Setting** menu you want to configure.

Car Setting menu items

Setting options may be added by installing new applications or software for peripheral devices.

➔ For details, refer to the listed pages.

| Settings | Details |
|----------------------------|--|
| Uninstall 61 | Uninstalls the Car Cradle basic software and Audio Monitor software on your CLIE handheld. |
| Sound 62 | Configures the settings for the Sound function. (System Sound/Lower audio volume during voice playback/FM Transmitter/Delay time to Sony Car Audio) |
| Display Order 63 | Customizes the display order for Car Launcher . |
| App Buttons 64 | Customizes applications assigned to application buttons on the wireless card remote commander. |
| Screensaver 65 | Configures the settings for the Screensaver function. (Enable screen saver/Activation time/Display interval/Selection of images/Sort by) |
| Miscellaneous 67 | Configures the settings for Miscellaneous. (Attach and Detach alert/Today popup/Color changing) |
| Voice Parameters 69 | Sets the voice pitch, speed and animation for the Text-to-voice application. |
| Mail 70 | Configures the settings for the Mail application. |
| Music 72 | Configures the settings for the Music application. |
| Photo 73 | Configures the settings for the Photo application. |
| Schedule 74 | Configures the settings for the Schedule application. |

.....

Uninstalling the Car Cradle basic software on your CLIÉ handheld

If you uninstall, you will not be able to use any applications/functions for the car cradle. When you mount your CLIÉ handheld in the car cradle after uninstallation, your CLIÉ handheld remains in normal CLIÉ mode.

1 Tap the arrow ▼ in the top right-hand corner of the **Car Setting** screen and select **Uninstall**.

The **Uninstall** setting dialog box is displayed.

2 Tap **Yes** or **No**.

- **Yes**: The Car Cradle basic software is uninstalled. The confirmation dialog box is displayed. Tap **Reset**.
- **No**: To cancel the uninstallation.

Note

When using the Car Cradle basic software again, you need to reinstall it.

- ➔ For details about reinstallation, refer to “Installing software for the car cradle” on page 15.

Setting Sounds

You can configure various sound settings.

■ Displaying the Sound screen

Tap the arrow ▼ in the top right-hand corner of the **Car Setting** screen and select **Sound**.

The **Sound** setting screen is displayed.

Setting the System Sound

You can adjust the volume level of the system sounds.

Tap the arrow ▼ next to **System Sound** and select the desired volume level or **Off**.

Setting Lower audio volume during voice playback

You can select whether or not to lower music volume when the Text-to-voice application is used.

Tap the **Lower audio volume during voice playback** check box.

When the check box is checked, music volume is lowered.

Setting the FM Transmitter

➔ For details about the FM transmitter, refer to page 46.

1 Tap the **FM Transmitter** check box if you use the FM transmitter.

Frequency is displayed.

2 Tap the arrow ▼ or ▲ next to **Frequency** and select the desired frequency.

You can select a frequency from 95.9 MHz to 101.9 MHz.

Setting the Delay time to Sony Car Audio

You can set playback start time to provide time for the Sony car audio to recognize your CLIÉ handheld. This setting prevents the beginning of a track being cut off.

Tap the arrow ▼ next to **Delay time to Sony Car Audio** and select the desired delay time.

Setting the Display Order

You can customize the display order for **Car Launcher**.

1 Tap the arrow ▼ in the top right-hand corner of the **Car Setting** screen and select **Display Order**.

The **Display Order** setting screen is displayed.

2 Tap an application you want to move, and then tap **Move Up** or **Move Down**.

Applications for the car cradle are listed.

– **Move Up**: To move the selected application up.

– **Move Down**: To move the selected application down.


3 Tap **Preview**.

The Car Launcher preview screen is displayed.

You can preview the display order.

① Tap the arrow ↓/↑ to go to the previous/next screen.

② Tap **Exit** to return to the **Display Order** setting screen.

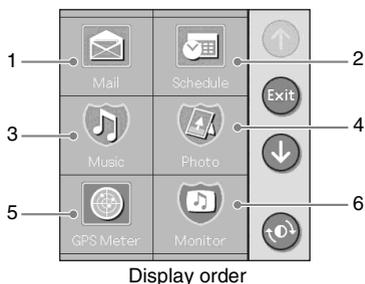

Tips

- The application icons are not available.
- The color changing  icon is available.

..... Assigning Applications to Application Buttons

You can assign your favorite applications to the application buttons (S1 to S6) on the wireless card remote commander for quick access to them and display them on the **Car Launcher** screen.

- The default setting is:
S1 = **Today**
The others = appear in alphabetical order.

1 Tap the arrow ▼ in the top right-hand corner of the **Car Setting** screen and select **App Buttons**.
The **App Buttons** setting screen is displayed.


S1 to S3: To assign applications to the S1 to S3 buttons on the wireless card remote commander.

S4 to S6: To assign applications to the S4 to S6 buttons by holding down the S1 to S3 buttons on the wireless card remote commander.



2 Tap **S1 to S6**, then tap a listed application you want to assign.

Applications for the car cradle are listed.

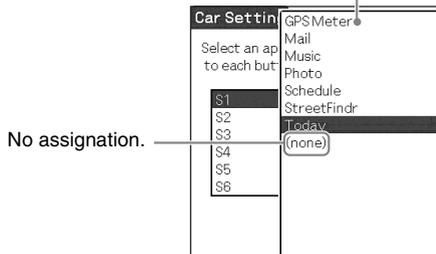

.....

Setting Screensaver


1 Tap the arrow ▼ in the top right-hand corner of the **Car Setting** screen and select **Screensaver**.

The **Screensaver** setting screen is displayed.

2 Tap the **Enable screen saver** check box.

Tips

- When the check box is cleared, the items shown below **Enable screen saver** do not appear.
- Images set to screensaver are used for the **Photo** screen of the **Music** application. The **Photo** screen is not affected, regardless of the check box setting.

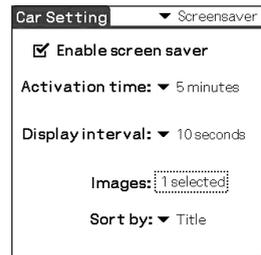

3 Tap the arrow ▼ next to **Activation time** and select the desired time.

4 Tap the arrow ▼ next to **Display interval** and select the desired display interval.

- 5** Tap the box next to **Images** and select images.
The **Select images** screen is displayed.


Tip

If there are no images, “No data to select” is displayed. Store images in your CLIÉ handheld or a “Memory Stick” media.

- ① Tap the check box to select images.

Unselect: To cancel the selection of all images.

Select all: To select all images on “Memory Stick” media or your CLIÉ handheld.

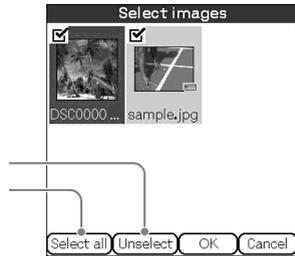

- ② Tap **OK**.

The number of selected images are displayed in the box next to **Images**.

- 6** Tap the arrow ▼ next to **Sort by** and select the desired sort.

Title: file name

Date: date of file

Random: random order

Setting Miscellaneous

■ Displaying the Miscellaneous screen

Tap the arrow ▼ in the top right-hand corner of the **Car Setting** screen and select **Miscellaneous**.

The **Miscellaneous** setting screen is displayed.

Setting attach/detach alert

You can select whether or not to enable the alert when your CLIÉ handheld changes between in-vehicle mode and normal CLIÉ mode.

Tap the **Enable Attach/Detach alert** check box.

When the check box is checked, the alert is enabled.

Setting the Today popup

You can select whether or not to enable the activation of **Today** application automatically.

► For details about the **Today** application, refer to page 43.


Tap the **Enable Today popup** check box.

When the check box is checked, **Today** is enabled.

Setting color changing

You can set the screen color mode, day mode or night mode.

All applications have both modes, which automatically change at the specified time set by you.

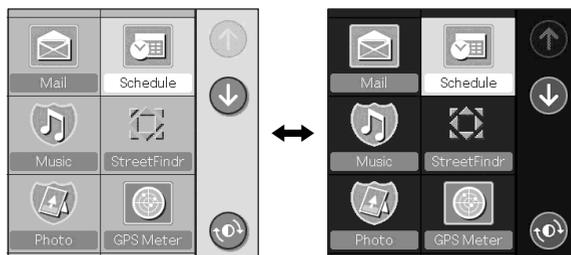

Day mode

Night mode

Continued on next page

1 Tap the **Enable color changing** check box.

When the check box is checked, the color changes automatically at the specified time set by you.

Tips

- When the check box is cleared, the items in the following steps do not appear.
- To disable the automatic screen color change, you need to clear the check box.
The color changes only when you tap the  icon on the **Car Launcher** screen.

2 Tap the box next to **Sunrise**.

The **Sunrise time** screen is displayed.

- ① Tap each box to set the hour and minute.

Note

If you set the **Sunrise** time later than **Sunset** time, an error message appears.

- ② Tap **OK**.

3 Tap the box next to **Sunset**.

The **Sunset time** screen is displayed.

- ① Tap each box to set the hour and minute.

Note

If you set the **Sunset time** earlier than **Sunrise** time, an error message appears.

- ② Tap **OK**.

To manually change the screen color

Tap the  icon on the **Car Launcher** screen.

The color changes regardless of any setting.

.....

Setting the voice pitch, speed and animation for reading out (Text-to-voice function)

You can set the voice pitch, speed and animation of reading out (Text-to-voice function).

This setting applies to all Text-to-voice applications.

- 1** Tap the arrow ▼ in the top right-hand corner of the **Car Setting** screen and select **Voice Parameters**.
The **Voice Parameters** setting screen is displayed.
- 2** Tap the arrow ▼/▲ or the slider next to **Pitch** and select the desired pitch.
You can select the pitch from 0 (Lowest) to 10 (Highest).
The default setting is 5.
- 3** Tap the arrow ▼/▲ or the slider next to **Speed** and select the desired speed.
You can select the speed from 0 (Slowest) to 10 (Fastest).
The default setting is 5.
- 4** Tap the **Enable Voice Animation** check box.
When the check box is checked, the animation is enabled.
- 5** Tap **Done**.

.....

Configuring the Mail settings

You can configure the settings for the **Mail** application.

- 1** Tap the arrow ▼ in the top right-hand corner of the **Car Setting** screen and select **Mail**.
The **Mail** setting screen is displayed.
- 2** Tap the check box next to each option to select it. Refer to the explanation below for details about each option.
- 3** Tap **Done**.

Tip

When you tap the **CLIE Mail** icon at the bottom of the **Mail** setting screen, the **CLIE Mail** application (normal CLIE mode) is activated.

To go to the previous/next page.

Tap <</>>.

There are 4 pages.

| | |
|---------------------------------------|---|
| Read: Date/Subject/ Sender | <ul style="list-style-type: none">• The order of selected items is fixed. Date ➔ Subject ➔ Sender• You have to check at least one box in this group. |
| Mark a message as read | <ul style="list-style-type: none">• when starting: after reading out the header• when finished: after reading out all• never: do not change |
| Read | The target to read out: <ul style="list-style-type: none">– all mail: all read mail and unread mail– unread mail only: read out only unread mail |
| Mail folders to open | <ul style="list-style-type: none">• One or more folders can be selected.• The folder names which are stored on the CLIE Mail application are displayed.<ul style="list-style-type: none">➔ For details about the folder, refer to the manuals supplied with your CLIE handheld.• If no folder is stored, only the Inbox is displayed. |

Filter settings

- **Use Content filter:**

Text from an original mail, such as a reply, will also be read out. If the first character of a line matches a character stored in the filter, a chime sound will be heard at the beginning and end of a reply message when the mail is read out. Characters stored in the filter are not read out. You can store up to 5 characters.

Tap the **Use Content filter** check box then enter the desired character in each field.

- **Use Signature filter:**

► For details, see below.

- **Use Symbol filter:**


Tap the arrow ▼ and select the desired number. If you want to be read the first symbol only, check the **Read first symbol only** check box.

Configuring Signature filter setting

If no mail is stored, you cannot store the signature.

1 Tap 'Signature Manager'.

The **Signature Manager** screen is displayed.

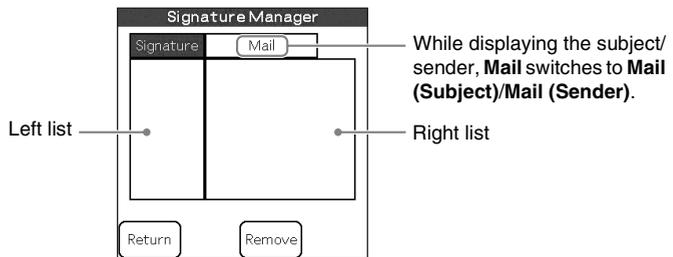

2 Tap **Mail**.

The subject is displayed in the list on the left.

Tap **Mail** again. The sender is displayed in the list on the left.

3 Tap the subject/sender in the list on the left.

The body is displayed in the list on the right.

4 Tap the signature in the list on the right.

5 Tap **Add** to store the sentence as a signature.

The signature is displayed in the list on the left.

- 6 Tap the stored signature in the list on the left to confirm it.
The signature is displayed in the list on the right.

To remove the stored signature

Tap the desired signature in the list on the left and then tap **Remove**.

To complete/exit the Signature Manager screen

Tap **Return**.

Note

If the body/subject/sender/signature consists of many characters, the end is displayed as "..."

.....
Configuring the Music settings

You can configure the setting for the **Music** application.

- 1 Tap the arrow ▼ in the top right-hand corner of the **Car Setting** screen and select **Music**.
The **Music** setting screen is displayed.
- 2 Tap the check box next to each option to select it. Refer to the explanation below for details about each option.
- 3 Tap **Done**.

Tip

When you tap the **AudioPlayer** icon at the bottom of the **Music** setting screen, the **Audio Player** application (normal CLIE mode) is activated.

Enable operation beep If you want the beep to sound when you use controls, tap to select the check box.

Auto Change to Monitor

- Check this box if you want to change the **Music** screen to the **Monitor** screen automatically.
- The screen switches to **Monitor**: when you change the source of a Sony car audio while the **Music** application is selected.

Tip

The screen does not switch to **Monitor** when “PDA” is selected as a source for a Sony car audio. This setting appears only when the **Monitor** application is installed and the SONY-BUS connection adapter is connected.

Photo Change Trigger

To set the trigger to change the photo.

- **Manual**: to change the photo manually.
 - **Track**: to change the photo when a new track is played.
 - **Timer**: to change the photo at a set time.
 - If you select **Timer**, the **Timer Setting** item is displayed.
Tap the arrow ▼ next to **Timer Setting**, and then select the desired time.
-

.....

Configuring the Photo settings

You can configure the settings for the **Photo** application.

- 1** Tap the arrow ▼ in the top right-hand corner of the **Car Setting** screen and select **Photo**.
The **Photo** setting screen is displayed.
- 2** Tap the arrow ▼ and select the desired setting.
- 3** Tap **Done**.

Display interval

To select the interval between images.

Sort by

To select the sorting method by **Title/Date/Random**.

.....

Configuring the Schedule settings

You can configure the settings for the **Schedule** application.

- 1** Tap the arrow ▼ in the top right-hand corner of the **Car Setting** screen and select **Schedule**.
The **Schedule** setting screen is displayed.
- 2** Tap the check box next to each option to select it. Refer to the explanation below for details about each option.
- 3** Tap **Done**.

Tip

When you tap the **DateBook** icon at the bottom of the **Schedule** setting screen, the **Data Book** application (normal CLIÉ mode) is activated.

To go to the previous/next page.

Tap <</>>.

There are 2 pages.

| | |
|---------------------------|--|
| Read private items | To always play a private item. When a private item is read, the password check is not given. |
| Read Events | To always play an event during the Normal reading out mode. |
| Read notes | To always play a note. |

Tip

Reading out a note is not available during Start time reading out mode or Alarm reading out mode.

| | |
|---|--|
| Search next schedule within [] day(s) from today. | To set the period in which the next schedule is searched. Tap the arrow ▼ or ▲ to select the period of days (0 to 31 days). |
| Apply 'location' | To interpret text input in parentheses of the schedule/event title as location. |


Additional information

This section describes how to solve common problems you may encounter when using your CLIÉ™ handheld with the car cradle.

Maintenance

Fuse replacement

If the car cradle does not function correctly when connected to the car battery adapter, make sure that the fuse in the car battery adapter has not burned out. If it has burned out, replace the fuse by the following procedures.

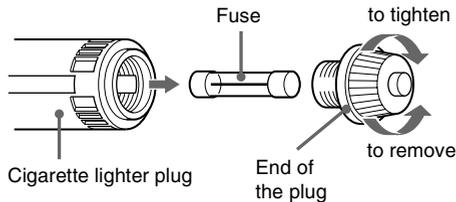



- 1** Pull the car battery adapter out of the cigarette lighter socket.
- 2** Detach the end of the plug by turning it counterclockwise.
- 3** Replace the fuse with a new (identical rating) one.
- 4** Reattach the end of the plug by firmly turning it clockwise.

Notes

- When replacing the fuse, use one of the correct amperage, as stated on the fuse case. (2.5 A, 125 V DC, approx. 30 mm)
- Do not replace the fuse with a wire.
- If the replaced fuse immediately burns out again, consult your car dealer.

Replacing the lithium battery

Under normal conditions, battery will last approximately 1 year. (The service life may be shorter, depending on the conditions of use.) When the battery becomes weak, the range of the wireless card remote commander becomes shorter. Replace the battery with a new CR2025 lithium battery. Use of any other battery may present a risk of fire or explosion.

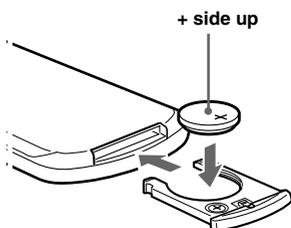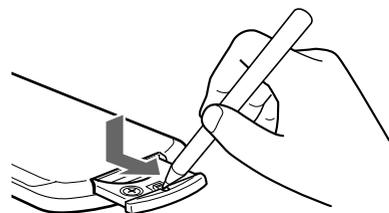

Notes on lithium battery

- Keep the lithium battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor.
- Wipe the battery with a dry cloth to assure a good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.

WARNING

Battery may explode if mistreated.
Do not recharge, disassemble, or dispose of
in fire.

Troubleshooting

The following checklist and the manuals supplied with your CLIÉ™ handheld will help you remedy problems you may encounter with your unit. Before going through the checklist below, check the connection and operating procedures.

Sony recommends that you make a note of displayed messages or alerts for future references.

General

My CLIÉ handheld is not held by holding arm.

- Check the size of the holding arm when use the supplied holding arm for your CLIÉ handheld. Do not use your CLIÉ handheld if it is not compatible with the car cradle.
 - Check if you are using the correct holding arm for your CLIÉ handheld. There are two holding arms supplied.
-

Power

The Power LED does not turn on when my CLIÉ handheld is mounted in the car cradle.

- Verify the ignition switch is in the ON position.
 - Verify if your CLIÉ handheld is compatible with the car cradle.
 - Check the connection of the car battery adapter to the cigarette lighter socket.
 - Check the connection between the car cradle and the car battery adapter.
 - Check the fuse in the car battery adapter.
 - Check the battery level of your CLIÉ handheld.
-

The battery cannot be charged.

- If the battery of your CLIÉ handheld is low, the battery cannot be charged because the CLIÉ handheld cannot activate.
 - If the temperature around the battery exceeds a certain temperature, the battery cannot be charged to protect the battery.
 - Stop charging the battery until the temperature around the battery drops.
-

Operation

The Car Installer is not performed properly.

- You cannot install the Car Cradle basic software on “Memory Stick” media. Be sure to download the Car Cradle basic software to your CLIÉ handheld by the HotSync® operation, then perform **Car Installer**.

I cannot operate normal CLIÉ applications.

While your CLIÉ handheld in-vehicle mode, the car cradle system restricts certain applications/functions on your CLIÉ handheld for safety purposes. You cannot operate normal CLIÉ applications/functions during in-vehicle mode.

The HotSync® screen is activated when my CLIÉ handheld is mounted in the car cradle.

- Cancel the HotSync® operation by tapping the cancel icon on the **HotSync®** screen after detaching your CLIÉ handheld from the car cradle, then remount the CLIÉ handheld in the car cradle.
 - Are the connectors clean?
 - Clean the connectors with a cloth, etc., if they are not clean.
-

The Car Launcher screen is not activated.

- Is the Car Cradle basic software installed?
 - Are the connectors clean?
 - Clean the connectors with a cloth, etc., if they are not clean.
 - Is the POWER/HOLD switch of your CLIÉ handheld in the HOLD mode?
-

I cannot return to the Car Launcher screen from an application (on short screen type).

The Home icon is not on the screen.

- Press the HOME button on the wireless card remote commander or the Home  button on your CLIÉ handheld.
-

The time on the time indicator has changed suddenly.

The time on your CLIÉ handheld is updated automatically by GPS data.

The CLIÉ application does not switch to in-vehicle mode screen although I mounted the CLIÉ handheld in the car cradle.

Depending on the running application, the application cannot be switched.

- Detach your CLIÉ handheld from the car cradle and quit the application, then remount the CLIÉ handheld in the car cradle.
-

The screen switches with no operation.

Is the color changing mode, screensaver or the **Today** application activated?

- Disable the color changing mode (page 67), the screensaver (page 65) and the **Today** application (page 67).
-

GPS

GPS signal cannot be received.

- The system cannot receive GPS signals due to an obstruction.
→ Move your car somewhere clear.
 - GPS signal reception is low.
→ Activate the **GPS Meter** application and check the GPS signal values.
 - The GPS antenna is incorrectly installed.
→ Install the GPS antenna where the signal is not interrupted by the body of the car, and install the antenna horizontally on the roof.
For details, refer to the Installation/Connections manual.
 - The GPS antenna is not properly connected to the car cradle.
→ Insert the connector of the antenna cable until it clicks into the GPS ANT port of car cradle.
For details, refer to the Installation/Connections manual.
-

The map of my current GPS location does not match the current road when using the StreetFinder application.

The error margin of the signal from the GPS satellites is too large. An error margin of a few hundred meters can exist in the worst case.

Function

The built-in speaker does not work for the Text-to-voice function.

Is the volume too low? Is the ATT on?

The volume adjustment and ATT button does not work.

You can adjust the volume level only while the Text-to-voice application is being used or read out.

The FM transmitter output does not function.

- Is the FM transmitter disabled?
Check the **FM Transmitter** check box on the **Sound** setting (page 62). If interference noise during audio playback occurs, change the frequency of the transmitter.
 - Is the FM transmitter frequency properly set?
→ Tune the car audio radio frequency to that set for the FM transmitter.
When the SONY-BUS connection adapter is connected between Sony car audio and the car cradle, the FM transmitter is disabled.
-

The LINE-OUT output does not function.

When the SONY-BUS connection adapter is connected between Sony car audio and the car cradle, the LINE-OUT output does not function.

Music is not being heard from the built-in speaker.

The built-in speaker is only for Text-to-voice applications, not for music.

The wireless card remote commander does not function.

When the battery becomes weak, the range of the wireless card remote commander becomes shorter (page 76). Buttons may not function depending on the operating situation.

The dimmer does not function.

→Make sure the dimmer position is AUTO (page 12).

When the ignition switch is in the OFF position, an alarm sounds and the screen flashes.

This is the caution alarm function. When the ignition switch is in the OFF position, no power is being supplied to the car cradle since it uses power from the cigarette lighter socket.

→To stop the caution alarm, refer to page 27.

Error displays/Messages

When error displays/messages appear in the screen, follow the instructions on error message.

If these solutions do not help improve the situation, perform a reset of your CLIÉ handheld.

► For details about performing a reset, refer to the manuals supplied with your CLIÉ handheld.

Specifications

ALL

Operating temperature 5 °C to 35 °C
(41 °F to 95 °F)

Cradle (Body)

Storage temperature - 40 °C to 80 °C
(- 40 °F to 170 °F)

Dimensions (W/H/D) Approx.
78.2 × 138.5 × 37.4 mm
(3 ¹/₈ × 5 ¹/₂ × 1 ¹/₂ in)

Mass Approx. 155 g (6 oz)

Connection terminal DC power adapter
(5.2 V)
CLIE I/F
LINE-OUT
GPS Antenna
Connection adapter

Audio Specifications

Frequency response 20 Hz to 20,000 Hz

Built-in Speaker

Maximum power output 1 W

Car Battery Adapter

Input 19 W

Output 5.2 V DC, 3,000 mA

Operating temperature 5 °C to 35 °C
(41 °F to 95 °F)

Dimensions (W/H/D) Approx. 112 × 48 × 38 mm
(4 ¹/₂ × 1 ¹⁵/₁₆ × 1 ¹/₂ in)

Mass Approx. 105 g (3 oz)

Cord length Approx. 1.5 m (59 ¹/₈ in)

GPS Receiver

Location method All in view method

Maximum number of tracking satellite
8 satellites

Revive sensitivity Less than -130 dBm

Receive frequency 1575.42 MHz

GPS Antenna

Micro strip planer antenna

FM Transmitter

Transmission range 2.4 m to 3.0 m
(8 ft to 10 ft)

Frequency response 95.9 MHz to 101.9 MHz

Power Supply

Requirement 12 V DC car battery
(negative ground)

Input 19 W

Output 5.2 V DC, 3000 mA

Fitting Kit

Dimensions (W/H/D) Approx. 40 × 88 × 59 mm
(1 ⁵/₈ × 3 ¹/₂ × 2 ³/₈ in)

Mass Approx. 75 g (3 oz)

Supplied Accessories

Car battery adapter XA-DC5

Wireless card remote commander
RM-X136

GPS antenna VCA-36

Installation CD-ROM

StreetFinder® C³ Travel Navigation
Software CD-ROM

Parts for installation and connections
StreetFinder® C³ Travel Navigation
Software User's Guide

Design and specifications are subject to change without notice.

Continued on next page

.....

Computer system requirements

You need one of the following systems installed on your computer to be able to use the Palm™ Desktop for CLIE software and software supplied on the installation CD-ROM:

- OS: Microsoft Windows 98 Second Edition, Windows Millennium Edition, Windows 2000 Professional, Windows XP Home Edition, Windows XP Professional
- CPU: Pentium II 400MHz or more (Pentium III 500MHz or more is recommended)
- RAM: 96MB or more (128MB or more is recommended, 256MB or more is recommended for Windows XP)
- Hard drive space: 200MB (350MB or more is recommended)
- Display: High Color or more, 800 × 600 dots or more is recommended
- CD-ROM drive
- USB port
- Pointing device such as a mouse or touchpad

For details about StreetFinder®, refer to the StreetFinder User's Guide. Design and specifications are subject to change without notice.

INDEX

A

Alarm reading out mode. 39
App Buttons 64
Applications 31
ATT. 12
Attach/detach alert. 67
Audio Monitor software 16, 54

B

Built-in speaker. 11

C

Car Cradle basic software. 15
Car Installer 17
Car Launcher 8, 28
Car Setting 17, 59
Cassette adapter. 45, 48
Caution alarm. 27
Color mode
(day/night time mode) 29, 67
Content filter 36, 71

D

Delay time to Sony Car Audio. 63
Dimmer. 12
Display Order 63

F

Filtering 36
FM transmitter 45, 46, 62
Fuse 75

G

GPS. 53
GPS Meter (application) 10, 53

H

HOLD mode. 26

I

In-vehicle mode 23

L

LINE OUT 48
Lithium battery 76
Long screen type. 20, 28, 29
Lower audio volume during voice
playback 62

M

Mail (application) 8, 33, 70
Miscellaneous 67
Monitor (application) 10, 54
Music (application) 9, 45, 72

N

Normal reading out mode. 38

P

PDA. 47
Photo (application) 9, 52, 73
Play mode. 50

Continued on next page

R

REP (Repeat) 50

S

Schedule (application) 8, 38, 74
Screensaver 30, 65
Short screen type 20, 28, 29
Signature 36, 71
Sleep mode 26
SONY-BUS connection
adapter 45, 47, 54
Sound 62
Start time reading out mode 39
StreetFinder (application) 9, 51
StreetFinder[®] C³ Travel Navigation
Software 15
Symbol 37, 71
System Sound 62

T

Text-to-voice
(application/function) . . . 33, 38, 43, 69
Today (application) 9, 43, 67
Touch panel 28

U

Uninstall 61

V

Voice Animation 34, 40, 69
Voice Parameters 69

W

Warning message 23
Wireless card remote commander . . . 13

Customer Support

For the latest support information, check our
official Sony CLiÉ Web site

Customers in USA

<http://www.ita.sel.sony.com/support/clie/access/>



Contents of this manual are printed on chlorine-free
paper using VOC (Volatile Organic Compound)-free
vegetable-oil-based ink.

<http://www.sony.net/>

Sony Corporation Printed in Japan