


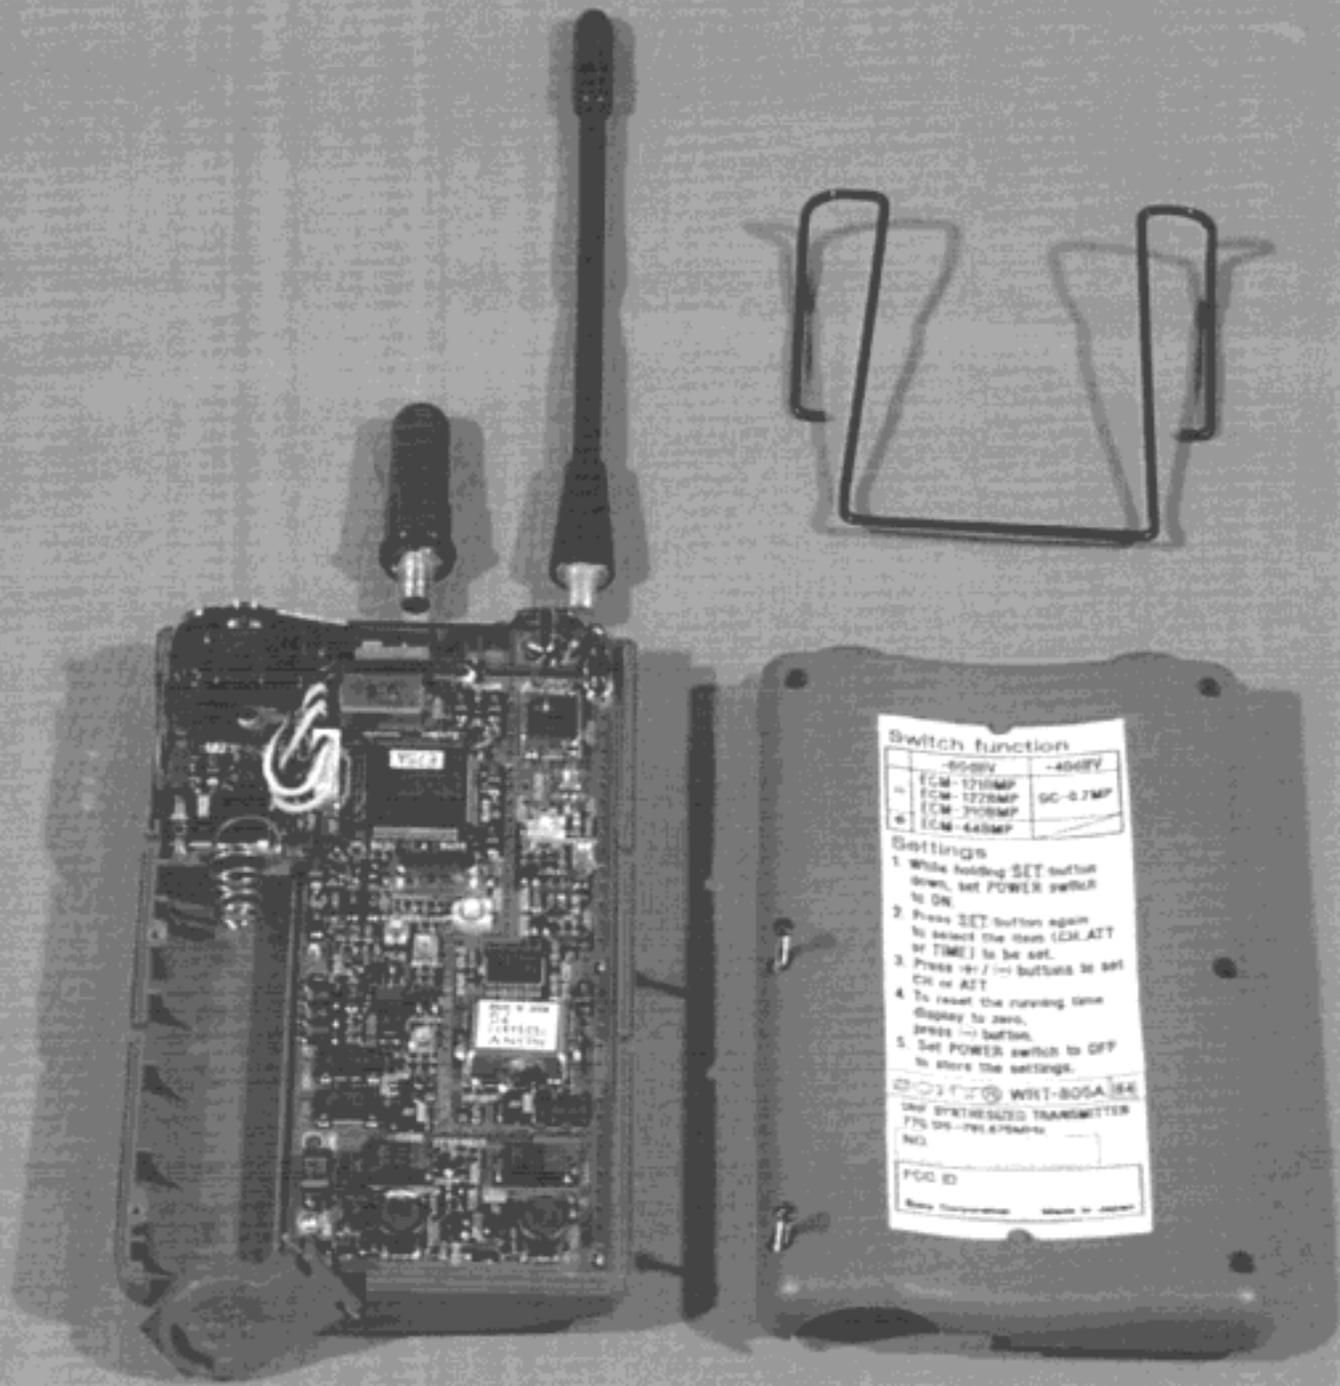

Model: WRT-805A(64)



Switch function

	-500W	-400W
1	ECM-1210MP	SC-07MP
2	ECM-1220MP	
3	ECM-3100MP	
4	ECM-4400MP	

Settings

1. While holding SET button down, set POWER switch to ON.
2. Press SET button again to select the item (CH, ATT or TIME) to be set.
3. Press +/- buttons to set CH or ATT.
4. To reset the running time display to zero, press +/- button.
5. Set POWER switch to OFF to store the settings.

WRT-805A(64)
100% SYNTHESIZED TRANSMITTER
775 995-790.6700000
NO.

FCC ID

Model: WRT-805A(64)