


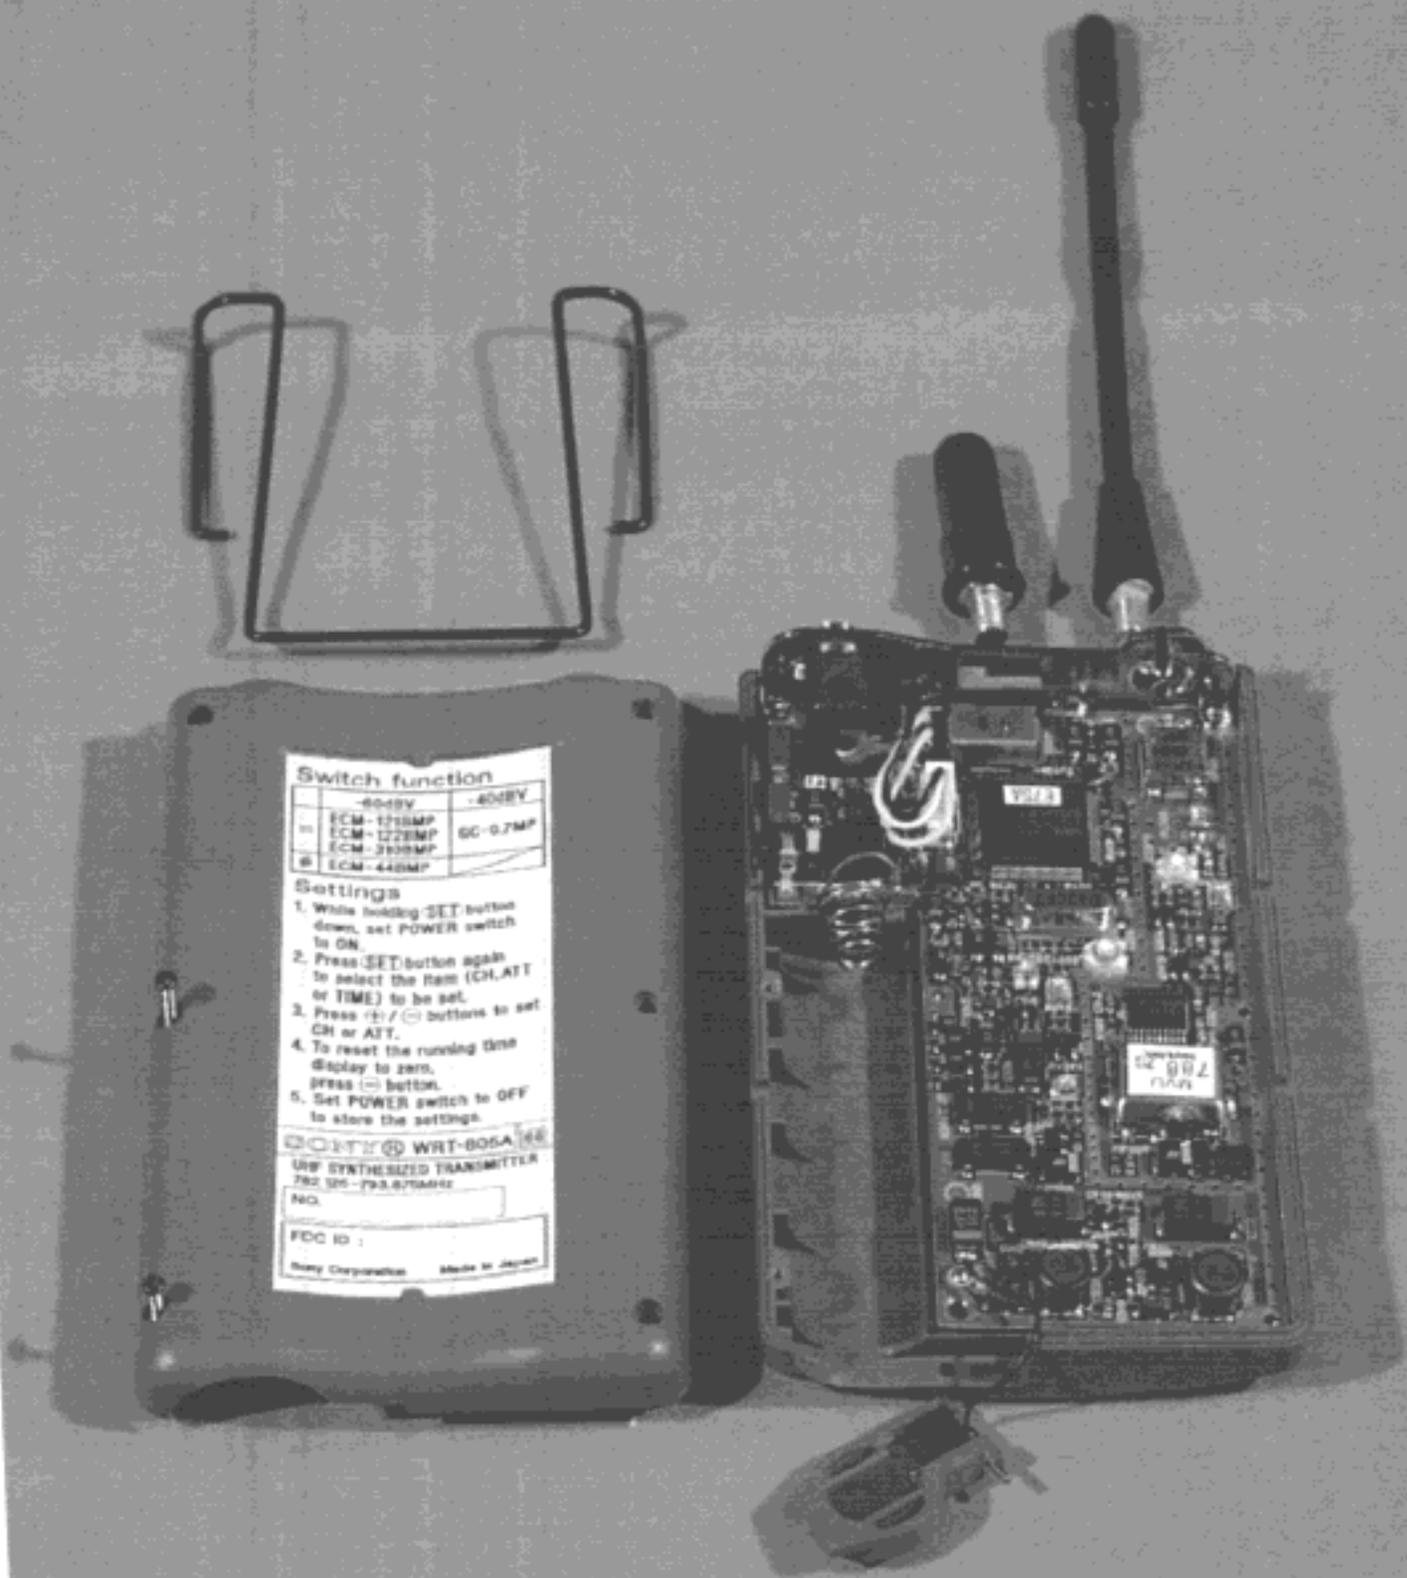

Model: WRT-805A(66)



Switch function

	-40dB	-40dBV
1	ECM-1210MP	GC-0.7MP
2	ECM-1220MP	
3	ECM-3100MP	
4	ECM-440MP	

Settings

1. While holding SET button down, set POWER switch to ON.
2. Press SET button again to select the item (CH, ATT or TIME) to be set.
3. Press + / - buttons to set CH or ATT.
4. To reset the running time display to zero, press 0 button.
5. Set POWER switch to OFF to store the settings.

CONTI WRT-805A (66)  
UHF SYNTHESIZED TRANSMITTER  
782.325 - 793.875MHz  
NO. \_\_\_\_\_  
FCC ID : \_\_\_\_\_  
Sony Corporation Made in Japan

Model: WRT-805A(66)