



## Turning Power On and Off

 
 

### ● Turning Power On

Hold down  for at least a few seconds.

### ● Turning Power Off



Hold down  for at least a few seconds.

## Switching the Screen to English

From the stand-by screen: Press . ▶ Press . ▶ Press .

▶ Press .

## Checking Your Own Phone Number and E-mail Address


From the stand-by screen: Press . ▶ Press .

## Making and Answering a Call

### ● Making a Call


From the stand-by screen: Enter the phone number you want to call.

▶ Press .

To end a call: Press .


## ● Answering a Call



When the phone starts ringing, press .

To adjust the earpiece volume during a call: Use .

## Storing and Recalling Address Book Entries

### ● Storing an Entry

 
From the stand-by screen: Hold down  for at least one second.

► Use  to select the item you want to edit. ► Press  (Select).


► Enter the data. ► Press  (Reg).

### ● Recalling an Entry

From the stand-by screen: Press  to display the Address Book screen.

► Use  to select the tab for the record you want to recall.


 
► Use  to select the name of the record.


► Press  (Detail) to view the record in detail.


## Using the Camera (Movie and Snapshot)

 
### ● Recording a Movie Clip



From the stand-by screen: Press . ► Use  to select "Camera".


 

► Press  (Select). ► Select "Movie". ► Press  (Select).

► Press  (Record) to start recording.



► Press  (Stop) to stop recording.


 
► Press  (Save) to store the movie.

 
Press  () (Pause) during recording to pause recording.

 
Press  (  +  ) in the Movie mode to change to the Photo mode.


 

### ● Taking a Snapshot

From the stand-by screen: Press . ► Use  to select "Camera".

► Press  (Select). ► Select "Photo". ► Press  (Select).

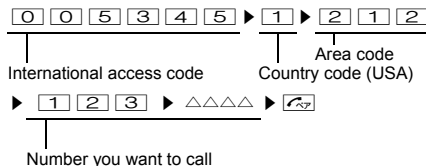
► Press  (Shoot) to take a snapshot.

► Press  (Save) to store the photo.

Press  (  +  ) in the Photo mode to change to the Movie mode.

 
## Making an International Call

Ex: To call 212-123-△△△△ in the USA




## Other Handy Features

### ● Setting the Manner Mode

From the stand-by screen: Hold down  for at least one second.

Repeat the above operation to disable the Manner Mode.


### ● Setting the Easy Voice Memo (Voice Recording)

From the stand-by screen: Hold down  for at least one second.

Repeat the above operation to disable the Easy Voice Memo.

### For inquiries, please contact

au Customer Service Center (General Information)

● If you are calling from a landline phone:  0077-7-111 (toll free)

● If you are calling from an au mobile phone: 157 (toll free)