



USER GUIDE

onn.[™]


Cassette Boombox

100135464_EN_MMDD2023

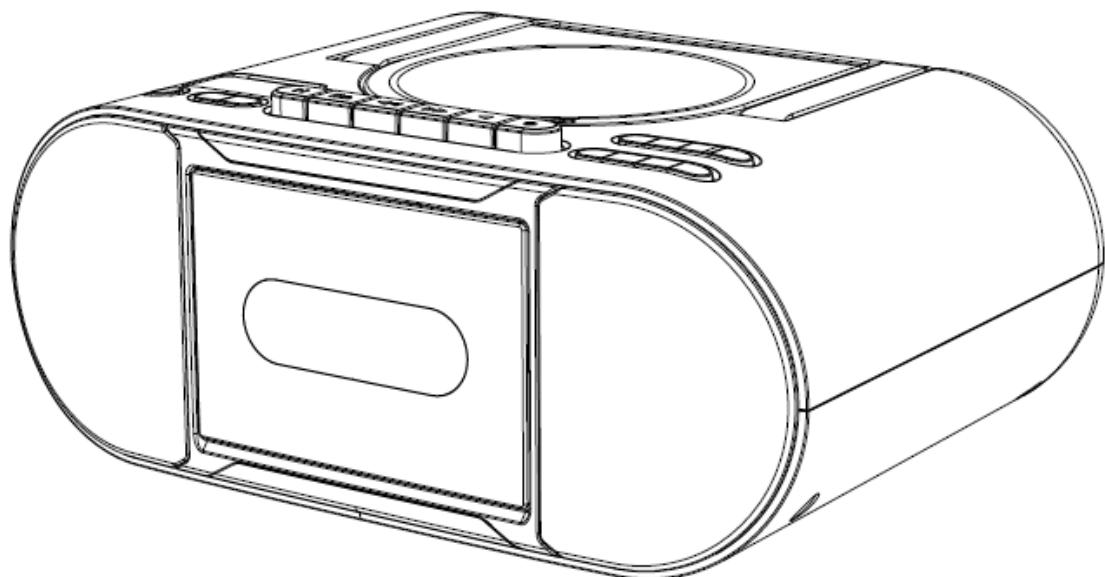

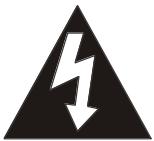

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

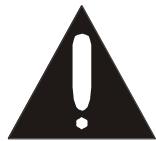

**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK). NO
USER-SERVICEABLE PARTS INSIDE. REFER SERVICING
TO QUALIFIED SERVICE PERSONNEL.**



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



DANGER: This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ATTENTION: POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISES ET POUSSER JUSQU'AU FOND.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Compliance Information: This product complies with 21 CFR 1040.10 and 1040.11. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

SURGE PROTECTORS:

It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

WARNING: The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: The mains plug is used as a disconnect device, the disconnect device shall remain readily operable.

IMPORTANT SAFETY INSTRUCTIONS

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or ground-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

ADDITIONAL SAFETY PRECAUTIONS

- a. Do not expose this unit or the AC/DC adaptor to dripping or splashing water. Keep liquid-filled objects, such as vases, away from this unit and AC/DC adaptor.
- b. To ensure that this unit is completely disconnected, unplug it from the wall.
- c. Ensure that the AC/DC adaptor is easily accessible.
- d. Please note the information printed underneath the unit.
- e. Batteries should not be exposed to excessive heat such as direct sunshine, fire, etc.
- f. Do not impede the ventilation of this unit by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.

- g. Keep open flames, such as lighted candles, away from this unit.
- h. Do not place this unit in closed bookcases, racks, or other spaces without proper ventilation.
- i. Use only the same or equivalent type batteries as there is a danger of explosion if the incorrect batteries are used or they are installed incorrectly.
- j. Dispose of batteries properly according to environmental regulations.

AC Power Source

Connect one end of the AC power cord into the AC In jack (located on the rear of the unit) and the other end to a wall outlet providing 120V AC, 60Hz.

NOTE: Disconnect both ends of the power cord when not in use.

Battery Operation

For portable use, insert batteries as described below:

1. Open the battery door by sliding out and lifting it up.
2. Insert six (6) C size batteries (not included) following the correct polarity indicated in the battery compartment. Alkaline batteries are recommended for the longest playing time.
3. Replace the battery door back on the compartment.

Battery Precautions

Follow these precautions when using batteries in this device:

1. Warning – Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
2. Use only the size and type of batteries specified.
3. Be sure to follow the correct polarity when installing the batteries as indicated in the Battery Compartment. A reversed battery may cause damage to the device.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge a battery not intended to be recharged - it can overheat and rupture (Follow battery manufacturer's directions.)
6. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.

For product assistant:

WE CAN HELP

1-888-516-2630

7 DAYS/WEEK

7:00am ~ 9:00pm CST


THIS GUIDE CONTAINS IMPORTANT SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Find more at Walmart.com

SCAN HERE FOR MORE PRODUCT INFORMATION AND LEAVE US A REVIEW!

Manufactured in China for: Walmart, Inc.

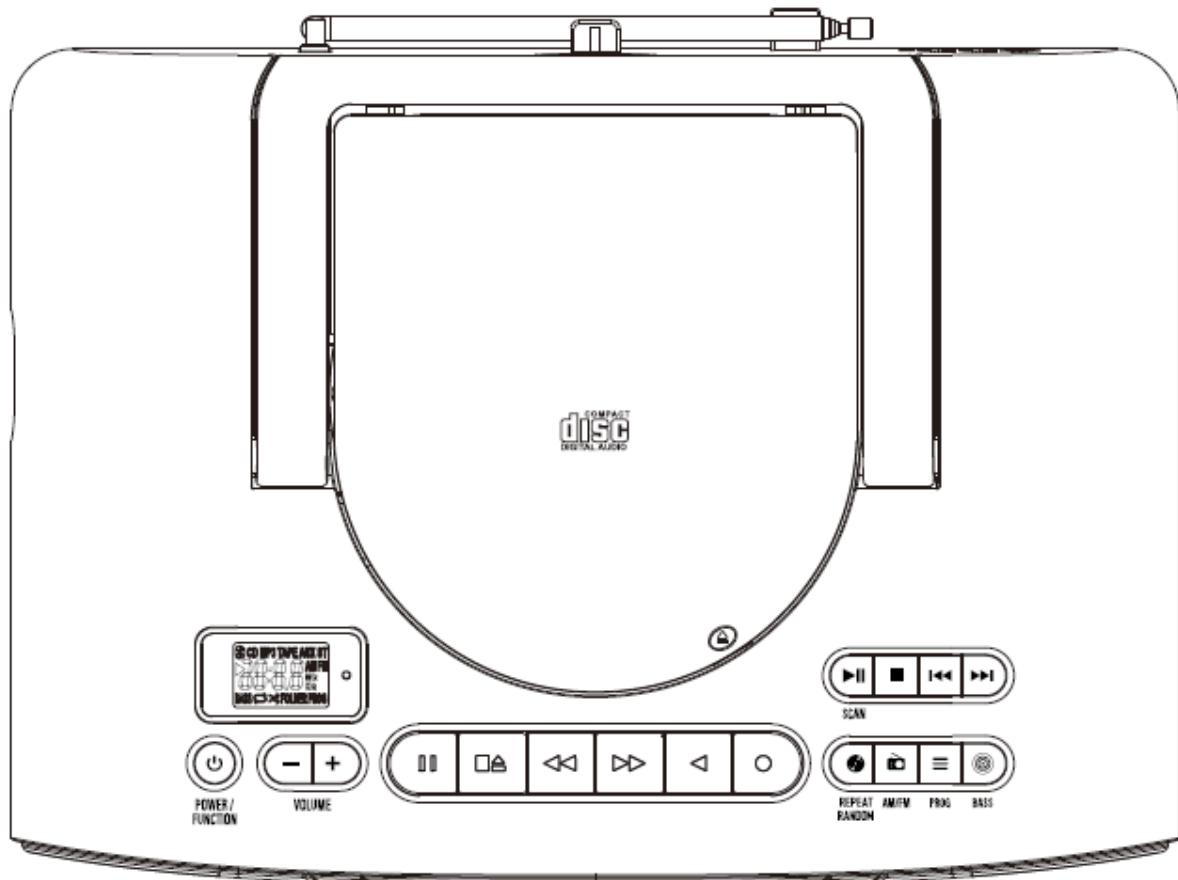

CD Operation (CD, CD-R, CD-R/W, MP3 CD)

1. Press and hold POWER/FUNCTION to turn on the unit.
2. Press POWER/FUNCTION to switch to CD mode.
 - Repeatedly press POWER/FUNCTION to cycle through and select the desired mode as below:
CD, Bluetooth, Radio (press AM/FM to switch to FM or AM), AUX, Cassette
3. Press \triangle to open CD door, place a CD into the unit, label side facing up and close the CD door.
 - Press $\blacktriangleright/\text{II}$ to start or pause playback
 - Press $\text{I}\blacktriangleleft$ or $\blacktriangleright/\text{I}$ to skip tracks on a disc
 - Press and hold $\text{I}\blacktriangleleft$ or $\blacktriangleright/\text{I}$ to fast backward or forward.
 - Press \blacksquare to stop playback.
4. When playing CD, CD-R, CD-RW

- Press REPEAT/RANDOM to cycle through and select the desired mode as below:
Repeat (repeat the current song,  will flash in the display), Repeat All (repeat the whole disc,  will show in the display), Random (play all the tracks in random order,  will show in the display), Normal Play.

5. When playing MP3 CD
 - Press REPEAT/RANDOM to cycle through and select the desired mode as below:
Repeat (repeat the current song,  will flash in the display), Repeat Folder (repeat the current folder, FOLDER will show in the display), Repeat Whole Disc Folder (repeat the whole disc folder,  will show in display), Random (play all the folders in random order,  will show in the display), Normal Play.

Programming a CD/MP3 CD

1. When in the STOP mode, press PROG, “P01” will show in the display and “PROG” indicator will flash.
2. Press  or  to select a track.
3. Press PROG to confirm the selection and add it to the program.
4. Repeat step 2 and 3 to program additional tracks, up to a maximum of 30 tracks for CD and 99 tracks for MP3 CD.
5. Press / SCAN to start programmed playback. Press  twice to end the program.

NOTE: When trying to program more than the maximum no. of tracks, “FUL” will flash in the display.

Radio Operation

1. Press and hold POWER/FUNCTION to turn on the unit.
2. Press POWER/FUNCTION to switch to Radio mode.
 - Repeatedly press POWER/FUNCTION to cycle through and select the desired mode as below:
CD, Bluetooth, Radio (press AM/FM to switch to FM or AM), AUX, Cassette
3. Press AM/FM to switch to FM or AM as desired.
4. Adjust the antenna for optimum reception.
5. Press  or  to manually tune the radio frequency.
6. Press and hold  or  for auto tuning. The tuner will search and stop on the next strongest stations it finds. Repeat this step until the desired radio frequency

appears on the display

AM/FM Radio Presets

1. Tune to the desired AM/FM frequency (see above steps).
2. Press and hold PROG, "P01" will show in the display and "PROG" indicator will flash.
3. Press  or  to select a preset number. Press PROG to save that preset.
4. Up to each 20 stations of AM and FM can be saved (P01-P20).
5. To listen to preset radio stations, with radio ON, press PROG, preset number will show in the display. Press  or  to select a stored preset number for the desired radio station.

NOTE: If you do not press any button for few seconds while selecting the stored preset number, the display will return to show the radio frequency.

Setting Radio Presets

Automatic presetting radio station:

1. To select AM or FM radio.
2. Press and hold / SCAN, then it will start automatic presetting and saving radio station. Tuning begins from the lowest frequency and save it in ascending order.

NOTE: Saving a new station preset in the same position as a previously saved station will replace the previously stored station for that preset number.

Cassette Operation

Playing a tape

1. Press and hold POWER/FUNCTION to turn on the unit.
2. Press  to open the cassette door, insert a cassette tape into the cassette tape compartment and then push the door to close it.
3. Press POWER/FUNCTION to switch to Cassette mode, 'tAP' will show on display.
4. Press  to start playback.
5. Press  to pause playback. Press again to resume.
6. Press  to stop playback.
7. Press  or  to fast forward or rewind.
8. Press  to eject the cassette.

Recording on a tape

1. Press and hold POWER/FUNCTION to turn on the unit and then change to the source you want to record.
 - To record CD tracks or MP3 files on a disc
Place a disc in the CD compartment. Make sure not to start playback. See “CD Operation”.
 - To record a radio program
Tune to the desired station. See “Radio Operation”.
 - To record sound from a connected optional device
Press POWER/FUNCTION to switch to AUX mode. Connect an optional device such as mobile phone, digital musical player, etc to the AUX IN jack of the unit.
2. Press , insert a cassette tape into the cassette tape compartment and then close the compartment cover.
3. Press  to start recording (the Play button  will depress automatically at the same time).
 - When recording from a disc
Playback starts automatically and recording of all the tracks/files on the disc proceeds from the first track/file. Or select the track/file on the disc and the following tracks/files for recording. When the tape reaches the end, recording stops automatically.
 - When recording a radio program or sound from a connected optional device
Recording continues until the tape reaches the end.
4. Press  to pause recording. Press again to resume.
5. Press  to stop recording.

Bluetooth Operation

1. Press and hold POWER/FUNCTION to turn on the unit.
2. Press POWER/FUNCTION to switch to Bluetooth mode. “bt” will flash on the display.
3. Turn on your compatible A2DP Bluetooth device and enable Bluetooth. Search for Bluetooth devices and select “onn. CD Boombox”.
4. When pairing is successful, there is a notification sound and “bt” on the display will change from flashing to solid.
5. Press  / SCAN to start or pause music playback.

NOTES: Press and hold  / SCAN for 3 seconds to disconnect the current Bluetooth connection. The unit will return to pairing mode and “bt” on the display will flash.

If there is no device connection or operation within 10 minutes, the unit will

automatically turn off.

AUX IN

1. Press and hold POWER/FUNCTION to turn on the unit.
2. Press POWER/FUNCTION to switch to AUX mode. “AUX” will show on the display. Insert one end of the 3.5mm audio cable (sold separately) into the AUX IN jack on the side of the unit and the other hand into your external audio device (e.g. mobile phone, digital musical player, etc.)
3. Select the music you wish to listen to on your external audio device and press play to start playback.