


CROSLEY®

CR3043A
Milton Radio
Instruction Manual

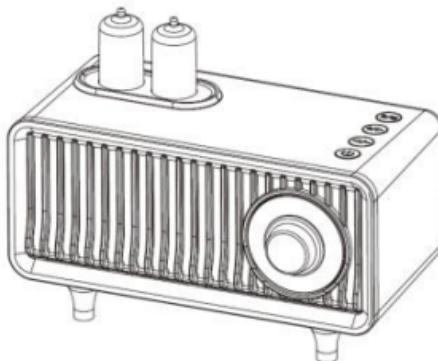

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. – 6 p.m., EST, Monday - Friday
1-888-CROSLEY
www.crosleyradio.com

Safety Instructions

Read and understand this entire manual before using this product.
Keep these instructions for future reference.

1. Do not use this product near water.
2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
3. Do not contact with chemicals such as benzene, thinner, etc.
4. Please do not use it near strong magnetic field or electric field, Avoid direct light or heating appliances.
5. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock
6. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
7. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's

authority to operate the equipment.

9. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
12. Unplug the product during lightning storm or when unused for long periods of time.

Items in this package

Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package:

- Radio
- USB Cable
- 3.5mm AUX cable

Please contact Crosley Customer Service if there is any accessory missing from the package. **Retain the original**

packaging materials for exchange or return purposes.


Specifications

Power	DC Input 5V, 1A
Power consumption	5W
Speaker	3Ω 5W
Playing Time	Up to 14 hours (70% volume)
Battery Capacity	1500 mA/ h
Frequency Range	FM 87.5–108 MHz
Bluetooth Version	5.1

Note:

- *Design and specifications are subject to change without notice.*
- **To help save power consumption, some models will comply with ERP energy saving standard. When there is no audio input for 10 minutes, their powers will automatically cut-off. To turn power back on and resume playing, you will need to turn off the power and turn it on again.**

Product Description

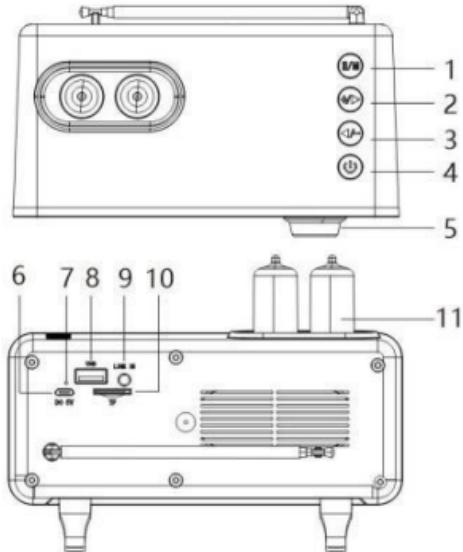

1. Mode Button
 - a. Mode Selection (Long press)
 - b. Play/Pause Button (Short press)
 - c. Pick up/Hang off a call (Short press), double click to

redial the last number.

- 2. Volume up / Next song
 - a. Volume up (Long press)
 - b. Next song (Short press)
- 3. Volume down / Previous song
 - a. Volume up (Long press)
 - b. Previous song (Short press)
- 4. Power Button
 - a. Power on/off (Long press)
 - b. TWS function (double click)
- 5. Tuning knob
- 6. Power Jack
- 7. Charging indicator
- 8. USB slot
- 9. Line in
- 10. Micro SD slot
- 11. LED tube

Initial Setup

Essential Setup

- 1. Place the unit on a flat and level surface. The selected location

should be stable and free from vibration.

2. Connect the USB cable to the Power Jack of the unit.

Function Indicator

Function	LED color(11)
Bluetooth	Blue
USB/ Micro SD	Purple
Aux in	Green
FM	Orange

Radio Operation

1. Press the Mode Button repeatedly to select the Radio mode.

Note: The FM Indicator will be orange.

2. Rotate the Tuning Knob for desired radio station.

Note: The unit is equipped with a FM antenna. To improve FM reception, move the wire around until the reception is clear without interferences.

Bluetooth Operation

1. Press the Mode Button repeatedly to select the Bluetooth mode, you will hear an activation sound from the unit. Note: The Function Indicator will be blue.
2. Turn on the Bluetooth feature of your audio device, search for “CR3043A” and pair.
3. Once your device is successfully paired with the unit, you will hear a short confirmation sound from the unit.
4. Play and stream music from your device to the unit.
5. During playback, press the Play/Pause Button to suspend and resume song.
6. During playback, press the Backward Skip Button or the Forward Skip Button for the previous or next song.

*Note: Bluetooth version - *5.1**

TWS function activation (how to pair two CR3043A speakers with each other):

1. Make sure the speakers are not paired with any external Bluetooth devices.

2. Turn on the two Bluetooth speakers at the same time.
3. Press "Power" button twice on a speaker to initiate TWS pairing.
4. When the second speaker emits a sound, the pairing is successful and the TWS function is active.
5. Activate Bluetooth on the external device, search for the name "CR3043A" and choose it to make the Bluetooth pairing.
6. After pairing, the speakers will automatically pair with each other if switched on at the same time.
7. Press the power key twice to disconnect TWS.

Playback From USB/Micro SD

1. Press Mode Button repeatedly to select USB/Micro SD (Purple) mode.
2. Insert the USB/Micro SD device's plug into the USB/Micro SD socket on the rear of the unit. The unit will start reading the device automatically after the connection. The first track will start playback.
3. Press Skip +/- Button to select your favorite songs.

4. Press Play/Pause Button. The unit will stop playback.
Press Play/Pause Button again to resume the playback.

Note: *The unit will read the last connected device. If you insert a different device while playing another, the unit will stop playback and will start reading the last inserted.*

Aux Input Connection

You can connect an audio device to this unit and play your music through its speakers. To do this, turn on the unit, press the Mode Button to Aux-In Mode (Green), connect a 3.5 mm auxiliary cable between your audio device to the Aux In Jack of this unit and start playing the music.

Troubleshooting

There is no power

- No power at the power outlet.
- **The battery needs to be charged.**

There is no sound

- Make sure the volume is turned up.
- Make sure the volume on your third party device is turned up.

FCC Statements

NOTE: This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.