


## 11. SETUP PHOTOS

### ANTENNA PORT CONDUCTED RF MEASUREMENT SETUP

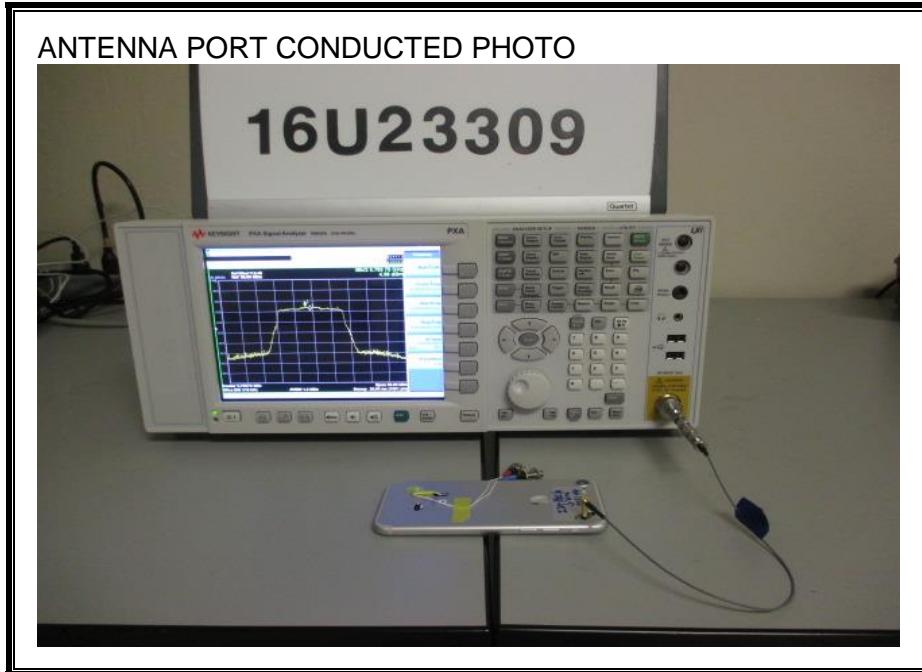


**RADIATED RF MEASUREMENT SETUP (BELOW 1 GHz)**

RADIATED FRONT PHOTO (BELOW 1 GHz)




RADIATED BACK PHOTO (BELOW 1 GHz)

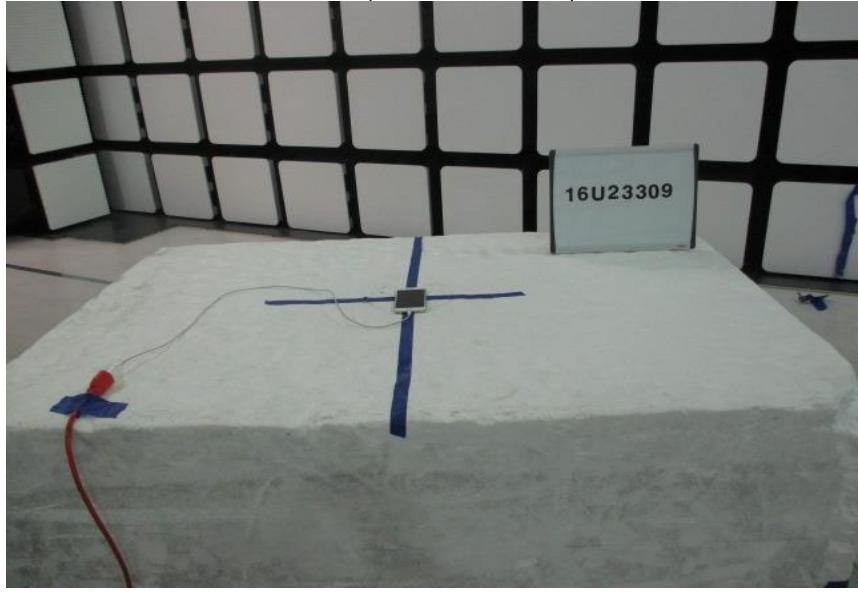


**RADIATED RF MEASUREMENT SETUP FOR PORTABLE CONFIGURATION**


X-AXIS FRONT PHOTO

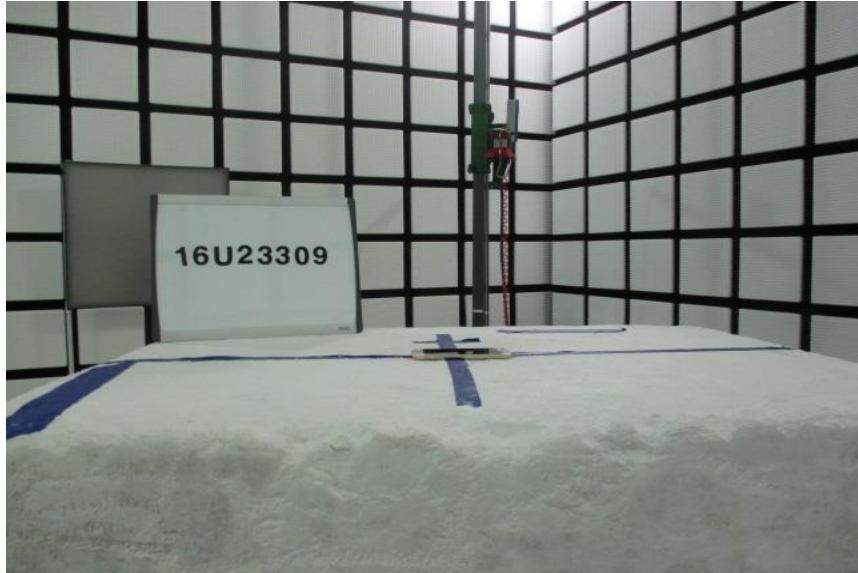

X-AXIS BACK PHOTO

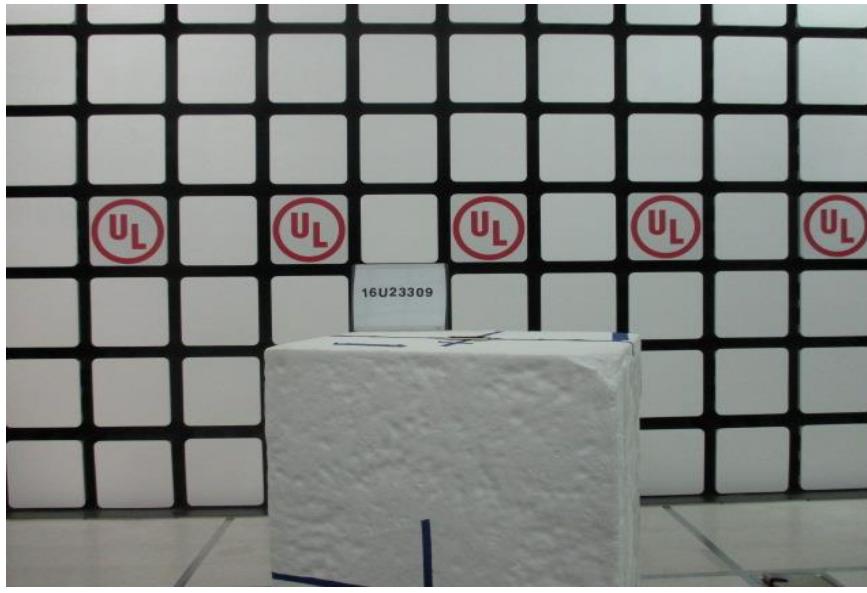

Y-AXIS FRONT PHOTO

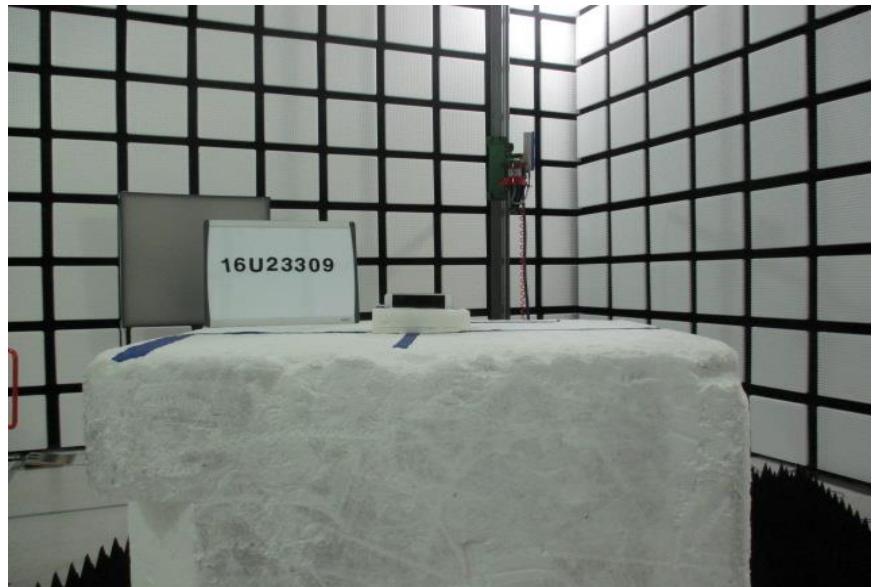

Y-AXIS BACK PHOTO



Z-AXIS FRONT PHOTO



Z-AXIS BACK PHOTO



**POWERLINE CONDUCTED EMISSIONS MEASUREMENT SETUP****EUT POWERED BY AC/DC ADAPTER VIA USB CABLE**

LINE CONDUCTED FRONT PHOTO



LINE CONDUCTED BACK PHOTO





**EUT POWERED BY HOST PC VIA USB CABLE**

LINE CONDUCTED FRONT PHOTO




LINE CONDUCTED BACK PHOTO

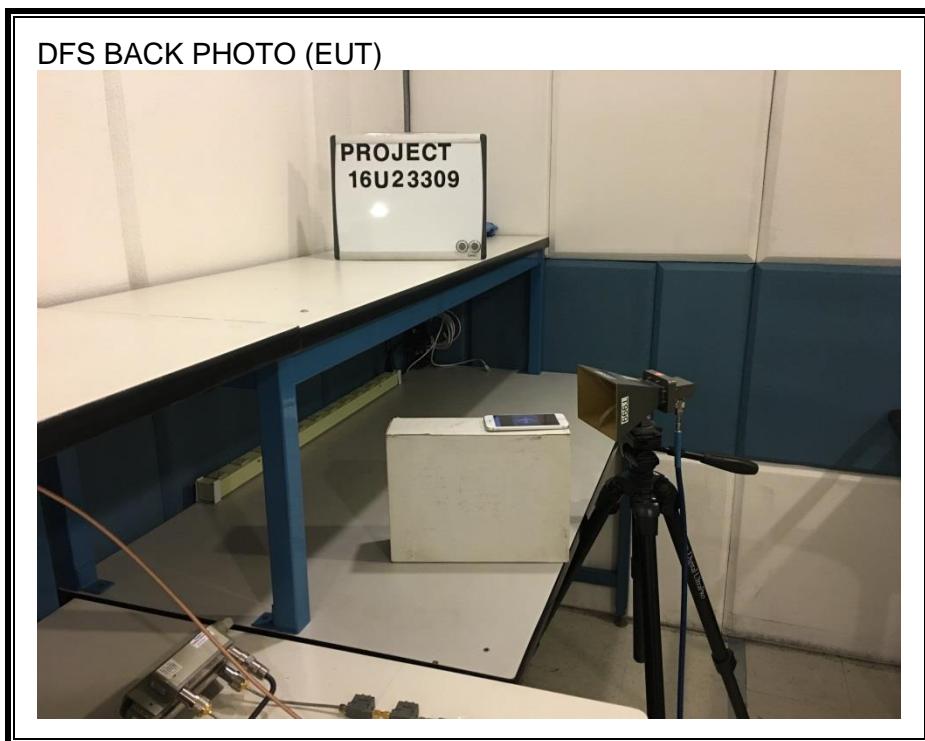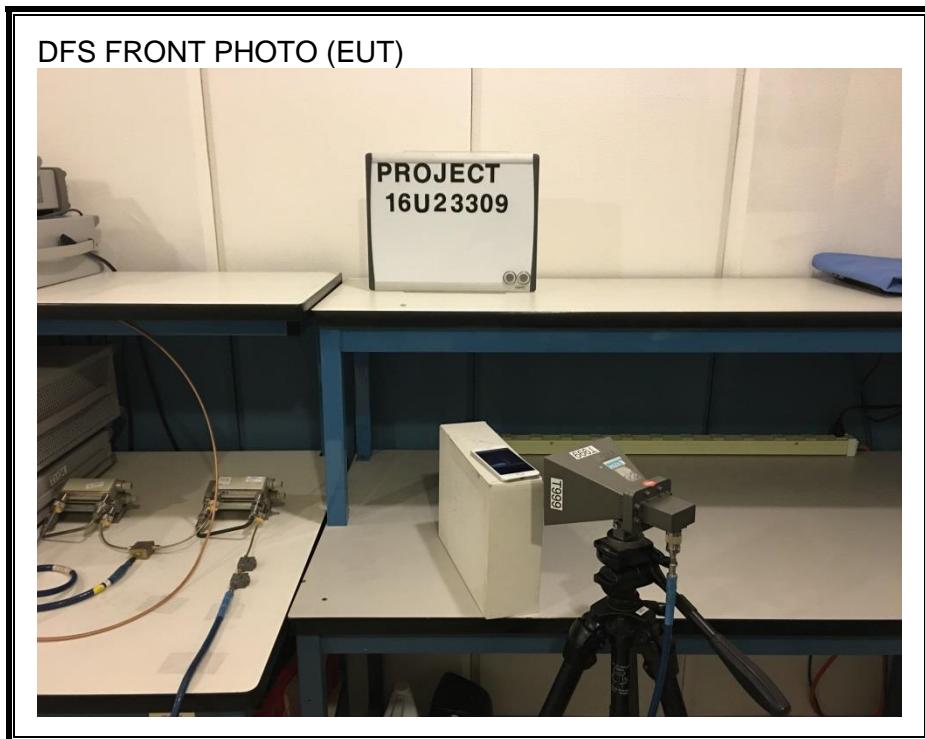


**DYNAMIC FREQUENCY SELECTION MEASUREMENT SETUP****STANDARD CLIENT MODE**


**CLIENT TO CLIENT MODE**

DFS FRONT PHOTO (EUT)

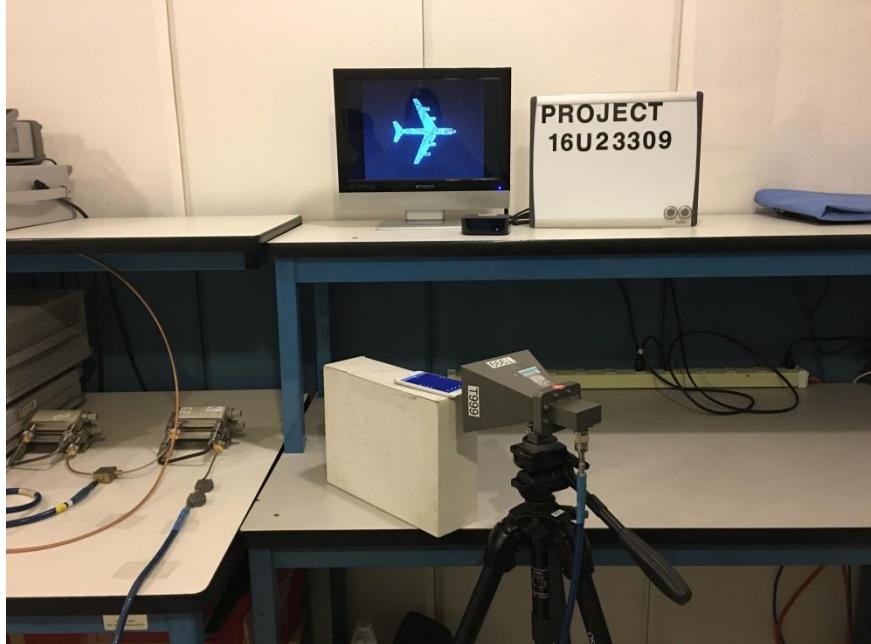


DFS BACK PHOTO (EUT)

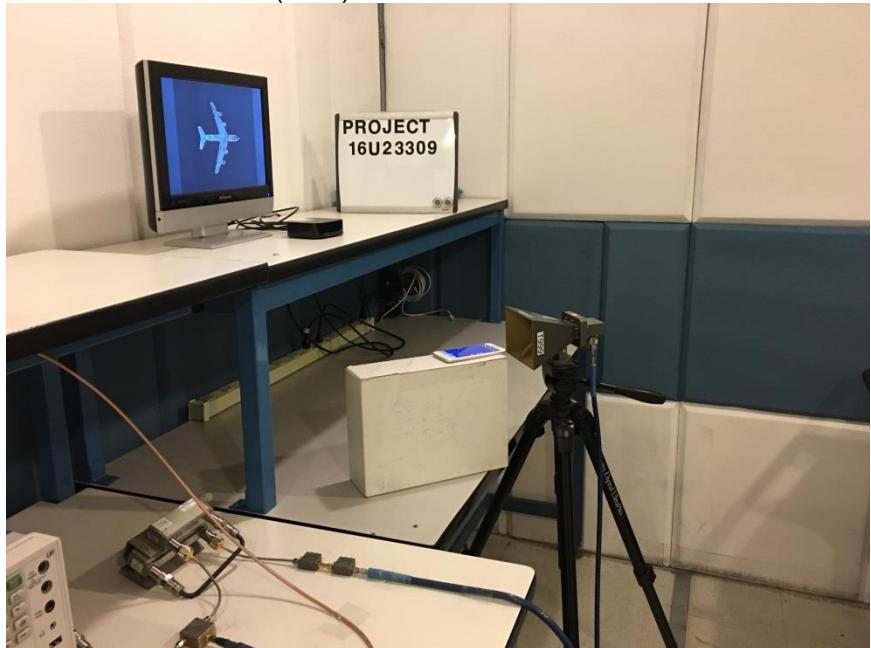

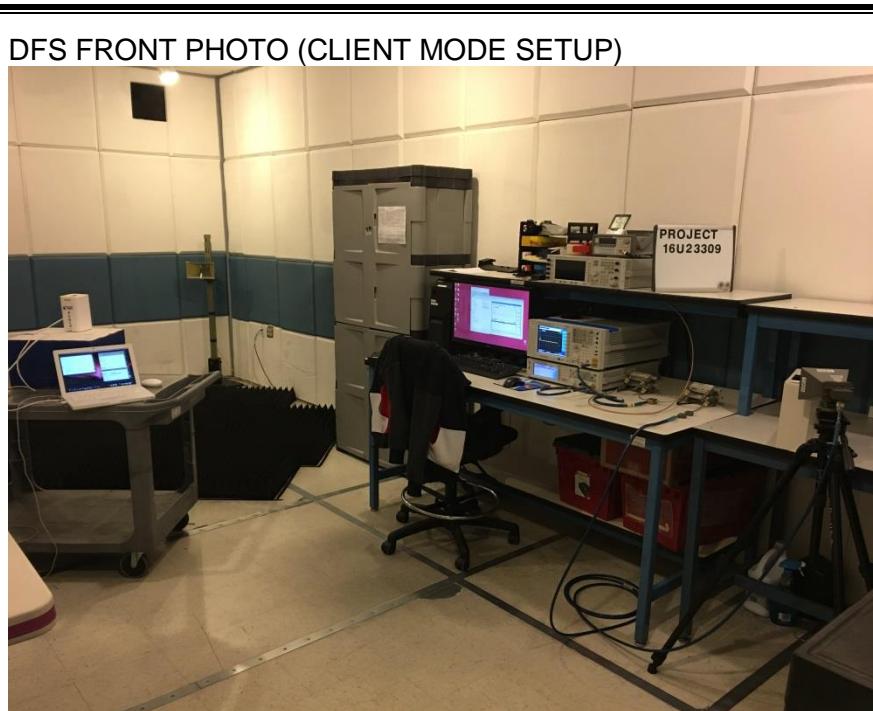**FULL SETUP**

DFS FRONT PHOTO (CLIENT-TO-CLIENT COMMUNICATIONS MODE SETUP)

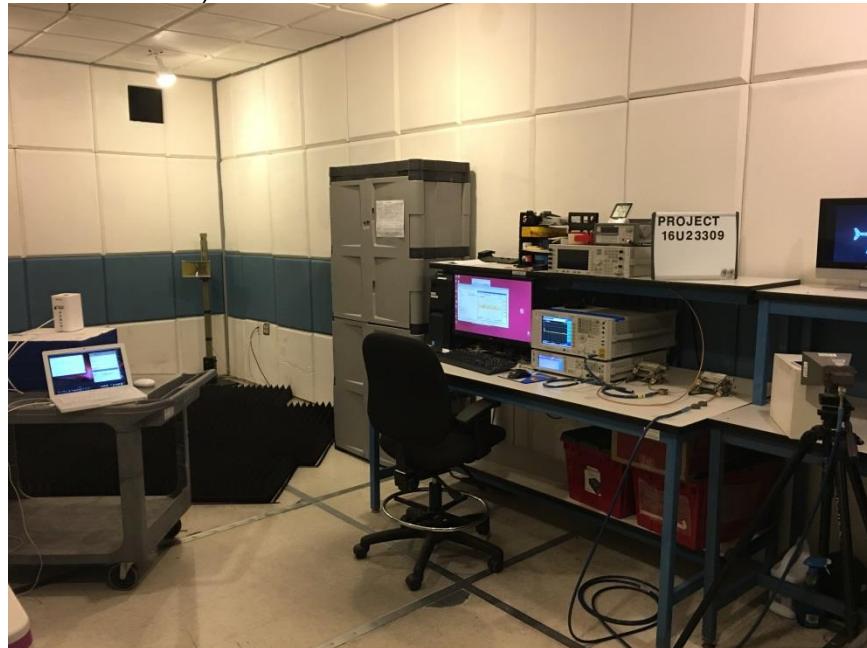

**END OF REPORT**