


## 12. SETUP PHOTOS

### ANTENNA PORT CONDUCTED RF MEASUREMENT SETUP

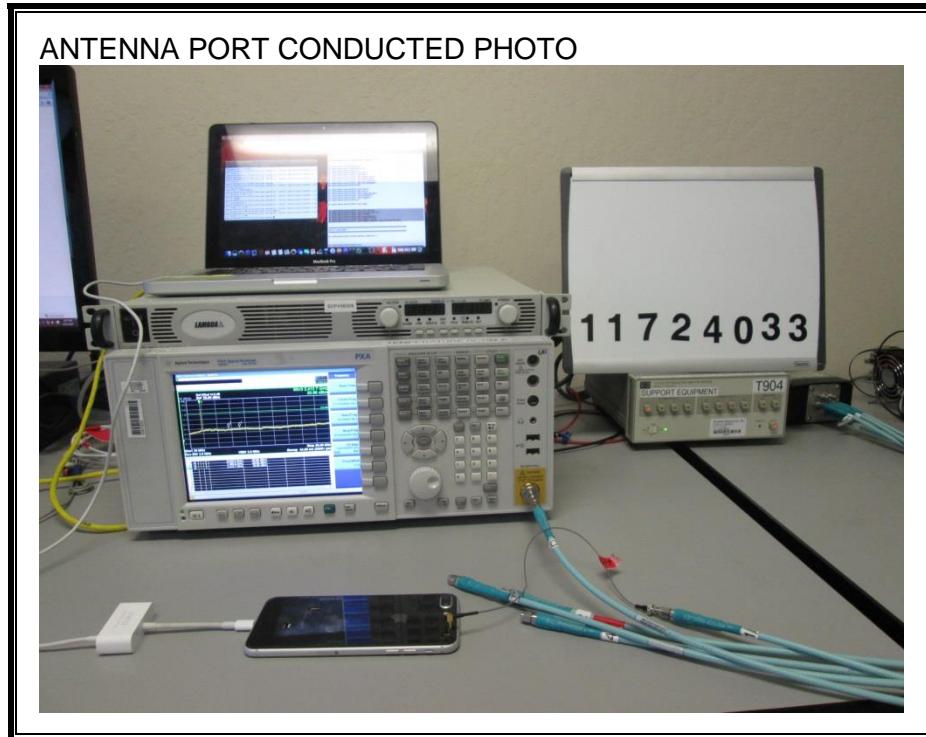


**RADIATED RF MEASUREMENT SETUP (BELOW 1 GHz)**

RADIATED FRONT PHOTO (BELOW 1 GHz)




RADIATED BACK PHOTO (BELOW 1 GHz)

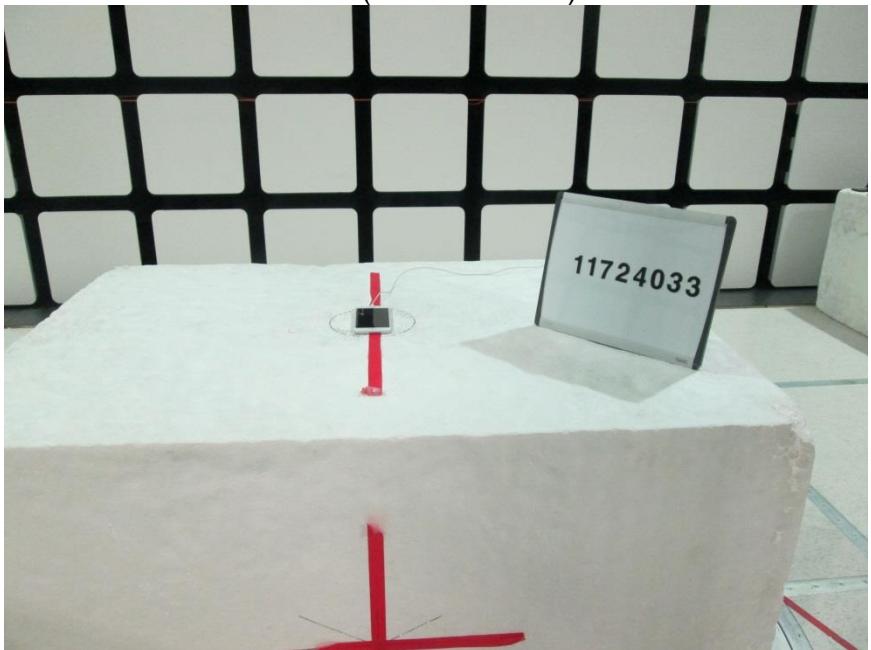


**RADIATED RF MEASUREMENT SETUP FOR PORTABLE CONFIGURATION**

X-AXIS PHOTO

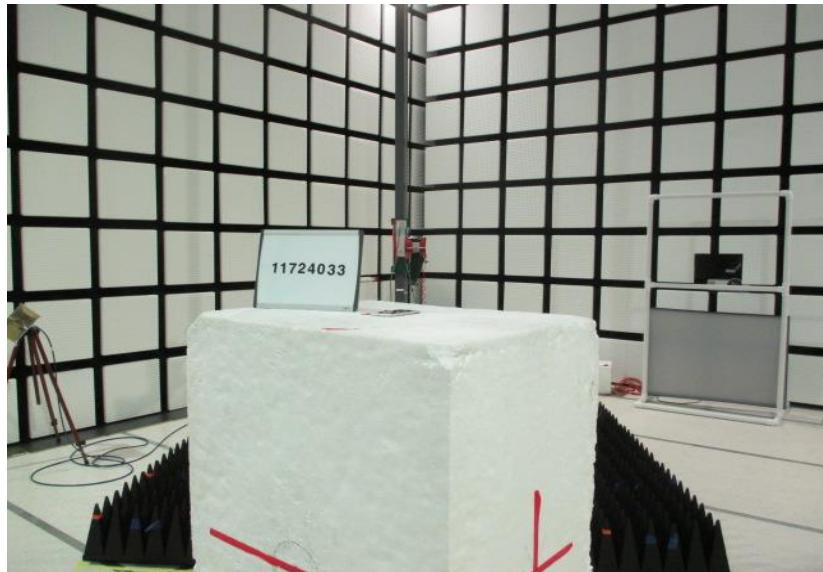


Y-AXIS PHOTO

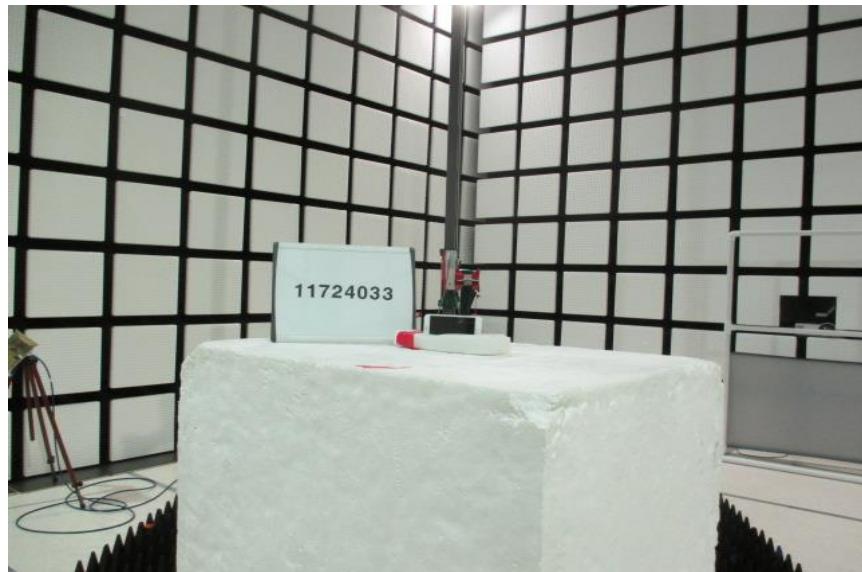



**POWERLINE CONDUCTED EMISSIONS MEASUREMENT SETUP**

**EUT POWERED BY AC/DC ADAPTER VIA USB CABLE**

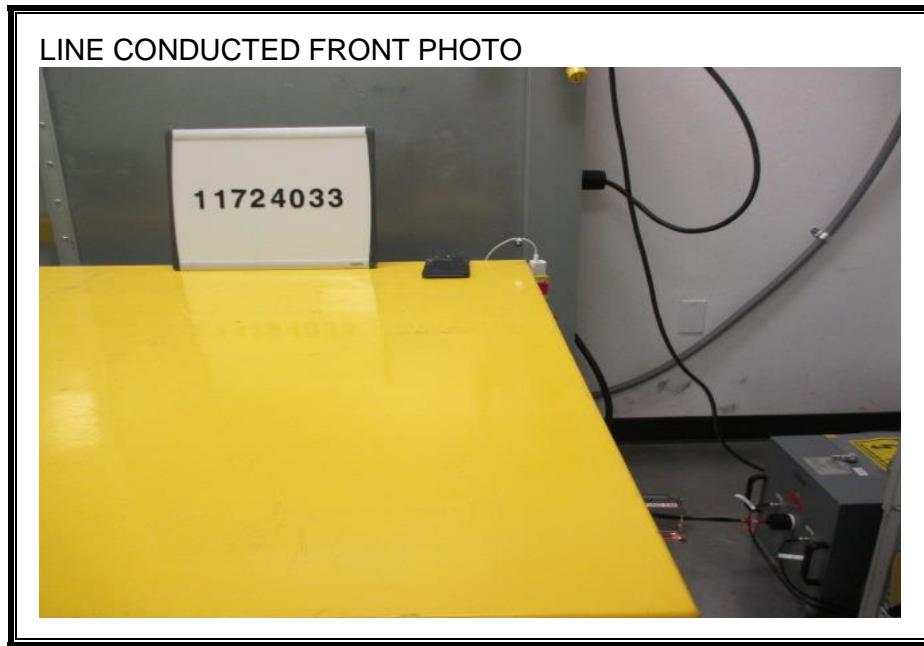


LINE CONDUCTED BACK PHOTO



EUT POWERED BY HOST PC VIA USB CABLE

LINE CONDUCTED FRONT PHOTO

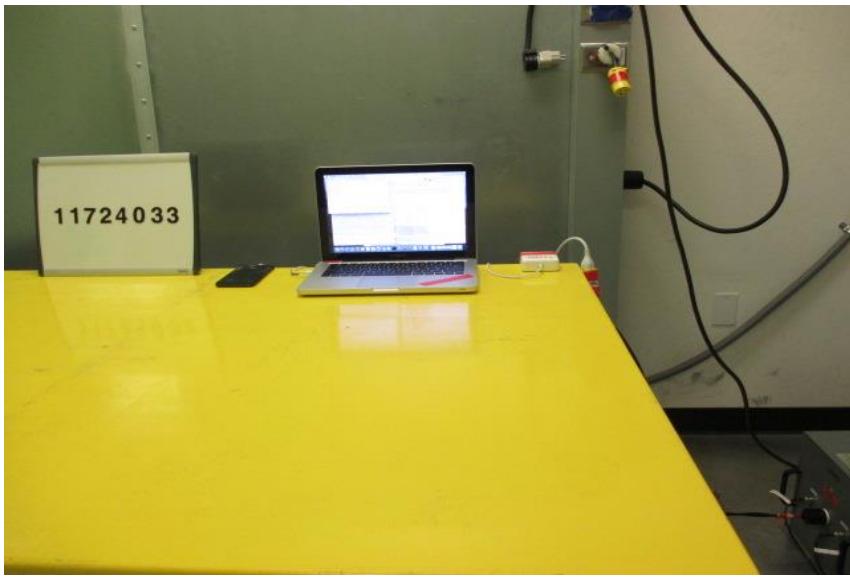

LINE CONDUCTED BACK PHOTO



**DYNAMIC FREQUENCY SELECTION MEASUREMENT SETUP**

DFS FRONT PHOTO (EUT)



DFS BACK PHOTO (EUT)



DFS FULL SETUP PHOTO (CLIENT MODE SETUP)



DFS FULL SETUP PHOTO (CLIENT-TO-CLIENT  
COMMUNICATIONS MODE SETUP)



DFS FULL SETUP PHOTO (PEER TO PEER MODE SETUP /  
EUT)



DFS FULL SETUP PHOTO (PEER TO PEER MODE SETUP /  
PEER DEVICE)



**END OF REPORT**