



## 12. SETUP PHOTOS

### 12.1. ANTENNA PORT CONDUCTED RF MEASUREMENT SETUP

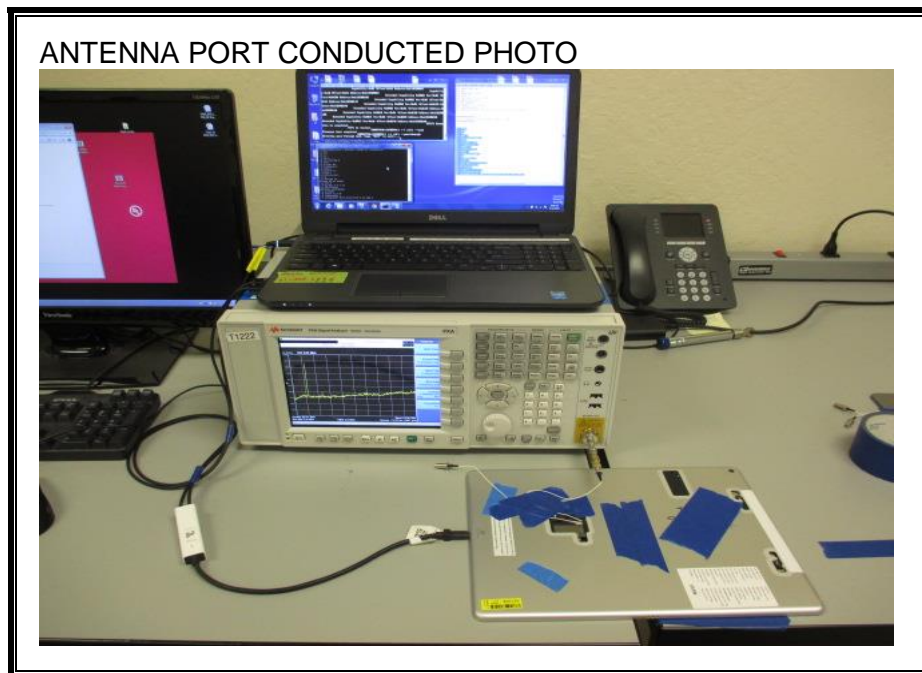


### 12.2. RADIATED RF MEASUREMENT SETUP (BELOW 1 GHz)




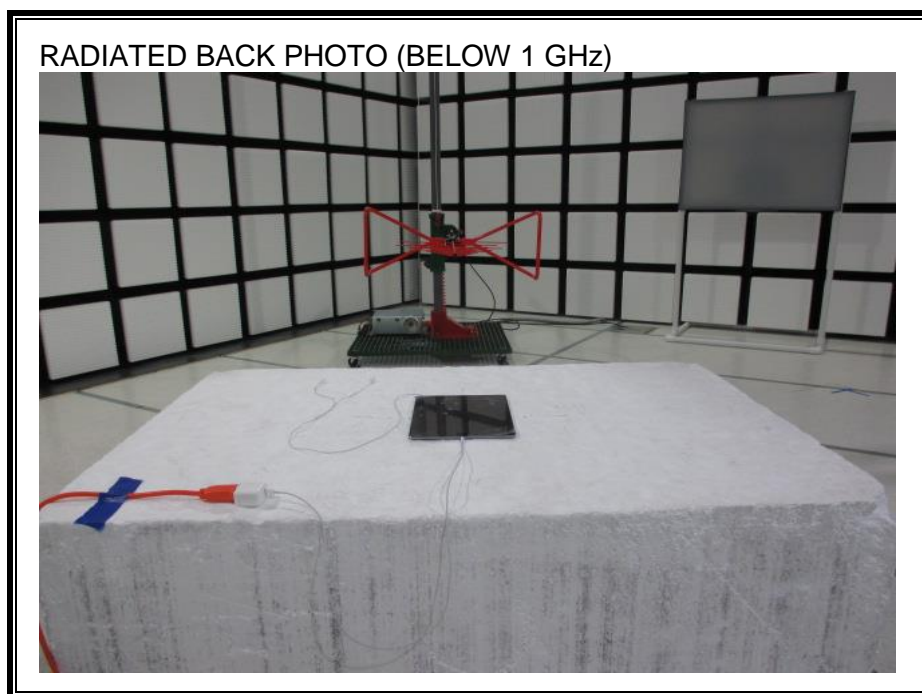


### 12.3. RADIATED RF MEASUREMENT SETUP FOR PORTABLE CONFIGURATION

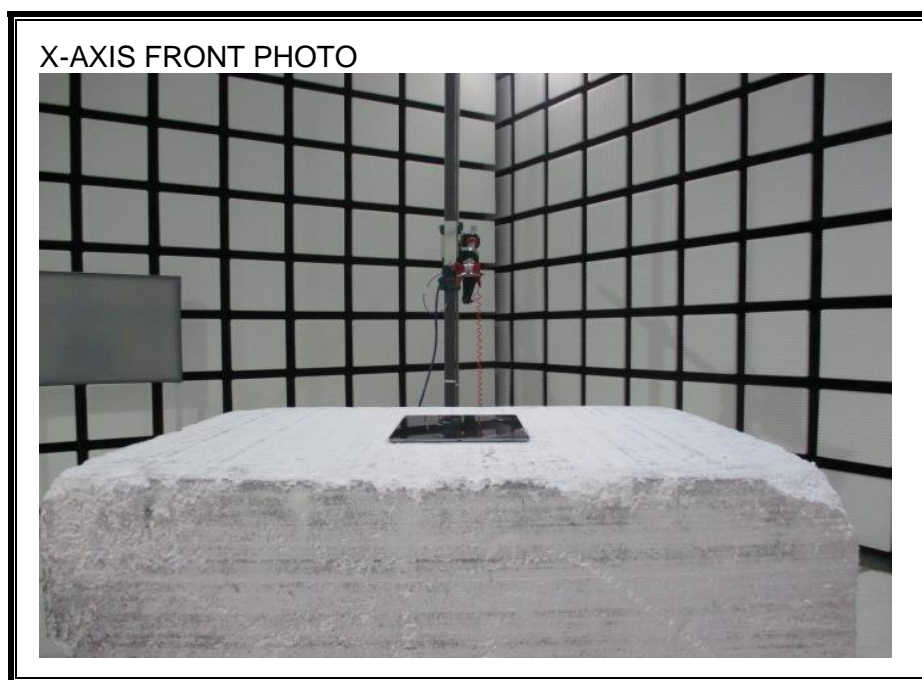

Y-AXIS FRONT PHOTO

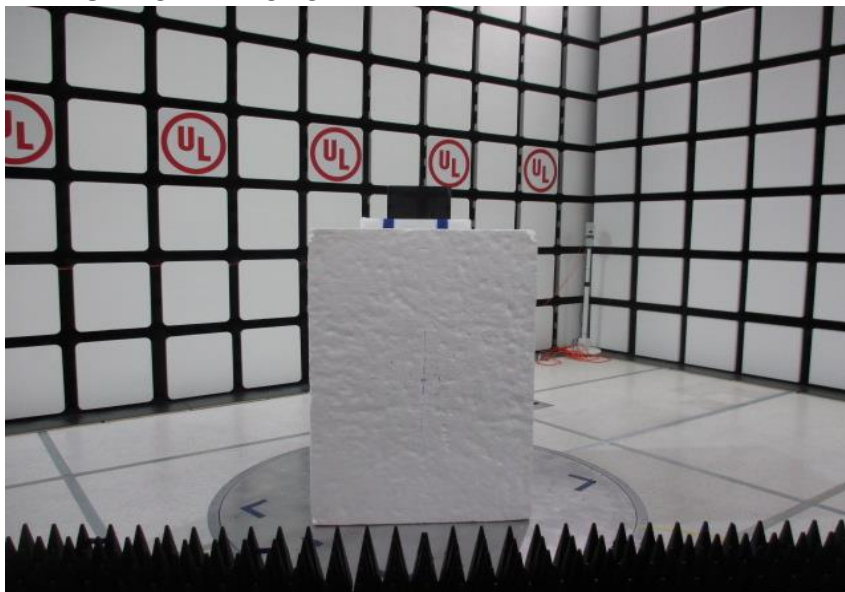


Z-AXIS FRONT PHOTO

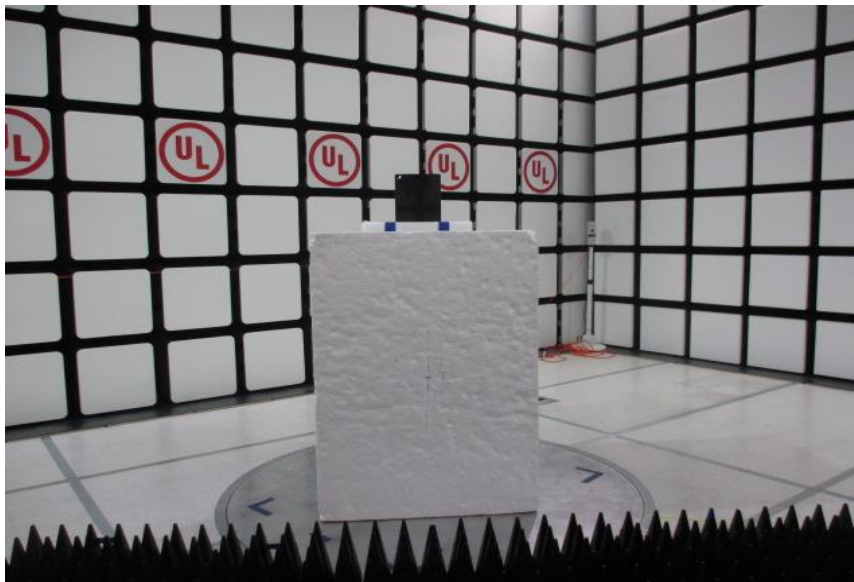

## 12.4. POWERLINE CONDUCTED EMISSIONS MEASUREMENT SETUP

EUT ONLY LINE CONDUCTED FRONT PHOTO

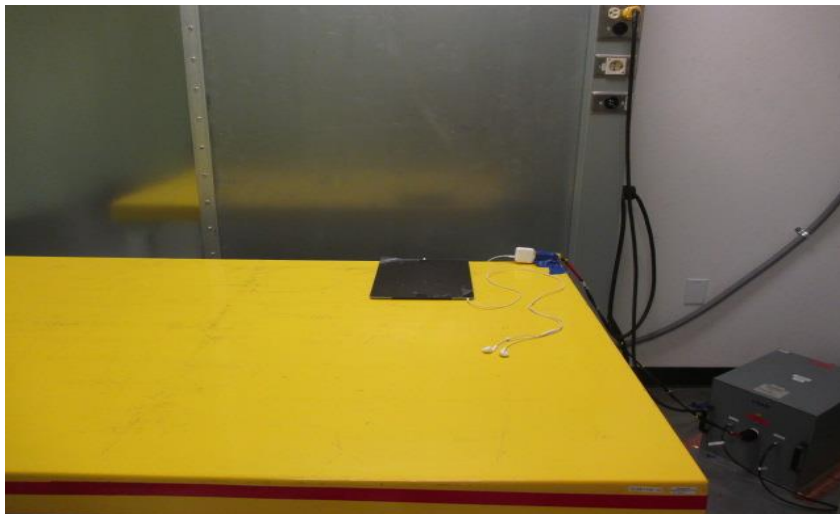


EUT ONLY LINE CONDUCTED BACK PHOTO





EUT WITH LAPTOP LINE CONDUCTED FRONT PHOTO

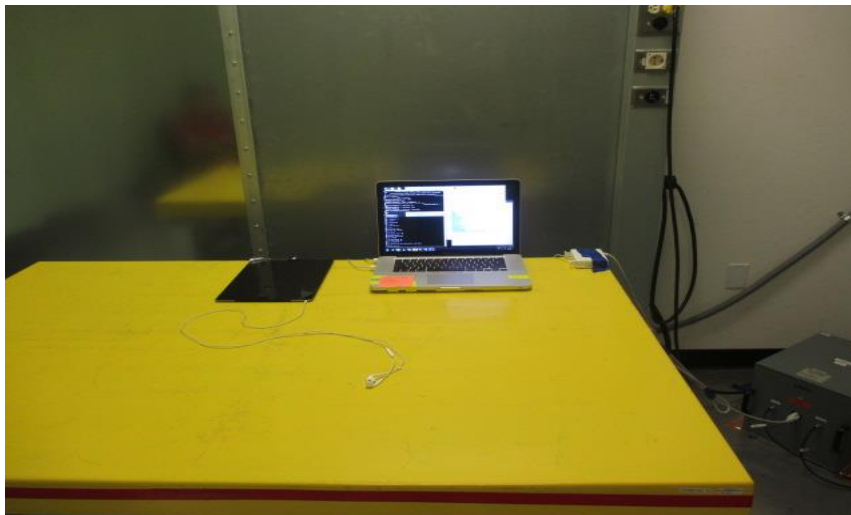


EUT WITH LAPTOP LINE CONDUCTED BACK PHOTO



## 12.5. DYNAMIC FREQUENCY SELECTION MEASUREMENT SETUP

### 12.5.1. STANDARD CLIENT MODE


DFS FRONT PHOTO (EUT)

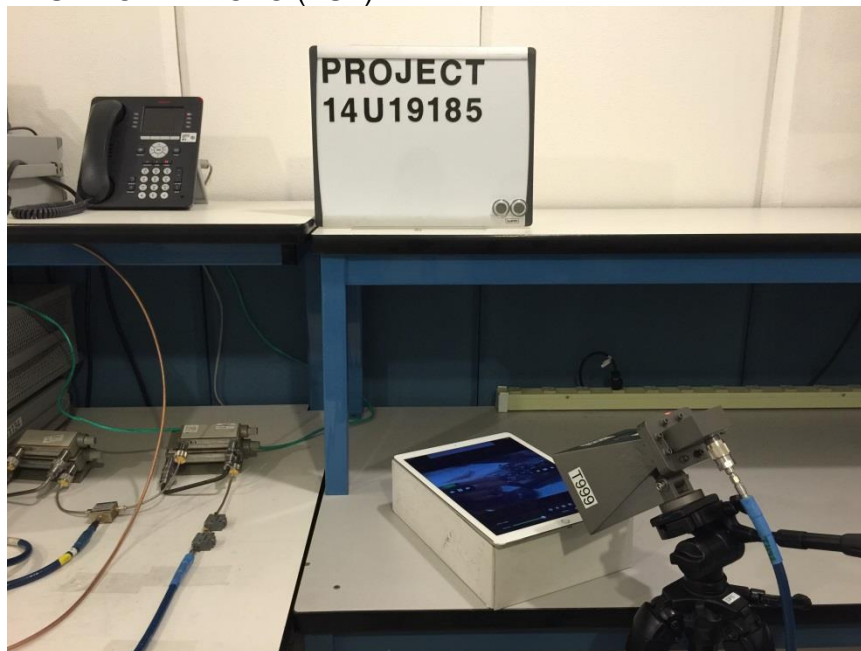

DFS BACK PHOTO (EUT)




DFS PHOTO (CLIENT MODE SETUP)

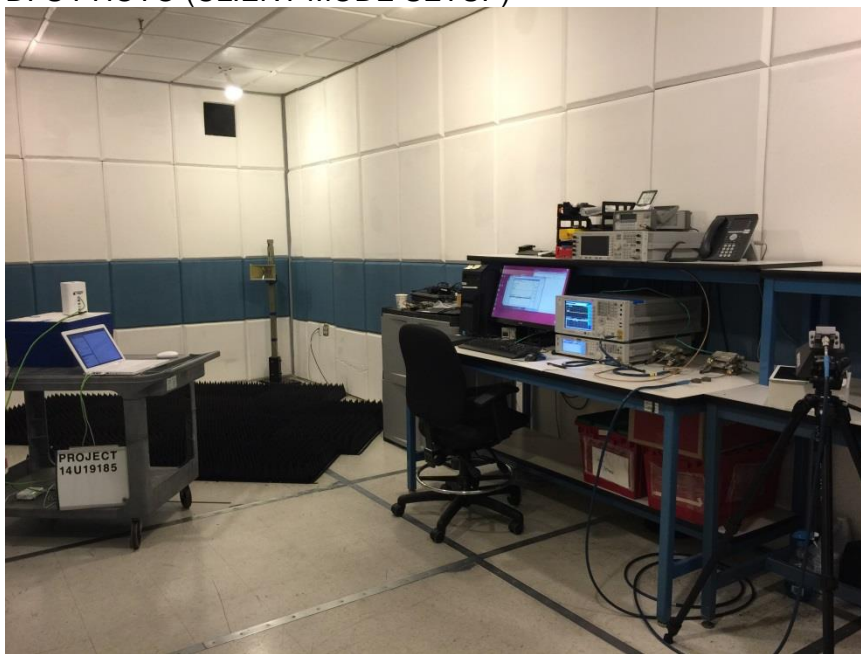


## 12.5.2. CLIENT TO CLIENT MODE

DFS FRONT PHOTO (EUT)

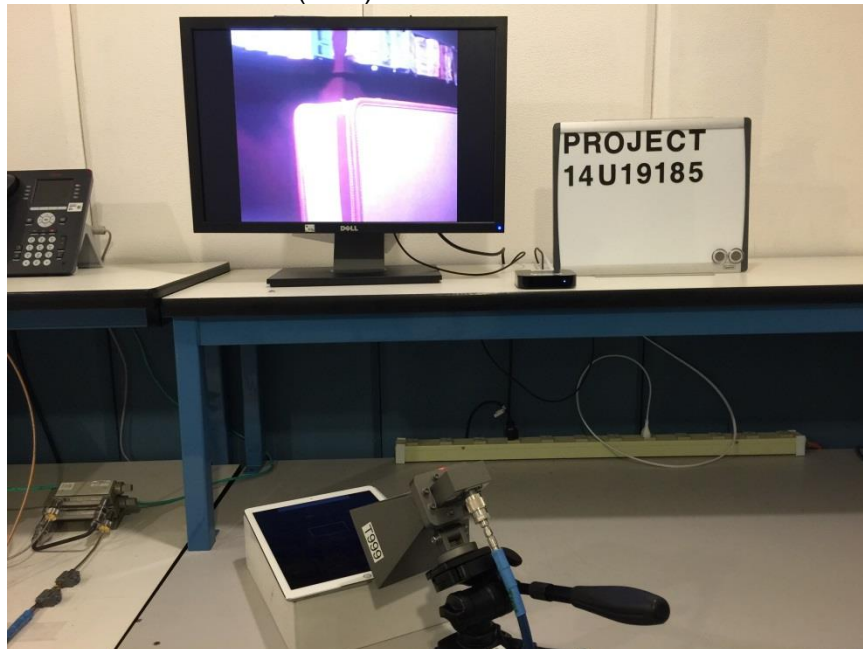


DFS BACK PHOTO (EUT)

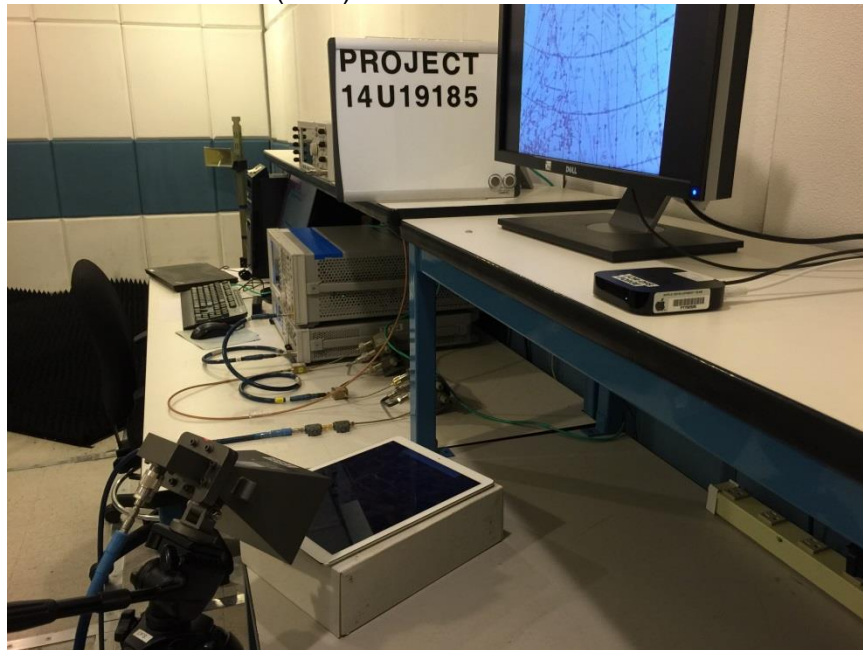



DFS PHOTO (CLIENT-TO-CLIENT COMMUNICATIONS MODE  
SETUP)

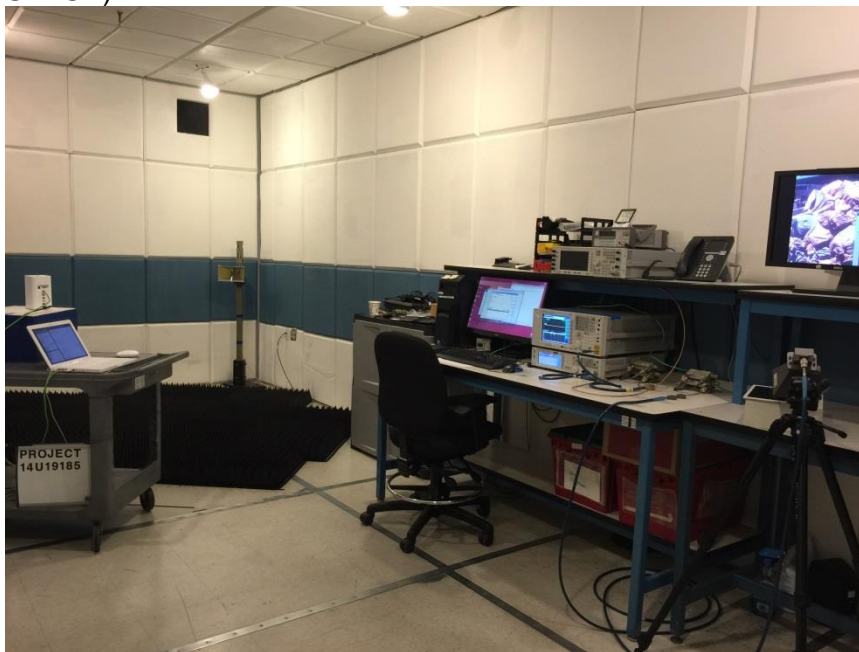

**END OF REPORT**