



12. SETUP PHOTOS



ANTENNA PORT CONDUCTED RF MEASUREMENT SETUP

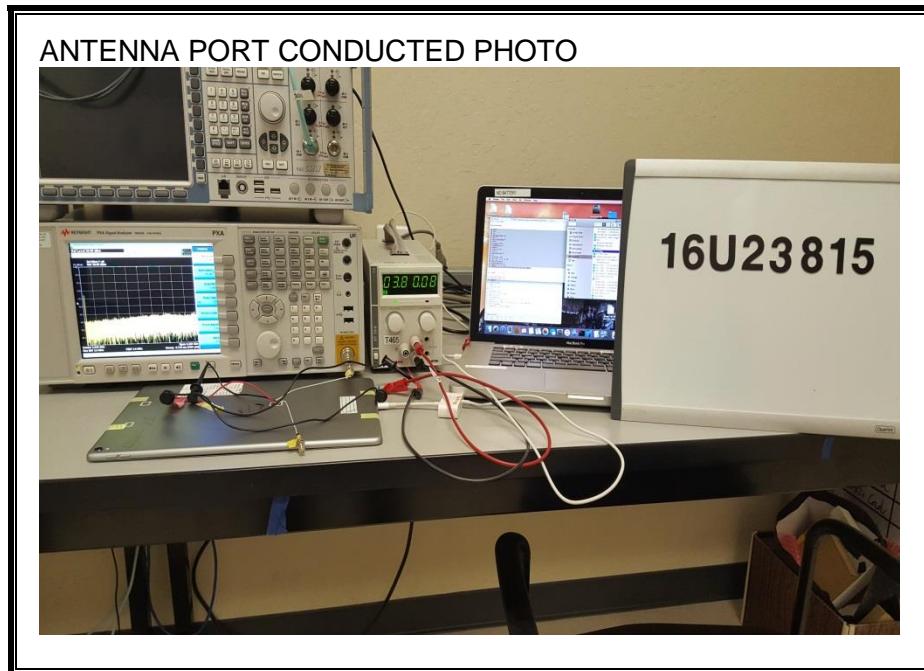


RADIATED RF MEASUREMENT SETUP (BELOW 1 GHz)

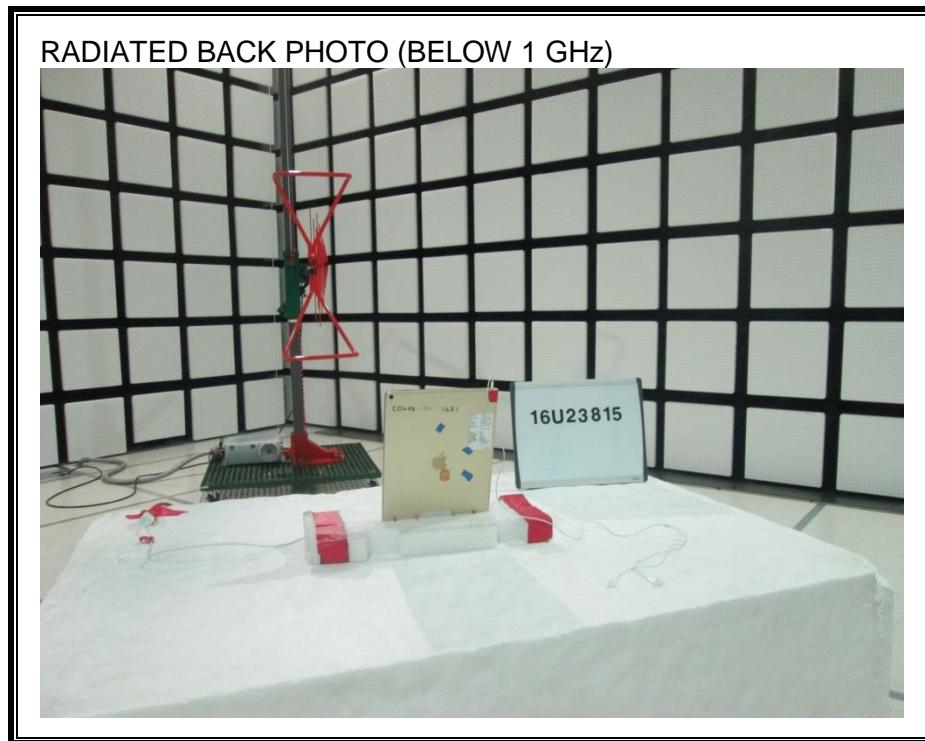

RADIATED RF MEASUREMENT SETUP FOR PORTABLE CONFIGURATION

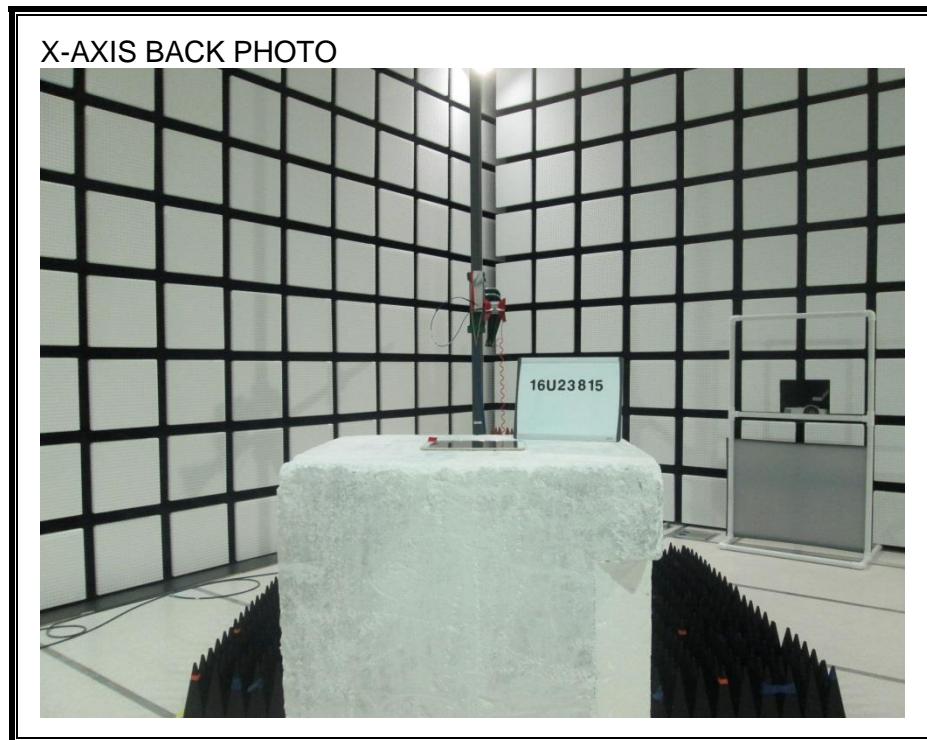
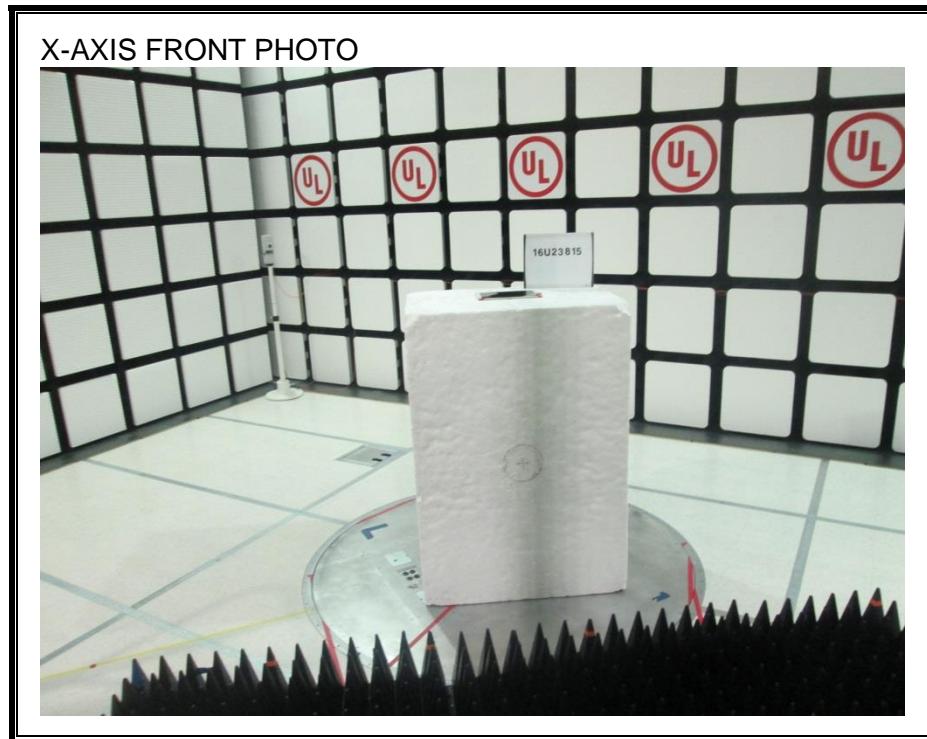


Y-AXIS FRONT PHOTO

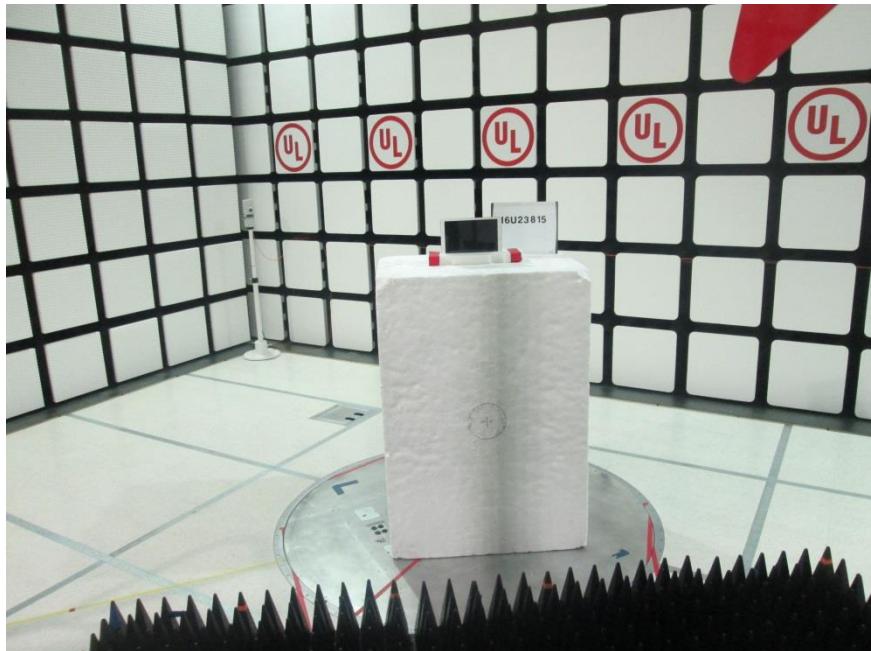

Y-AXIS BACK PHOTO



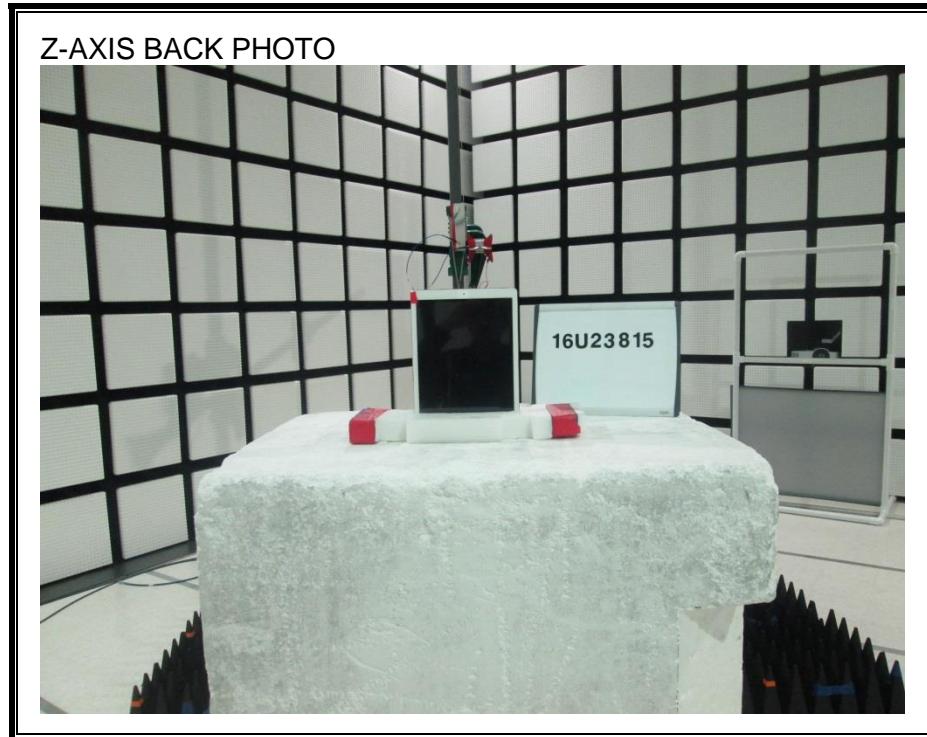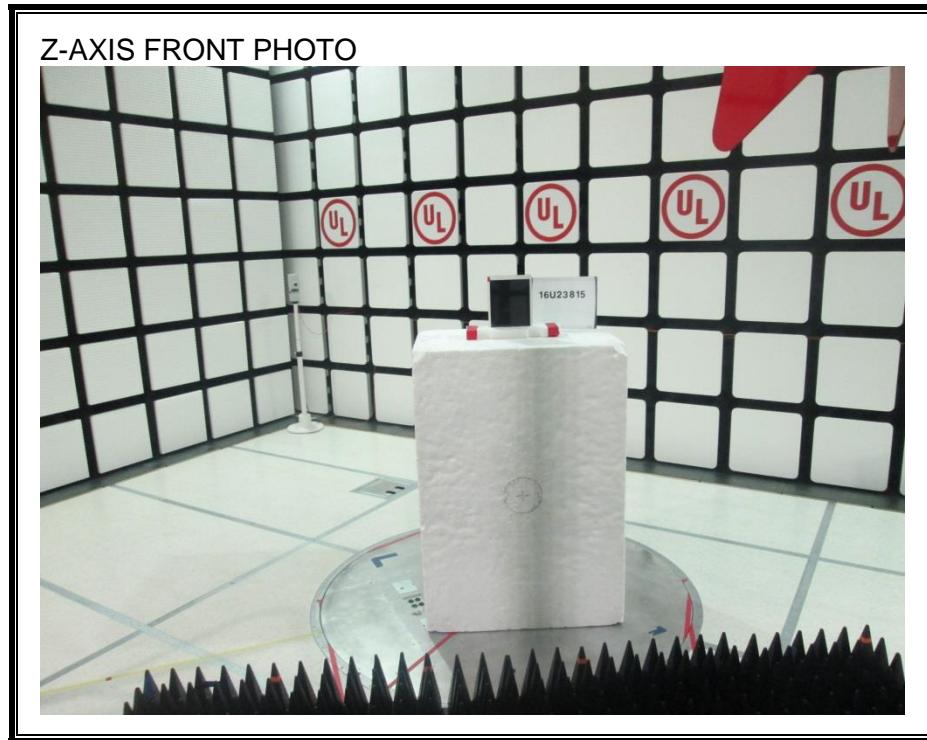

POWERLINE CONDUCTED EMISSIONS MEASUREMENT SETUP

EUT POWERED BY AC/DC ADAPTER VIA USB CABLE

LINE CONDUCTED FRONT PHOTO




LINE CONDUCTED BACK PHOTO



EUT POWERED BY HOST PC VIA USB CABLE

LINE CONDUCTED FRONT PHOTO


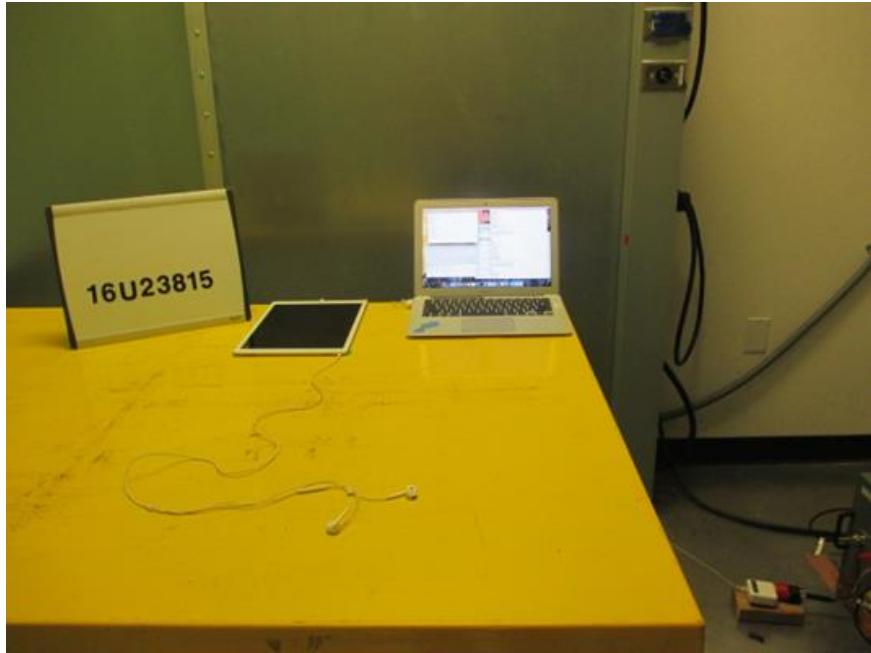


LINE CONDUCTED BACK PHOTO




DYNAMIC FREQUENCY SELECTION MEASUREMENT SETUP

STANDARD CLIENT MODE

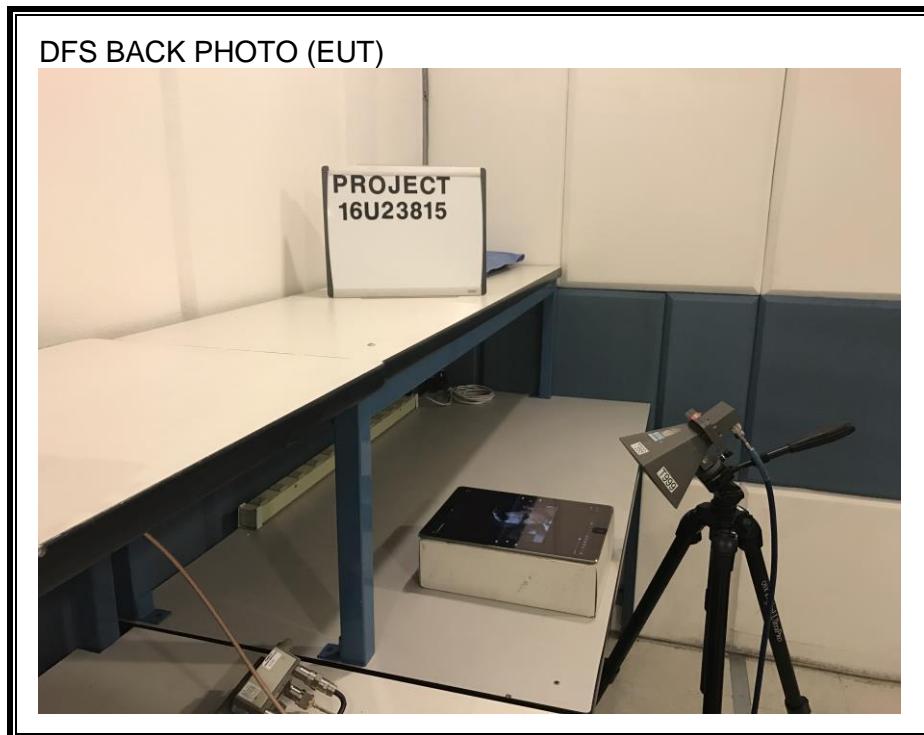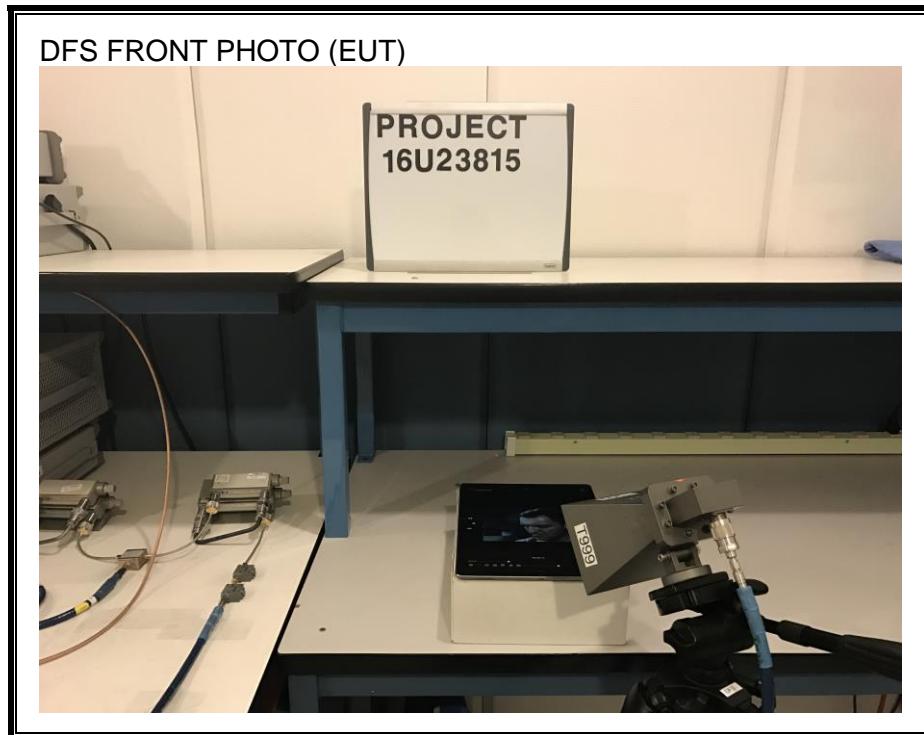

CLIENT TO CLIENT MODE



DFS FRONT PHOTO (EUT)

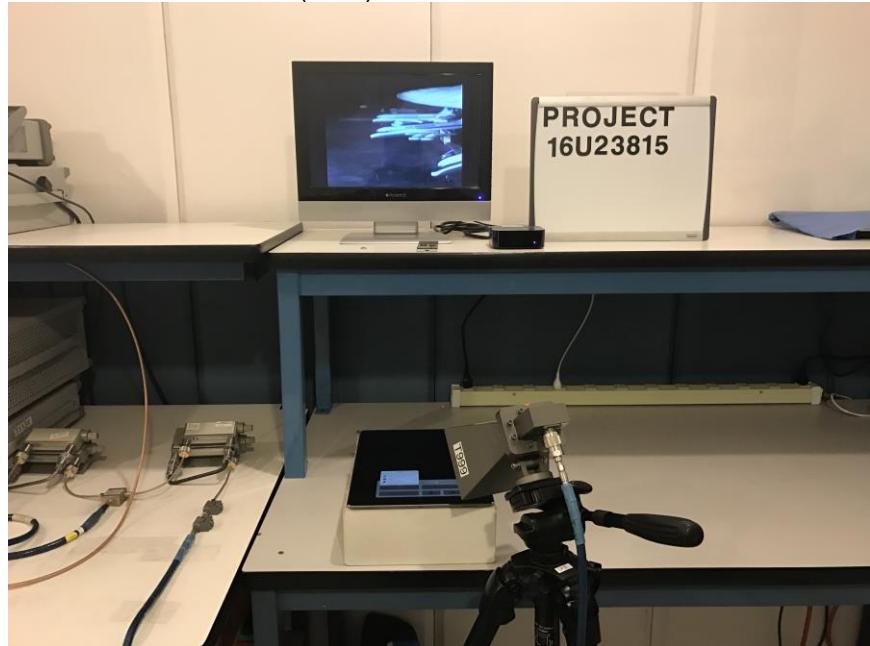

DFS BACK PHOTO (EUT)



FULL SETUP

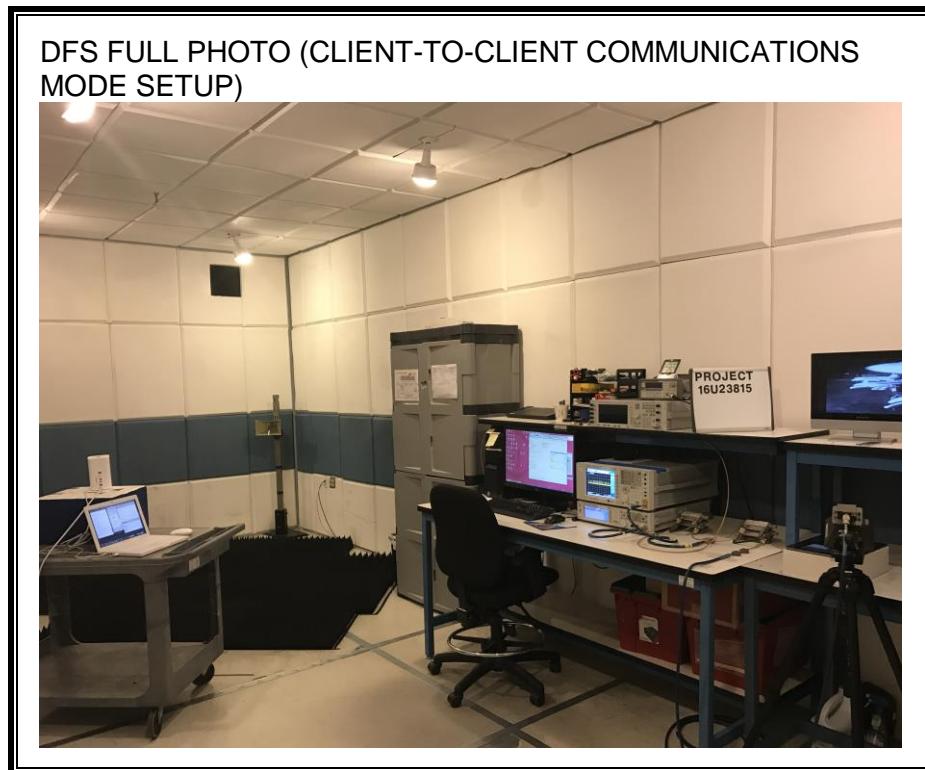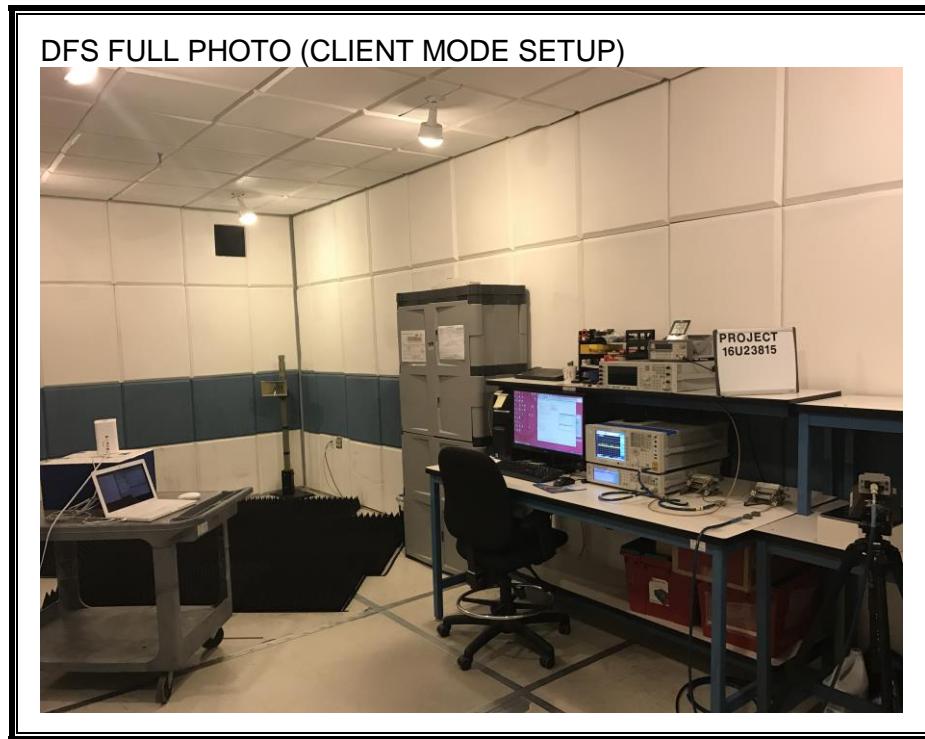

END OF REPORT

Page 906 of 906