



## 12. SETUP PHOTOS

### ANTENNA PORT CONDUCTED RF MEASUREMENT SETUP

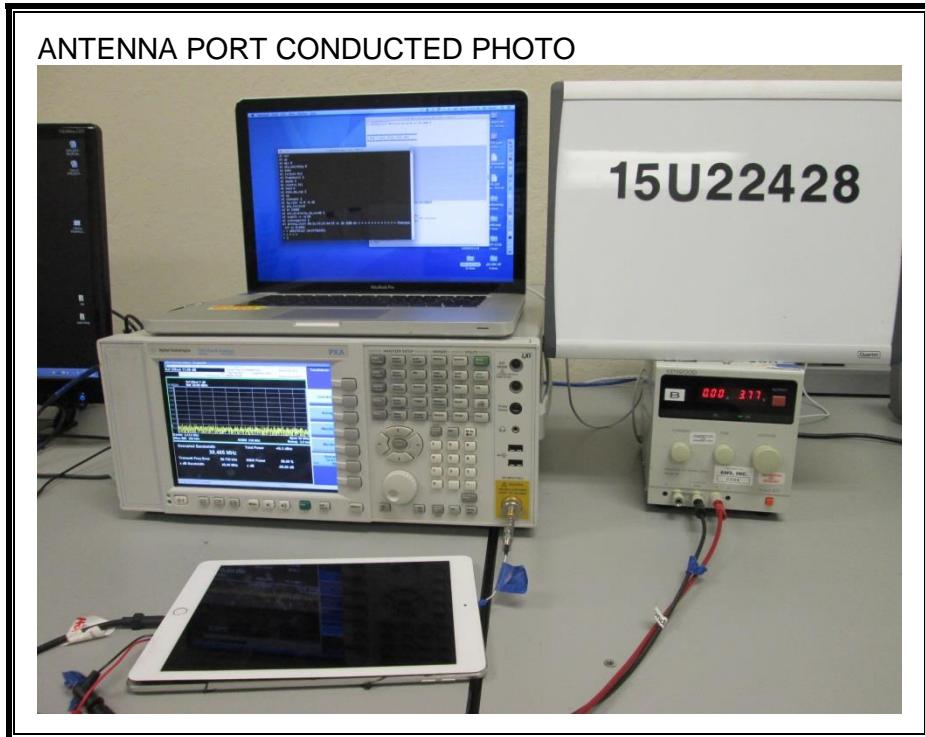

**RADIATED RF MEASUREMENT SETUP (BELOW 1 GHz)**

RADIATED FRONT PHOTO (BELOW 1 GHz)

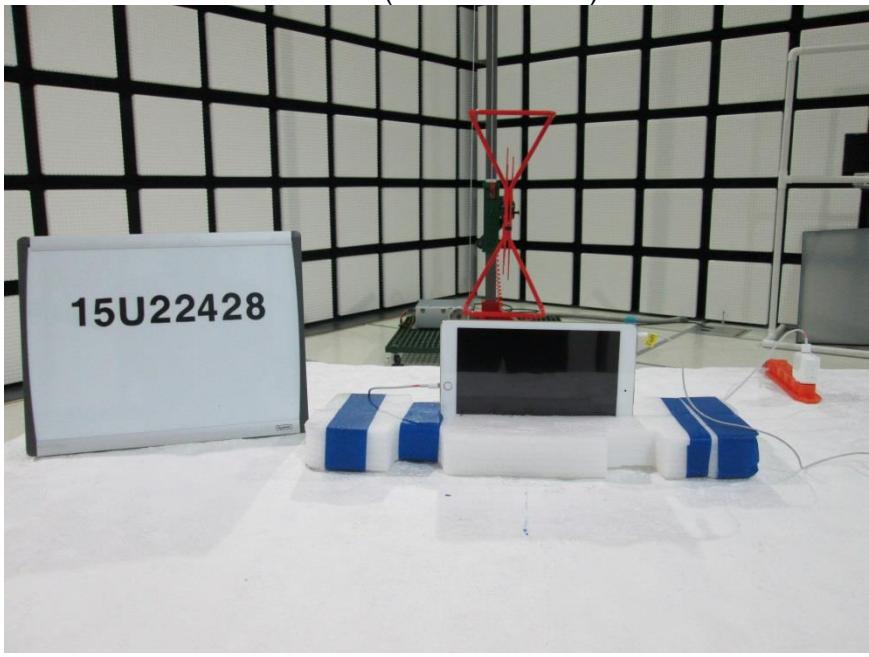


RADIATED BACK PHOTO (BELOW 1 GHz)




**RADIATED RF MEASUREMENT SETUP (ABOVE 1 GHz)**

RADIATED FRONT PHOTO (ABOVE 1 GHz)

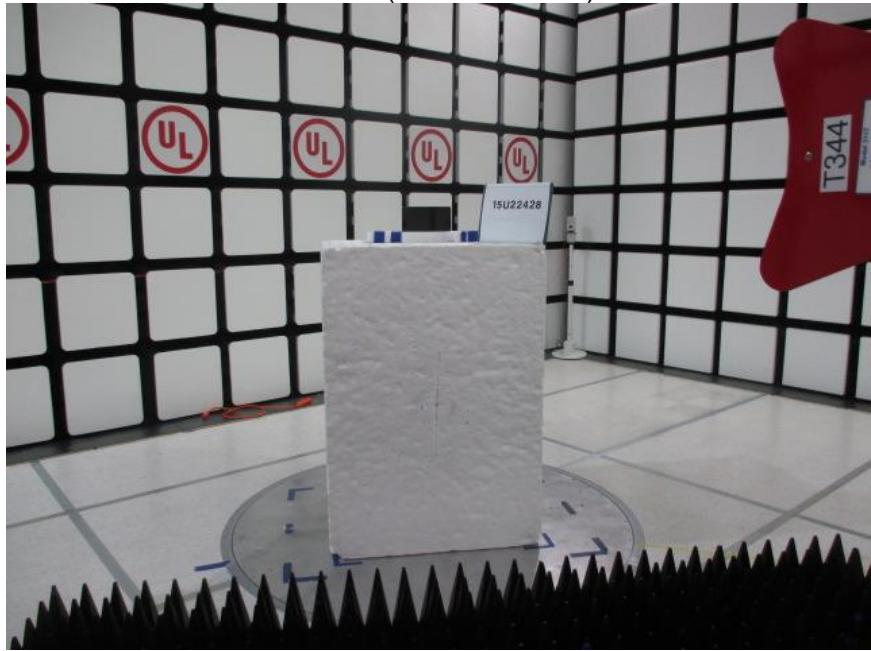


RADIATED BACK PHOTO (ABOVE 1 GHz)

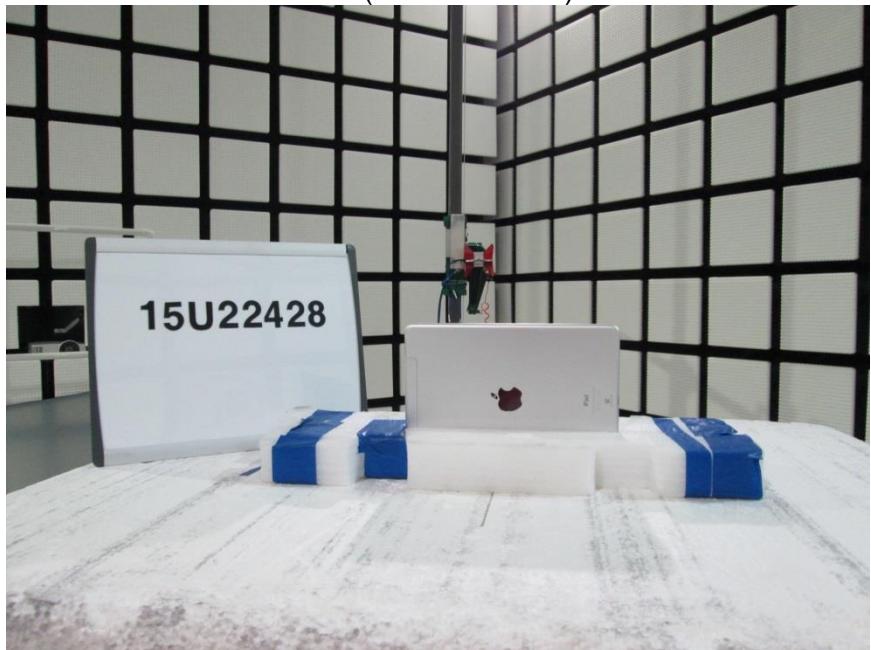


**RADIATED RF MEASUREMENT SETUP FOR PORTABLE CONFIGURATION**




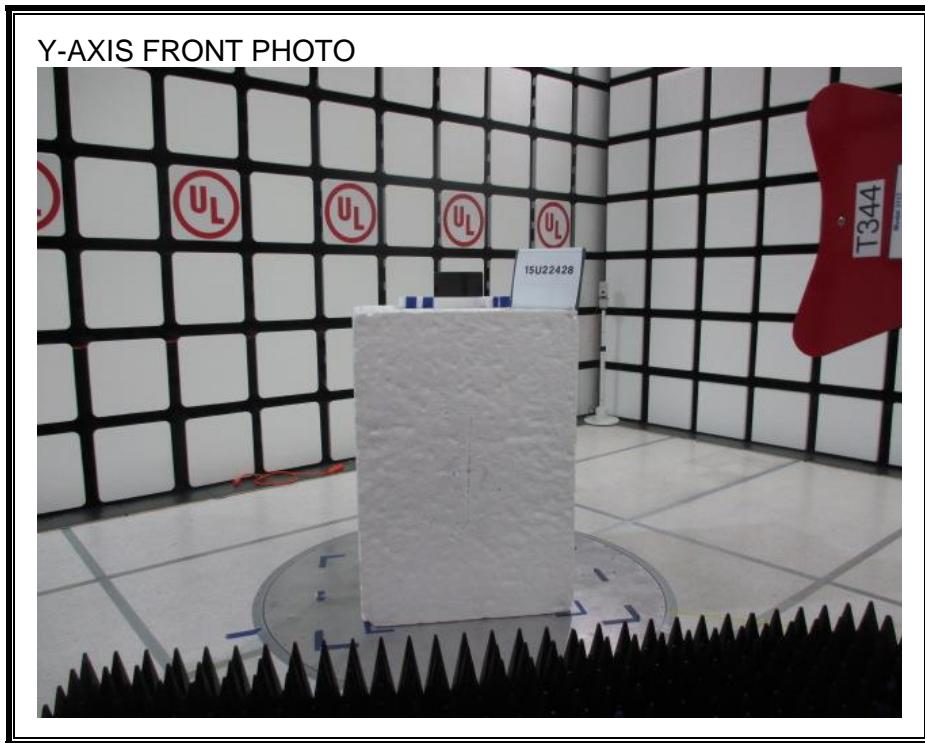

Z-AXIS FRONT PHOTO

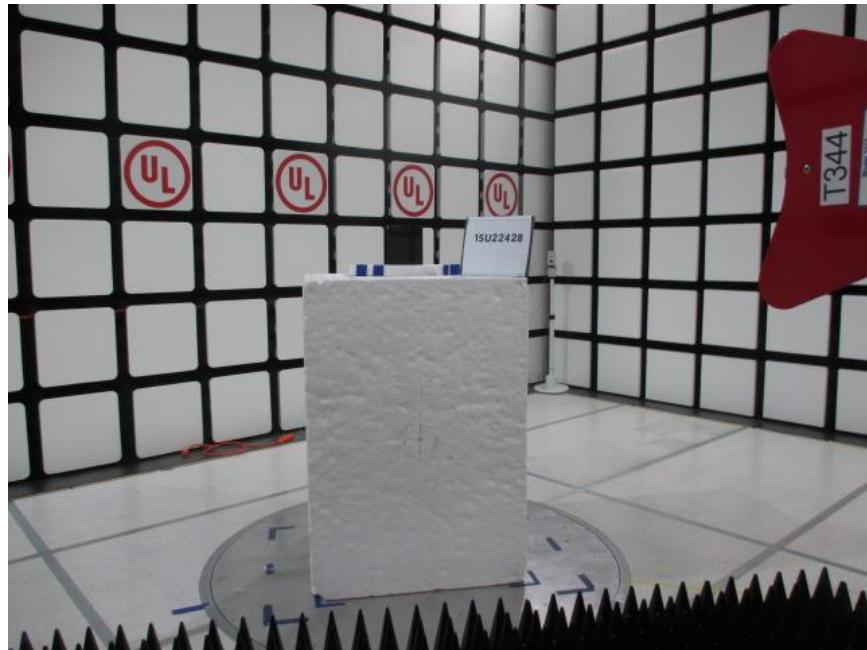

Z-AXIS BACK PHOTO

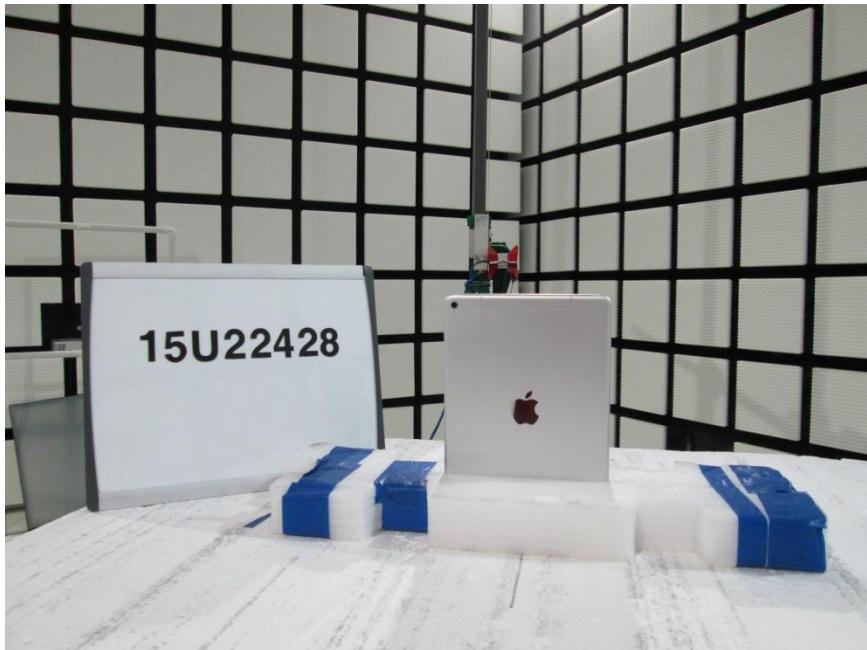

**POWERLINE CONDUCTED EMISSIONS MEASUREMENT SETUP**

**EUT POWERED BY AC/DC ADAPTER VIA USB CABLE**

LINE CONDUCTED FRONT PHOTO



LINE CONDUCTED BACK PHOTO




**EUT POWERED BY HOST PC VIA USB CABLE**

LINE CONDUCTED FRONT PHOTO




LINE CONDUCTED BACK PHOTO


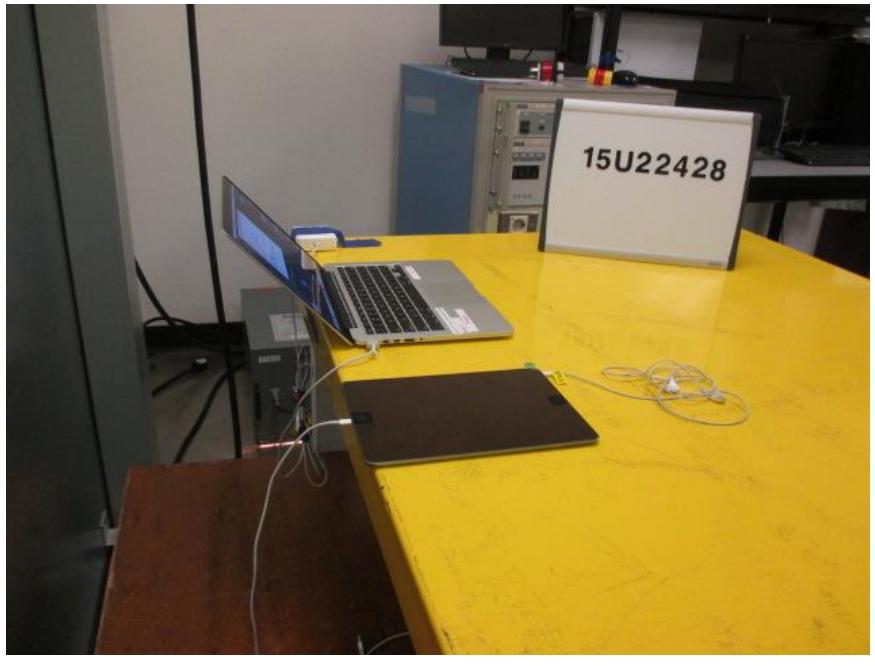


**DYNAMIC FREQUENCY SELECTION MEASUREMENT SETUP**


**STANDARD CLIENT MODE**

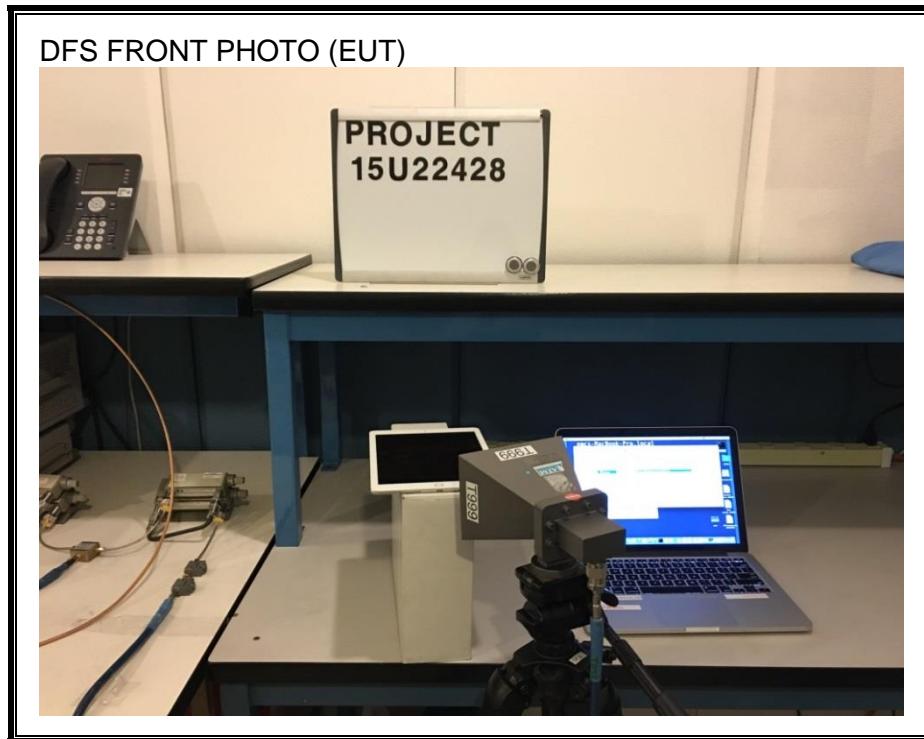


**CLIENT TO CLIENT MODE**

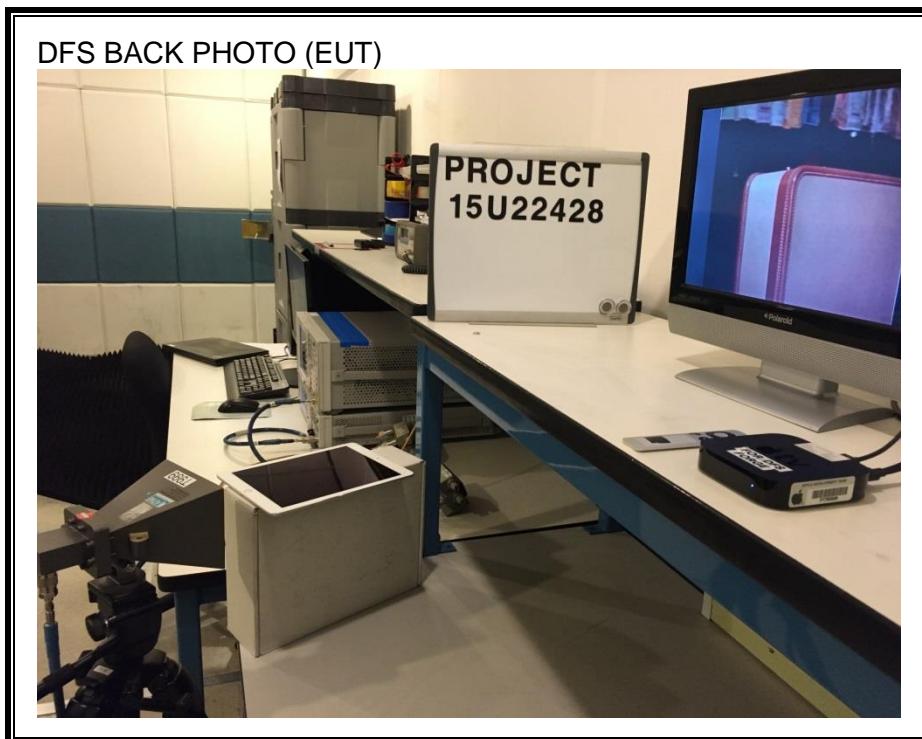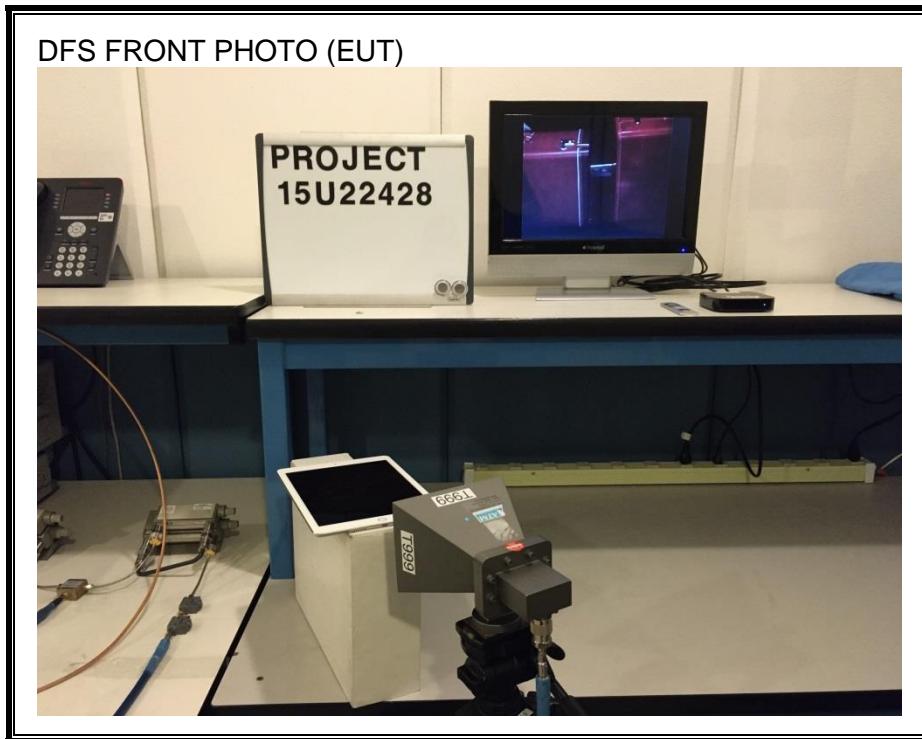

**FULL SETUP**

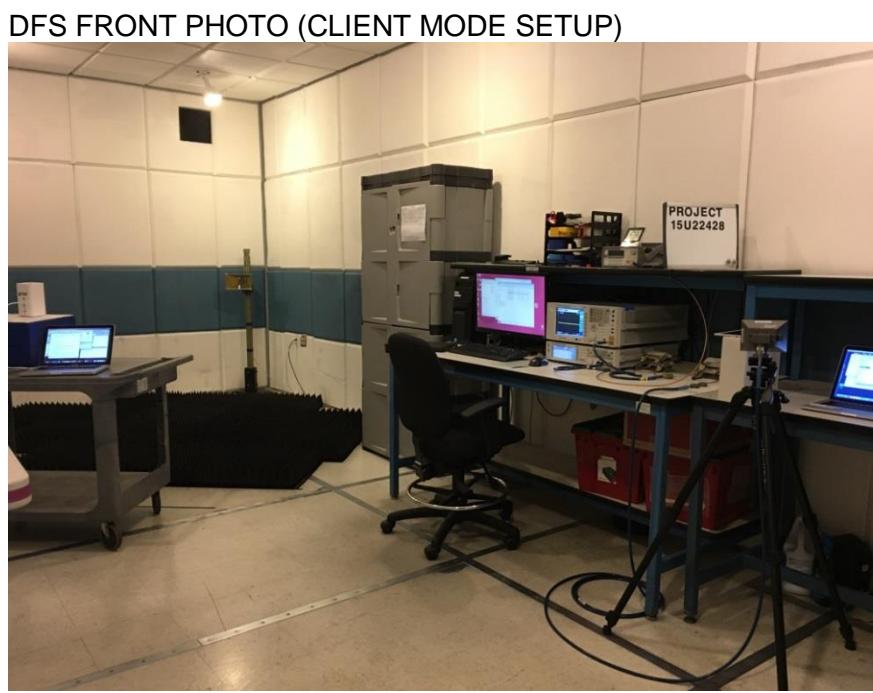

DFS FRONT PHOTO (CLIENT-TO-CLIENT COMMUNICATIONS MODE SETUP)

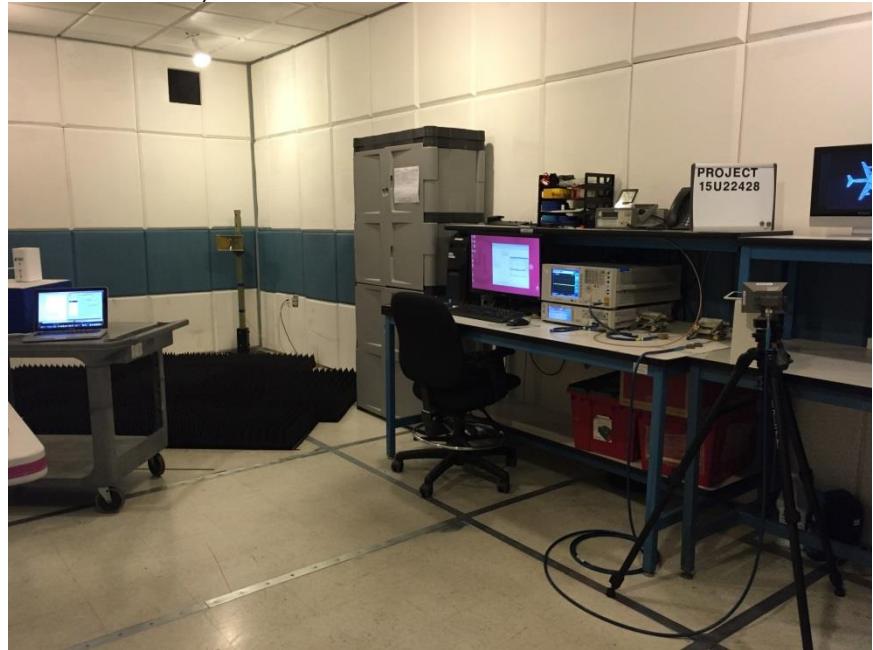

**END OF REPORT**

Page 987 of 987