

SAFETY INSTRUCTIONS



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The exclamation point with an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

1. **READ INSTRUCTIONS.** All the safety and operating instructions should be read before the appliance is operated.
2. **RETAIN INSTRUCTIONS.** The safety and operating instructions should be retained for future reference.
3. **HEED WARNINGS.** All warnings on the appliance and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS.** All operating and use instructions should be followed.
5. **WATER AND MOISTURE.** The appliance should not be used near water — for example, near a bathtub, washbowl, kitchen sink, laundry tub, in wet basement or near swimming pool, etc.
6. **VENTILATION.** The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. **HEAT.** The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.
8. **POWER SOURCE.** The appliance must be connected to a power source of the type described in the operating instructions or as marked on the appliance.
9. **IMPORTANT.** The following applies only to UL LISTED UNITS. This appliance is being supplied with the newly required safety feature of a polarized plug. You will note that one prong is larger than the other so that it fits only one way into the receptacle. **DO NOT TAMPER WITH OR DEFEAT ITS PURPOSE** under any circumstances.
10. **POWER CORD PROTECTION.** The power-supply cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it paying particular attention to cord at plug, convenience receptacle, and the point it exits from the appliance.
11. **CLEANING.** The appliance should be cleaned only as recommended by the manufacturer.
12. **NONUSE PERIODS.** The power cord of the appliance should be unplugged from the outlet when unused for a long period of time.
13. **OBJECT AND LIQUID ENTRY.** Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through the openings.
14. **DAMAGE REQUIRING SERVICE.** The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or plug has been damaged; or
 - B. Objects have fallen or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in the performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
15. The user should not attempt to service the appliance beyond that described in the operating instructions. **OTHER SERVICING SHOULD BE REFERRED TO QUALIFIED SERVICE PERSONNEL.**