


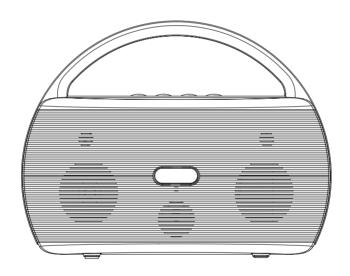

# **SMI440BT**

INSTRUCTION MANUAL
MANUAL DE INSTRUCCIONES



Distributed by SMC Global®

SMC Global® is a registered trademark or The Singing Machine Co., Inc. SMC Global® es marca registrada de The Singing Machine Co., Inc.





# **Warnings**



#### CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. The Caution marking is located on the bottom panel.



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this product.

#### FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.
- · The rating information is located at the bottom of the unit.

#### INDUSTRY CANADA NOTICE:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference, and
- This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3(B)/NMB-3(B)

# **Important Safety Information**

- 1. Read these Instructions.
- 2. Keep these Instructions
- Heed all Warnings.
- 4. Follow all Instructions.
- Do not use this apparatus near water.
- 6. Clean only with a dry cloth.
- 7. Do not block any of the ventilation openings. Install in accordance with the Manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- 12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus
- 16. The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use. In order to completely disconnect the apparatus from power, the mains plug should be completely removed from the AC outlet socket
- CAUTION: To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.

PORTABLE CART WARNING












## **Location of Controls**

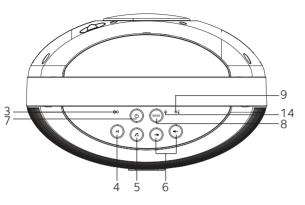

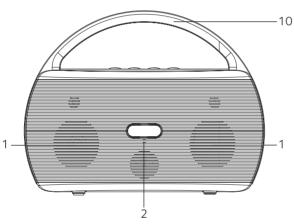

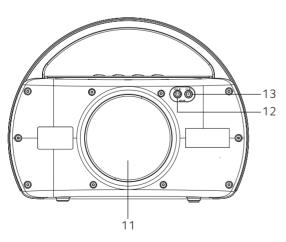

- 1. Main Speakers
- 2. Microphone for calls
- B. Bluetooth 🛭 Indicator
- 4. Bluetooth Pairing/ Play/Pause ►II Button
- 5. Receive Call/Transfer Call/Redial Call/End Call
- 6. -▶/ ◀+ Volume (For Bluetooth Mode)
  Buttons
- 7. Power On/Off 🖰 Button
- 8. BASS Button
- Charging ☐ Indicator (Red for charging; Green for fully charged)
- 10. Carrying Handle
- 11. Subwoofer
- 12. LINE IN Jack
- 13. DC IN Jack
- 14. BASS Indicator






## Installation

## Plugging the Unit In/Recharging the Battery


Insert the small end of the AC adapter into the DC IN jack on the rear of the unit. Insert the other end (with the 2 blades) into a conveniently located AC outlet having 110-240V AC, 50/60Hz.

### Notes:

- Only use the supplied AC adapter. Failure to do so may cause a fire or damage the unit
- The AC adapter included with this unit is for its use only. Do not use it with other equipment.

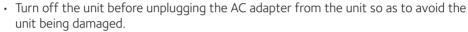


- When the unit is not going to be used for a long time, disconnect the AC adapter from the AC outlet.
- If the unit acts erratically or malfunctions, unplug the unit, wait 20 seconds and plug
  it back in.
- Never use an AC adapter that is damaged. Route power lead in a safe manner and make sure it is not subjected to trapping or pinching. If the power lead is damaged, refer to a qualified service agent.

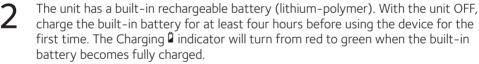

### Notes:

- The built-in battery can only be recharged when the unit is off.
- While using the built-in battery, the environmental temperature should be 5°C (41°F) to 35°C (95°F).
- To get the longest service life from the built-in battery, charge at indoor temperature.
- The built-in battery in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 100°C (212°F), or incinerate.
- The battery should not be exposed to excessive heat such as sunshine, fire or the like. Do not throw batteries in fire!
- Before throwing away any batteries, consult your local community for specific recycling.
- When the battery is low, the Bluetooth § indicator will blink yellow. The unit will switch to Standby mode automatically when the battery is low.

**CAUTION**: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

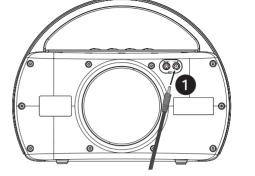










## Pairing a Bluetooth Device



**Tip:** If you want to connect your Bluetooth speaker to another Bluetooth audio device, you need to disconnect current device first and follow the steps at right to make a new connection.

- Press the Power On/Off (b) button to turn the unit on; the Bluetooth indicator will blink yellow. After four seconds, it will slowly blink blue, and then after six seconds, it will start blinking rapidly to indicate it is in Pairing mode.
- On the Bluetooth device, enable
  Bluetooth and select "OUTDOOR
  SPEAKER" from the Device List.
  (Refer to the user manual of the
  device to be connected for detailed
  operations.) Press the Bluetooth
  Pairing/Play/Pause III button to
  initiate pairing. If the Bluetooth
  device prompts for a passcode, use
  "0000". Some Bluetooth devices will
  ask you to accept the connection. If
  the units are paired properly, the
  speaker will beep twice. If it failed, the
  Bluetooth indicator will blink slowly.

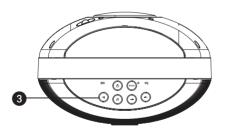

If the pairing fails, perform the following:


Press and hold the Bluetooth Pairing/ Play/Pause II button until the Bluetooth indicator blinks quickly to enter the Pairing mode. On the Bluetooth device, enable Bluetooth and select "OUTDOOR SPEAKER" from the Device List (see step 2 above).

On some devices such as computers, once paired you must select the unit from the Bluetooth menu and choose "Use as Audio Device (stereo)" or similar. Pairing remains intact when the unit and/or your Bluetooth device is taken out of communication range. An active connection will be re-established when your Bluetooth device returns within range. When the Bluetooth function of your Bluetooth enabled device is turned on again, reconnection can be achieved by pressing the  $\checkmark$  button.







Using a Bluetooth Device

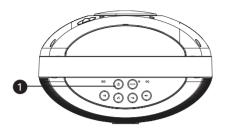

1 Press the Power On/Off 🖰 button to turn the SMI440BT on. With a unit paired (see previous section), operate your Bluetooth device and its sound will be heard through the SMI440BT's speakers.

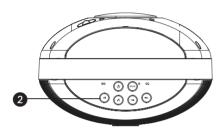


Press the Bluetooth Pairing/Play/
Pause II button to pause playback.
Press again to resume playback.

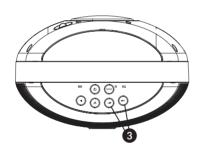

Adjust the volume using the ->/-+

Volume buttons. You can also adjust
the volume on the device to which
you are paired.

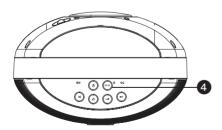

4 Enhance the bass sound by pressing the BASS button.





## Receiving/Dialing a Phone Call



This unit is equipped with a built-in microphone (located below the brand plate on front panel), which allows you to make or end calls of a connected mobile phone through this unit. Make sure your Bluetoothenabled mobile phone is paired with the unit. When there is an incoming call to the connected mobile phone, you will hear an incoming call alert tone from the unit.

### To Use This Feature:

- 1. Press the 🖍 button to answer the incoming call.
- 2. Press the R button again to end call.
- 3. To reject the incoming call, press and hold the **6** button.
- 4. To transfer the sound between the mobile phone and the unit, press and hold the f button during a call.
- 5. To redial the last number retained in the memory of the mobile phone, press the button twice.


#### Notes:

- Re-dialing function is unavailable if there is no dial record feature in your mobile phone.
- This unit will not operate or may operate improperly with some Bluetooth mobile phones/audio players.
- If the conversation is not clear, try to move closer to the microphone (located below the brand plate on front panel).







Using the Line In Jack

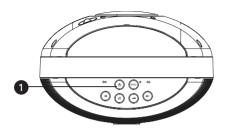

Press the Power On/Off b button to turn the SMI440BT on

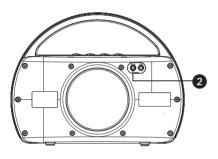

Insert one end of an audio cable (not included) into the LINE OUT or Headphone jack on your external audio unit and the other end into the LINE IN jack on the rear of the SMI440BT; the unit will automatically switch to Line In mode. The Bluetooth indicator's color will change to yellow, indicating that the unit is in Line In mode.

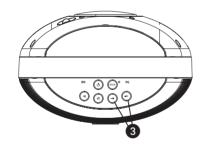

3 Start playback of the external unit and the external audio unit's output sound will be heard through the SMI440BT's speakers.

The ¬►/ ◀+ Volume buttons are not used in the Line-in mode. To adjust volume, use the volume control on the external audio unit.



- 4 Enhance the bass sound by pressing the BASS button.
- To stop playback, disconnect the line in cable from the Line In jack; the unit will switch to Bluetooth mode automatically. The Bluetooth indicator will light solid blue.





## **Troubleshooting Guide**

Should this unit exhibit a problem, check the following before seeking service:

### No Power

- Power is not on; press the Power On/Off  $\circ$  button to turn the power on.
- · Make sure unit is connected to AC power.
- Make sure the batteries are recharged (if not connected to AC power).

### No Sound - General

- External device's volume is set to minimum: raise volume.
- The SMI440BT's volume is set to minimum: raise volume.
- The audio cable is plugged in. Unplug cable if not using Line In function.

### The Bluetooth device cannot pair or connect with the unit.

- You have not activated the Bluetooth function of your device. Refer to the user manual of your device to activate Bluetooth function.
- The unit is not in pairing mode. Press and hold the Bluetooth Pairing/Play/Pause ▶II button until the Bluetooth indicator blinks fast.
- The unit is already connected with another Bluetooth device; disconnect that device and then try again.

### Unit acts erratically or does not react when buttons are pressed.

• Remove AC adapter, wait 20 seconds and reconnect. Then turn on the unit again.







# **Specifications**

GENERAL	
Power	110-240V AC, 50/60Hz
Power Output	DC 15V 2A
Max. Output Power	2x5 W (Main) + 20W (Subwoofer)
Dimensions	46 x 9.88 inches (33 x 21.5 x 25.1 cm)
Weight	
RECHARGEABLE BATTERY	
Battery Type 1	1.1V 1700mAh Lithium Polymer Battery
Charging Voltage	15V DC
Operating Time Approx. 4	nours at 50% volume after fully charged
Charging Time	Approx. 3.5 hours
BLUETOOTH	
Bluetooth Version	V2.1+EDR
Working DistanceL	Ip to 10 meters measured in open space

Specifications are subject to change without notice.

......(wall and structures may affect range of device)







## **Limited Warranty and Service**

**THE SINGING MACHINE COMPANY, INC.** warrants this product to be free from defects in material and workmanship for a period of **ninety (90)** days from date of sale to the original consumer purchaser. Product will be repaired or replaced with a new or reconditioned product at no additional charge if it is proven to be defective within the **ninety (90)** days period when said product is returned at customer expense within the warranty period. THIS WARRANTY DOES NOT COVER ANY EXPENSES INCURRED IN THE REMOVAL AND REINSTALLATION OF THIS PRODUCT.

This warranty does not apply to any product damaged by accident, misuse, abuse, improper line voltage, fire, water, lightning or other acts of God, or any parts or services furnished by anyone else. The warranty does not cover cartons, carrying cases, batteries, broken or damaged cabinets, or any items used in connection with the product or consequential damage due to defect in the product. This warranty does not cover products sold AS IS or Re-manufactured units or units sold outside the SMC distribution channel.

ALL IMPLIED WARRANTIES ARE LIMITED TO THE DURATION OF THIS WARRANTY. THIS IS THE COMPLETE WARRANTY AND NO OTHER EXPRESSED WARRANTY IS VALID. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR AN EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTITAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state.

**IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD**, please call us first at **(866) 670–6888** or email us at **customerservice@singingmachine.com**.

SERVICE CENTER: SMC GLOBAL®

4060 E. Jurupa Street, Unit B, Ontario, CA 91761-1413, USA





## **NOTES IMPORTANTES**

Évitez d'installer cette unité dans les endroits exposés à la lumière du soleil directe ou près de la chaleur rayonnant des appareils tels que les radiateurs électriques, sur l'autre matériel stéréo qui rayonne trop de chaleur, des endroits manquant de la ventilation ou des zones poussiéreuses, des endroits sujet à la vibration constante et/ou des zones humides ou moites.

#### **FCC IMPORTANTE**

Ce dispositif est conforme à la partie 15 des réglementations de la FCC. L'exécution est sous réserve des conditions suivantes deux conditions:

- (1) Ce dispositif n'entraîne pas l'interférence néfaste, et
- (2) Ce dispositif doit recevoir n'importe quelle interférence reçue, y compris l'interférence qui peut entraîner l'exécution peu désirée.

Avertissement: Les modifications ou les modifications à cette unité pas expressément approuvée par la partie responsable de la conformité ont pu vider l'autorité de l'utilisateur pour actionner le matériel.

NOTE: Ce matériel a été testé et avéré pour être conforme aux limites pour un appareil numérique de la classe B, conformément à la partie 15 des réglementations de la FCC. Ces limites sont conçues pour assurer la protection raisonnable contre l'interférence néfaste dans une installation résidentielle. Ce matériel se produit, des utilisations et peut rayonner l'énergie de radio frequency et, sinon installé et utilisé selon les instructions, peut entraîner l'interférence néfaste aux communications par radio. Cependant, il n'y a aucune garantie que l'interférence ne se produira pas dans une installation particulière. Si ce matériel entraîne l'interférence néfaste à la radio ou la réception des émissions télévisées, qui peut être déterminée en tournant le matériel par intervalles, l'utilisateur est encouragé à essayer de corriger l'interférence par un ou plusieurs des mesures suivantes :

- Réorientez ou replacez l'antenne de réception.
- · Augmentez la séparation entre le matériel et le récepteur.
- Connectez le matériel dans un débouché sur un circuit différent de celui auquel le récepteur est connecté.
- Consultez le distributeur ou un technicien expérimenté de radio/TV pour l'aide.

#### Avis d'Industrie Canada

Le présent appareil est conforme aux CNR d'industrie Canada applicables aux appareils radio exem pts de licence L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utillsateur de l'appareil doit accepter brouillage radioélectrique subi meme si le brouillage est susceptible d'encompromettre le fonctionnement, mauvais fonctionnement de l'appareil.

CAN ICES-3 (B)/ NMB-3 (B)



