



Microsoft Surface Go 4





Microphone
Mikrofon
Microphone
Microfoon
Microfono
Mikrofon



Volume
Lautstärke
Regulacja głośności



Power button
Einschalttaste
Marche / Arrêt
Aan/uit-knop
Pulsante di alimentazione
Przycisk zasilania



Front-facing camera
Frontkamera
Caméra frontale
Camera aan de voorkant
Fotocamera anteriore
Kamera przednia



Windows Hello camera
Windows Hello Kamera
Caméra Windows Hello
Windows Hello-camera
Fotocamera di Windows Hello
Kamera z obsługą Windows Hello



Headphone jack
Kopfhöreranschluss
Prise casque
Hoofdtelefoonaansluiting
Connettore jack per cuffie
Gniazdo słuchawkowe




USB-C® port
USB-C®-Anschluss
Port USB-C®
USB-C® port
Porta USB-C®
Port USB-C®



Surface Connect port
Surface Connect-Anschluss
Port Surface Connect
Surface Connect-poort
Porta Surface Connect



MicroSD™ card reader
microSD™-Kartenleser
Lecteur de carte microSD™
MicroSD™-kaartlezer
Lettore di schede microSD™
Czytnik kart microSD™

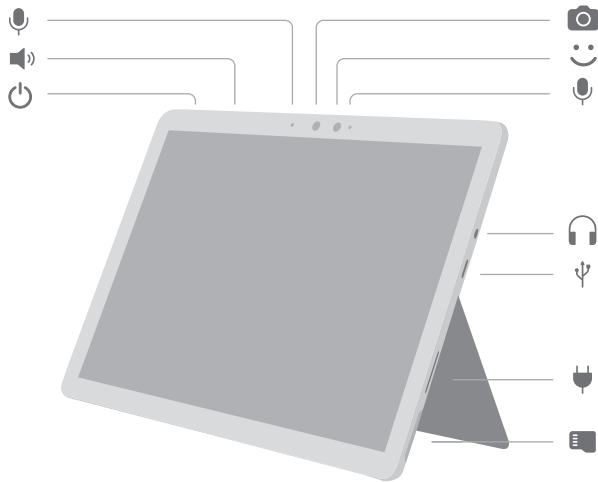

support.microsoft.com

©/TM/®2023 Microsoft
Model 2066, 2067

