

User Manual

MOBILE INTERNET DEVICE



Please read the user guide carefully before using

CONTENTS

Specification.....	3
Name.....	4
1. Power On/Off.....	5
2. Desktop.....	5
3. Standby mode(Screen off mode)/Unlock the screen.....	5
4. System settings.....	6
5. In System Settings.....	6
Wireless & networks.....	6
Sound.....	7
Display.....	7
Storage.....	8
Battery.....	8
APPS.....	8
Account & sync.....	10
Location services.....	10
Security.....	10
Language & input.....	10
Date & time.....	11
Developer options.....	11
About tablet.....	11
6. How to connect/disconnect the device with/from the computer.....	11
7. How to install Applications(.apk file) into the device.....	12
8. How to make desktop icons.....	13
9. Change Input Method.....	14
Features.....	15
Instructions (Cont.).....	16

This manual contains important safety precautions and information of correct use. Please be sure to read this manual carefully before use so as to avoid any accidents.

Do not place the product in hot, wet or dusty environment, especially in summer; do not leave the product inside a car with all windows closed.

Avoid dropping, impacting or shaking the product violently; otherwise it may cause damages or malfunctions. Select a proper volume to avoid ear problem when using earphones.

Do not cross the road or drive vehicles, using headphones to avoid traffic accidents.

Be sure to use the provided chargers and accessories in the package.

Be sure to charge the product when the following situations take place,

- The battery icon shows lower or empty.
- System automatically shut down and it turns off soon after restart.
- Operation keys do not respond properly.

- The device shows  on the top right corner.

Specification

Hardware

7.0" High Definition TFT LCD Touch Screen (800x480 pixel)

Capacitive multi-touch (5 touch) point function

CPU: ARM cortex A9 processor

RAM: DDR3 512MB

Wi-Fi (IEEE802.11 b/g/n) for internet connection

G-sensor

Micro SD card slot recognizing up to 32GB

5V DC power adapter

Compatible with keyboard, mouse

Software

Android 4.1 OS

Google browser

Wi-Fi connection

E-Book function (all e-book formats supported by application)

Possible to view/edit MS office files by application


VoIP phone function with Wi-Fi connection

Video: AVI, RM/ RMVB, FLV, MPG4 – 1, MPEG – 2 etc.

Audio: MP3, WMA, AAC, WAV etc.

Photo: JPEG, BMP, GIF, PNG, TIFF

Name

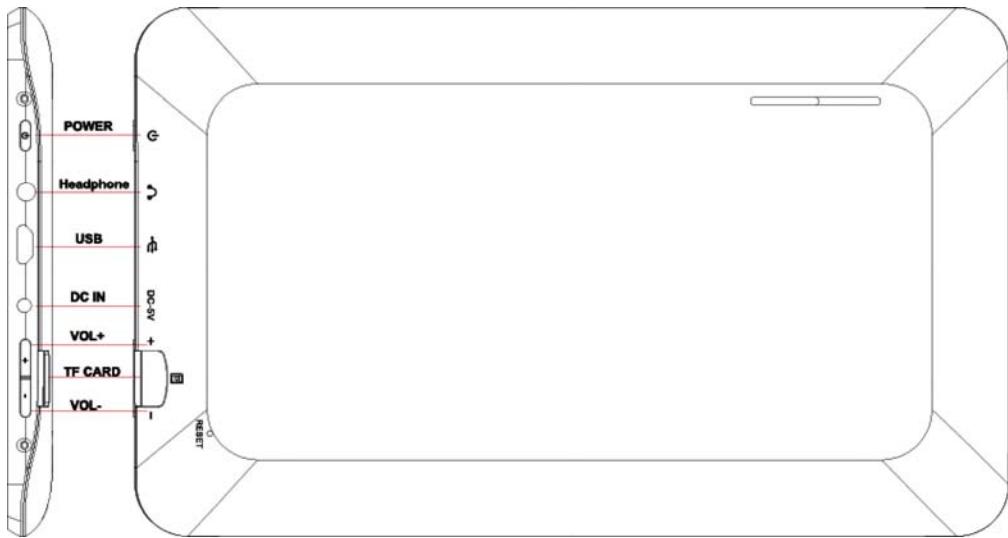

Important Notice

- If the device is freezing or stuck, press the reset button (a small hole) or long press power button for 7 seconds.
- When the performance is slow after using some applications, it is recommended to close running application in setting menu.

Caution

- For charging, be sure to use the power adaptor (DC5V) that is provided in the package, otherwise, the device may be damaged and does not work.
- The device is equipped with high performance processor. It may heat in case of using long or while charging.


1. Power On/Off

Long press power button to turn on/off the device. It may take a minute to boot the device.

Short press power button to turn on/off the screen. (Standby mode. Refer to 3.below)

2. Desktop

After turning on the device, desktop displays with shortcut icons and arrow panel at the right side

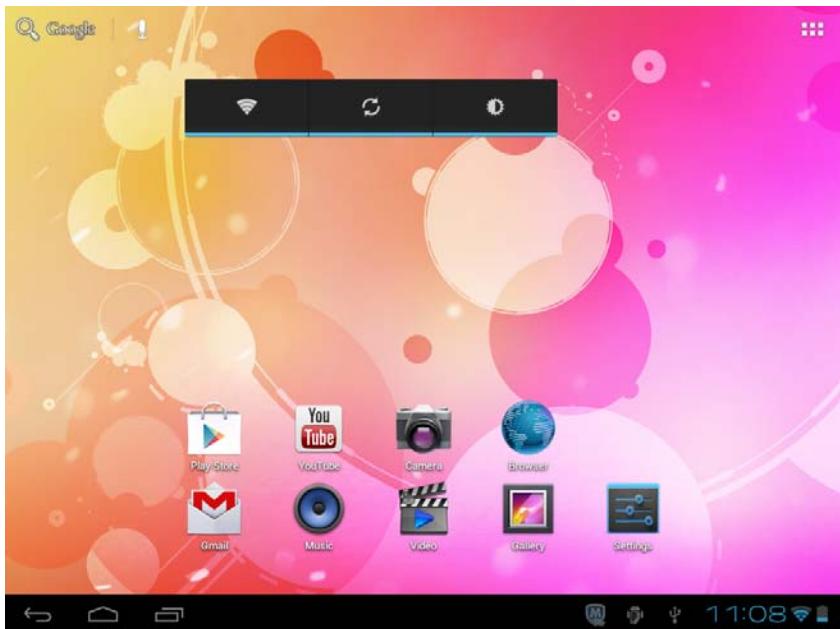

3. Standby mode (Screen off mode)/Unlock the screen


After standby mode slide the lock icon in order to unlock the screen.

Short press the power button to turn on/off the screen (standby mode on/off)



4. System settings

On the desktop, press menu button and select system settings.

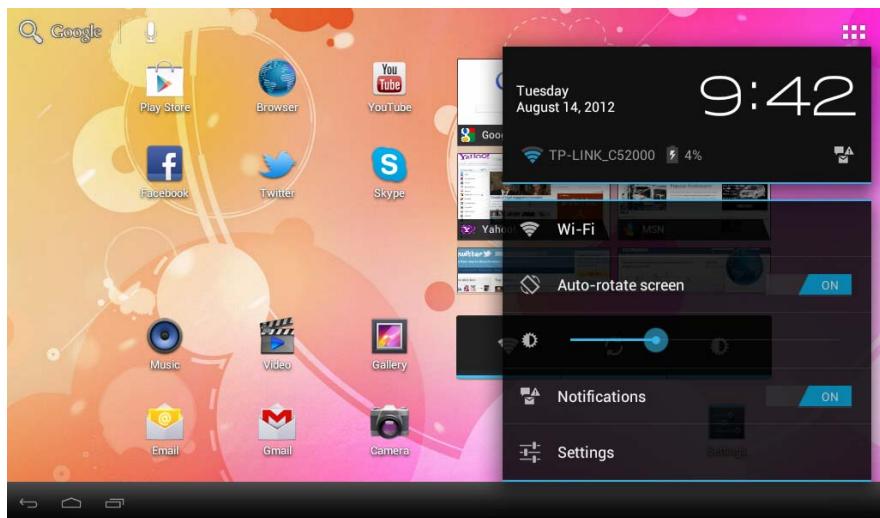


5. In System Settings


Wireless & networks

Wi-Fi: Press Wi-Fi to turn on/off Set up each setting as you like. Wi-Fi settings - Press Wi-Fi settings, then the device will automatically search the available Wi-Fi signals. Select the network you want to connect with.

Sound

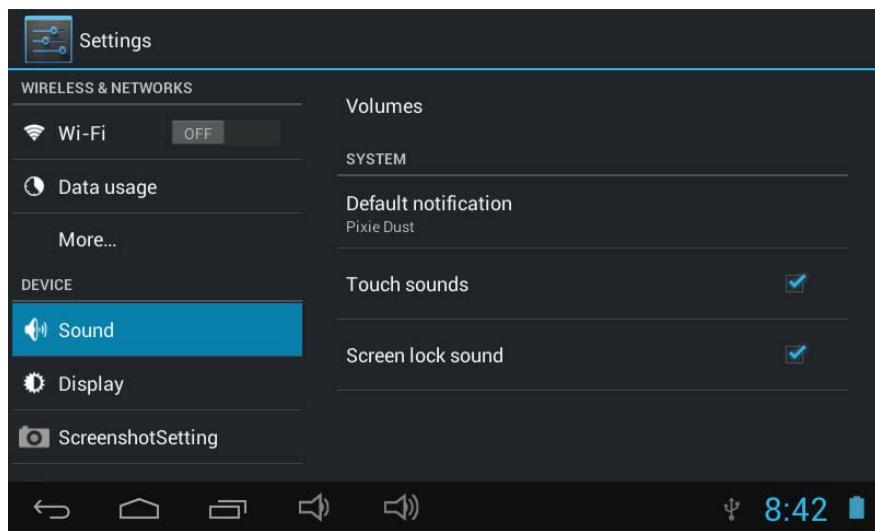


Display

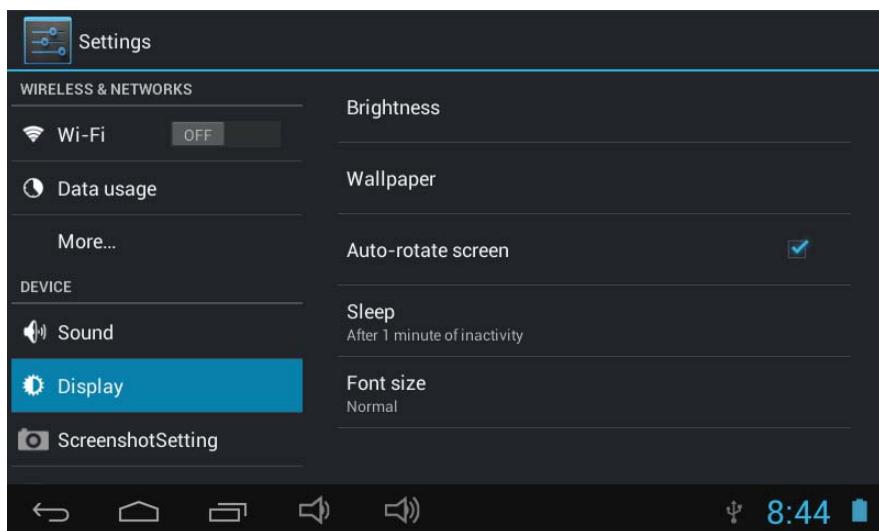

Set up each setting as you like.

Storage

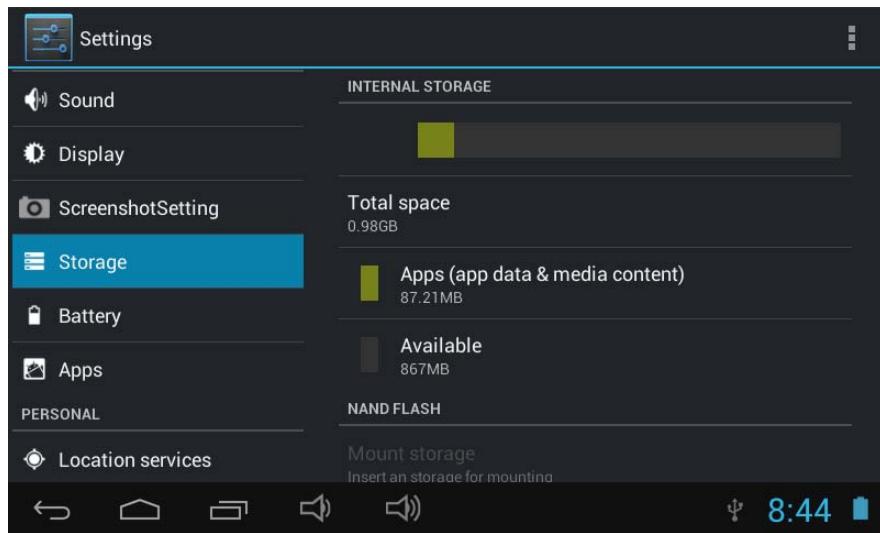


Check device memory and micro SD card status.

Unmount SD card: Unmount the SD card for safe removal.


Battery

Check battery usage status.

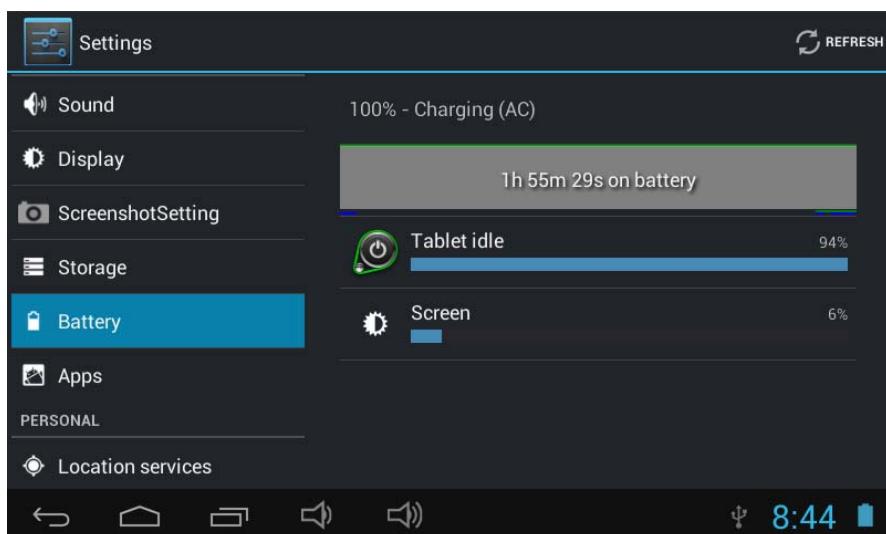



Apps

Manage downloaded or running applications.

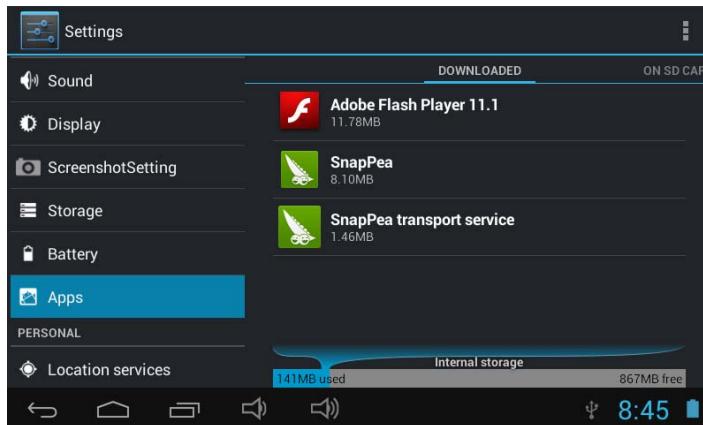

Downloaded

All installed applications are listing.

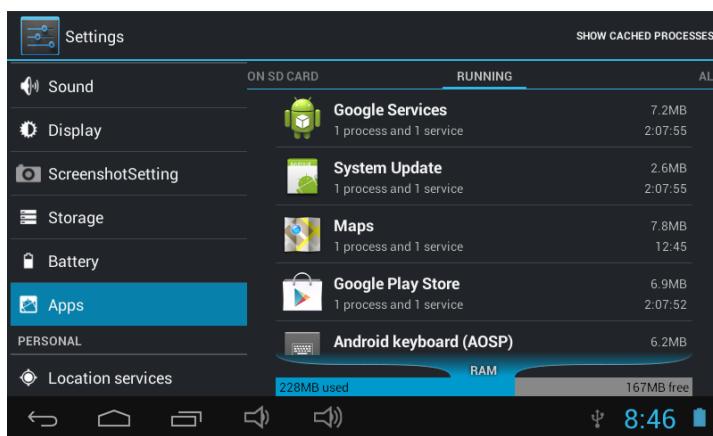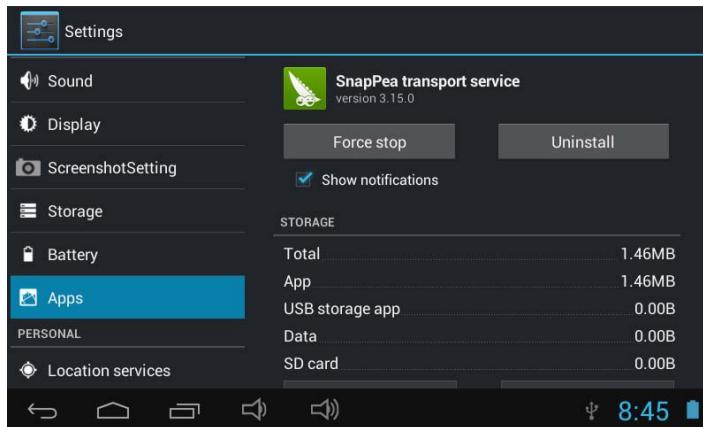

Keep pressing an application to manage.

Running services Press Uninstall to uninstall the selected application.

View and control currently running services.

Account & sync

Create your account. After connecting Wi-Fi network, the e-mailing system synchronizes your account with the device. Emails are automatically downloaded into the device.

Location services


Google's location service - Let apps use data from sources such as WiFi and mobile networks to determine your approximate location

Security

Screen lock – Protect your device from unauthorized use by creating a personal screen unlock pattern. Make passwords visible – Show password as you type.

Unknown sources - If you want to allow installation of non-Market Applications,

Press Unknown sources and presses OK.

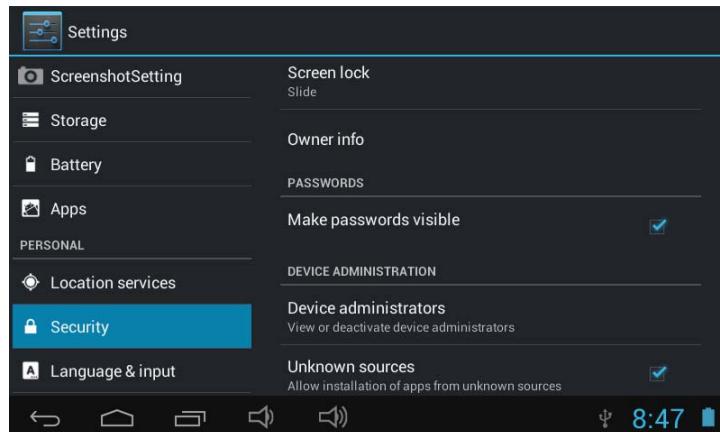


Install from SD card – Install encrypted certificates from SD card.

Language & input

Language – Choose your preferable language.

Keyboard& input method: Change keyboard &keyboard settings.

On Language & input settings, if you need other languages besides English on keyboard, press the relevant keyboard and enter the chosen Keyboard settings, select Keyboards, press the language you need.

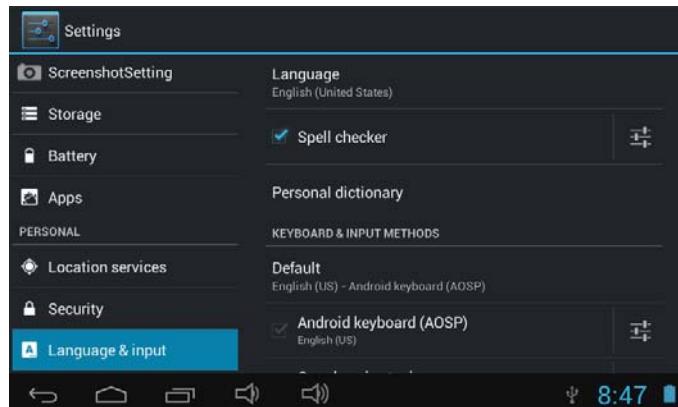

Date & time

Set date & time and format

Developer options


Set options for application development

About tablet

See status, legal information, ETC



6. How to connect/disconnect the device with/from the computer

On main desktop, connect the device with the PC, touch right side of the status bar on the bottom of desktop

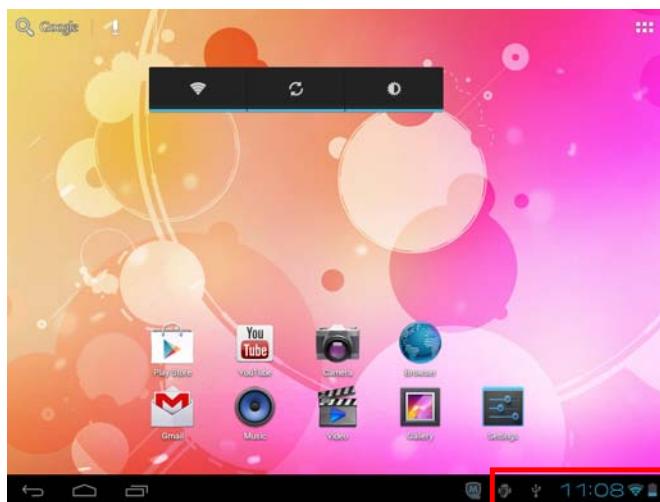

Press "USB connected", select "Turn on USB storage". The device is recognized at

Explorer of the computer. Now you can use it as an external storage.

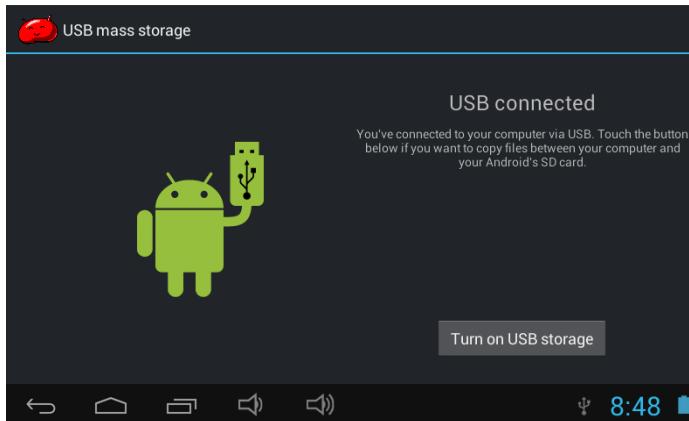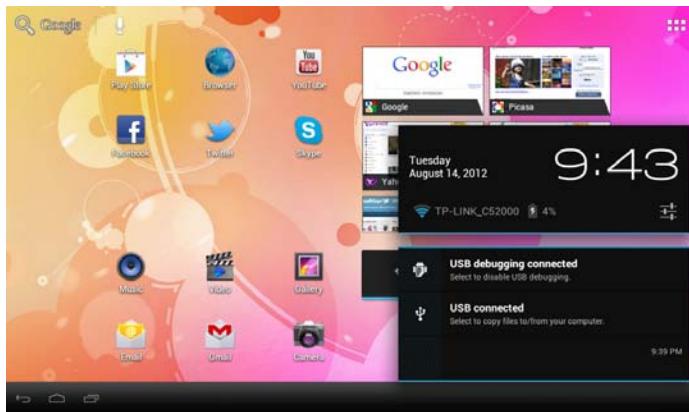

After finishing your work, Press “turn off USB storage” to unmount it.

7. How to install Applications (.apk file) into the device

Method 1.

1. Connect the device with internet. See above [1.Wireless & networks] in order to connect internet.
2. Run “Getjar” and search the applications you want to install.
3. Follow the instruction on the screen for installation.

Method 2.

1. With your computer search application file (.apk) that you want to install into the device.

2. Download the file (.apk) into your computer.

3. Connect the device with your computer.

See above [How to connect/disconnect the device with/from the computer.]

4. Copy and paste .apk file into the device and disconnect it from your computer.

5. Run “File browser” and find .apk that was copied into the device.

6. Press the file to install and follow the instruction on the screen.

Note:

You may only download adult applications if you are at least 18 years of age, or at least the age of majority in the jurisdiction where you reside or from which you download adult applications. If you do not meet these requirements, then you do not have permission to download adult applications.

In case of any problems including legal issues from the breach by end-user's own decision, the manufacturer shall not be responsible.

8. How to make desktop icons

Press the upper right side icon of desktop, the pop-up displays.



Shortcuts

Long press your desired APK icon and put it on the desktop.



Widgets

Press Widgets and press your desired icon to put it on the desktop.


Wallpaper

Long press the desktop, press Wallpapers and select one of categories of wallpaper.

Select one you desire and press Set wallpaper.

9. Change Input Method

If your device was installed with other more input method, long press setting icon of keyboard, and the pop-up displays.

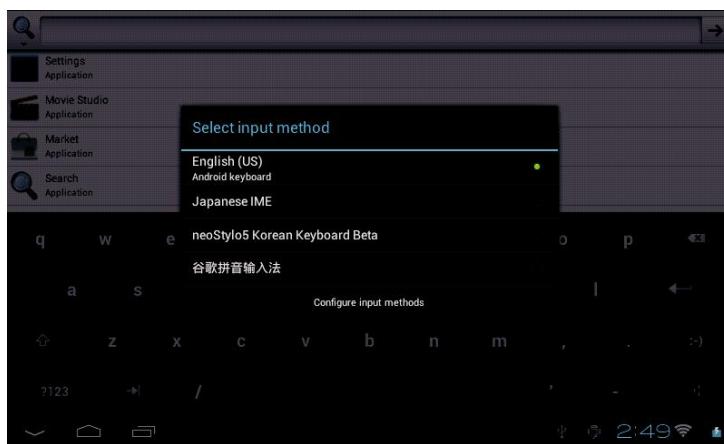

Select the installed keyboard, and then the keyboard will appear with your desired language you installed.

Features

- . Screen: 7" Capacitive Touch Screen
- . Processor: 1.2Ghz
- . GPU: Mali 400MP
- . OS: Android 4.1
- . RAM: 512MB DDR3
- . Memory:4GB
- . Support Camera 0.3MP
- . Support G-SENSOR
- . Support Flash 10.1
- . Support Skype Video Call
- . I/O port: USB
- . Card Slot: Micro SD Card (Max:32GB)
- . Audio Output: Stereo Speaker(8 Ω 1.0w)/3.5MM Stereo Headphone Jack
- . Internet Browser, Office, Calendar, Calculator, E-mail
- . Picture Viewing, Music/Video Playback, Games
- . Supports Multi Languages
- . Battery: Built in 2300mAh/3.7V Li-ion, rechargeable

Imported By:

Gelombang Cekal Sdn. Bhd. (306104-X)

Lot 9A, Jalan CJ 1/7, Kawasan Perusahaan Cheras Jaya,
Jalan Balakong, 43200 Selangor Darul Ehsan, Malaysia.

Tel:03-9076 2828 Fax:03-9076 8889

Customer Care Hotline:03-9076 7888


Email: customer_service@gcsb.com.my

Website: <http://www.gcsb.com.my>

Instructions (Cont.)

Resetting the device:

1. Turn off the tablet
2. Press volume+ key and turn on/ turn off key for a few seconds, until a robot icon appears
3. Firstly press turn on/off key for a few seconds, then press volume+ shortly, then appearing the renew interface on the screen
4. Press volume- key to choose the Row 3 of “wipe data/ factory reset” then press turn on/ turn off key, appearing rows of options on the screen, choose the row of “yes...delete all user data”, and press turn on/off key to confirm the deletion
5. Restart the tablet.

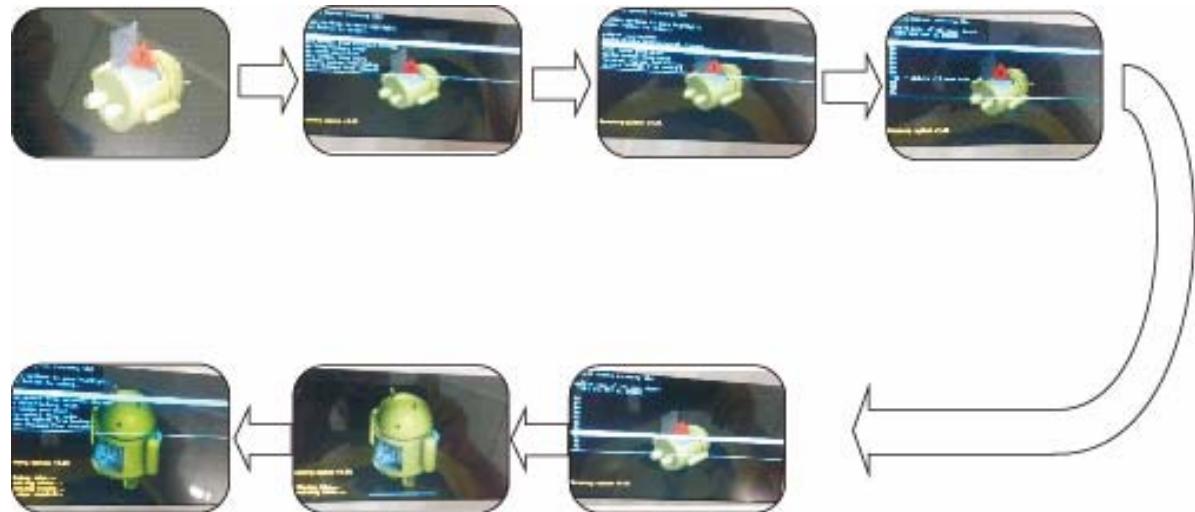

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.