 


HBN22v2 Quick Start Guide - Front
Size: 432 x 140 mm
Printing Color: Black
Matt: 85gsm WF paper
Nov 2, 2021



HBN22v2 Staff Quick Start Guide

Included



HBN22v2 Quick Start Guide - Inside
Size: 432 x 140 mm
Printing Color: Black
Matt: 85gsm WF paper
Nov 2, 2021

Press the **time set button** to confirm date and exit clock setting.

Once staff has completed setup, replace security cover on back of unit and tighten thumbscrew.


Backup Batteries

Keep unit connected to AC power when replacing batteries or you will lose settings.

When Low Battery icon appears on top left of the display, replace backup batteries with 2 fresh AA batteries and turn to match polarity markings (+/-) to those in battery compartment.


Battery Cautions and Tip

 - Use the recommended/supplied batteries or equivalent.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Remove batteries from the unit when not in use.
- Remove exhausted batteries from product.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperature.
- Do not short circuit or damage remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with cool, flowing water for at least 30 minutes. If skin contact occurs, wash with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in the household trash or fire.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.



Set Up

 - 1 Remove thumbscrew and remove back cover to access staff controls.
- 2 Connect the universal voltage AC adapter to the DC jack on the back panel of the unit and plug into a working outlet that is not controlled by an On/Off switch.
- 3 Secure the attached Security Tether to a wall or other permanent surface. **CAUTION** Do not attach to an AC outlet as it can cause it to become entangled with anything that can create a hazardous situation.
- 4 Set the **Volume Limit Switch** to High for large rooms or to Low for smaller rooms.
- 5 Extend the FM antenna for best reception.



Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between the unit and the furniture.
- Clean the unit with a soft cloth moistened with mild soap and water. Stronger cleaning agents, such as thinner or similar materials can damage the surface of the unit.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential safety hazards. Please read and follow these instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of the following:

1. **Water and Moisture:** Do not expose the unit to water. For example: near a bathtub, washbowl, sink, laundry tub, swimming pool or in a wet basement.
2. **Heat:** The unit should not be situated away from heat sources such as radiators, heat registers, stoves or other appliances that generate heat.
3. **Power:** The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the unit.
4. **Power Source:** The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the unit.
5. **Power Cords:** Do not damage the power cord or the plug. If the power cord is damaged, it should be replaced by a qualified service person.
6. **Cleaning:** Unplug unit and clean only with a soft, dry cloth. Stronger cleaning agents, such as香蕉精 or similar materials, can damage the surface of the unit.
7. **Objects:** Do not place objects on top of the unit that do not fit and liquids are not spilled onto any openings or vents located on the product.
8. **Amplifiers and Other Accessories:** Do not connect to any amplifiers or other accessories specified by the manufacturer.
9. **Lighting and Power Surge Protection:** Unplug the unit from the wall socket and disconnect the antenna or cable connection to the unit during lightning or power surges. Do not use the unit during lightning or power surges.
10. **Overloading:** Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in fire or overheating.
11. **Damage Requiring Service:** The unit should be serviced by qualified service personnel when:
 - A. The unit has been dropped or damaged.
 - B. objects have fallen into or liquid has been spilled into the enclosure.
 - C. the unit has been exposed to rain.
 - D. the unit exhibits a marked change in performance or unusual noise.
12. **Periodic Inspection:** Inspect the unit periodically for damage. If damage occurs, the unit should be removed from the unit to prevent damage or corrosion.
13. **Service:** Do not attempt to service the unit yourself. The unit should be referred to qualified service personnel.
14. **Disposal:** This unit is suitable for use in tropical and temperate climates. No need for course, such as lighted candles, should be placed on this product.
15. **Recycling:** Please refer to the environmental aspects of battery disposal. Many electronics retailers now recycle batteries and other electronic components at no charge. To find a drop-off location near you, visit www.batterystewardship.org.

WARNING:

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- When using batteries, use only the recommended type. It shall remain readily observable.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Do not dispose of batteries in the household trash or fire.

Setting the Time Zone and Clock (Factory Preset Clock)

The first time you connect your new preset clock to the AC outlet, the unit will automatically show the correct Eastern Standard time, which is the default setting. If you are not in the Eastern time zone, you must change the default setting to match your time zone (see **Time Zone Setting** below). Once the correct time zone is set, if the time displayed is not correct, follow steps under **Manual Clock Setting** to set the correct time, year and date.

Time Zone Setting

Press and hold the **time zone button** for 2 seconds to enter clock setting mode, time will flash. (Press **Alarm Set** or **Alarm Off** to toggle 12/24 hour time modes.)



Press the **-** or **+** button to adjust time.



Press the **time set button** to confirm time. The year will flash.



Press the **-** or **+** button to set year.



Press the **time set button** to confirm year. The date will flash.



Press the **-** or **+** button to set date (hold for faster adjustment).

