 


iBT9 IB (English)  
17 pages  
Size: 153mm x 120mm  
Color: Black  
Mar 4, 2016

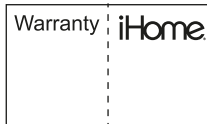

P1

# iHome®



## iBT9 **Waterproof Rechargeable Bluetooth Stereo Speaker System**

with speakerphone and USB mobile device charging



**CHARGE  
BEFORE  
USE**



instruction manual



## Introduction

Thank you for purchasing the iHome iBT9. This product is designed to provide high quality wireless sound for your iPad, iPhone, iPod, computer, or other Bluetooth audio device.

This instruction booklet explains the basic operation and care of the unit. Please read carefully and keep for future reference.

## FCC/IC Information

FCC ID:EMOIBT9

IC:986B-IBT9

### FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

(1) This device may not cause interference and

(2) This device must accept any interference received, including interference that may cause undesired operation

**This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

**The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.**

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

## Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials can damage the surface of the unit. Rinse unit with tap water and wipe dry after submersion in salt water or swimming pool.

## Long-term Storage of Your Product

- Store in a cool, dry place.
- Unit should be charged before storing.
- If stored for a long period of time, unit may be unresponsive until charged for a number of hours (depending on discharge level)
- Do not store for more than a year without charging as this can permanently harm the battery.
- After long term storage, if unit is unresponsive after charging, RESET unit while connected to AC and recharge the unit.

## Internal Rechargeable Lithium-ion Battery

This device uses an internal non-replaceable rechargeable lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead, try charging it for an extended period of time and try resetting the unit. If this fails, contact Customer Service at 1-800-288-2792.

### WARNING/DISPOSAL OF UNIT

Do NOT attempt to change the battery. Doing so will void the warranty and could cause injury and damage to your device. To dispose of the unit, follow the instructions below:

- Never dispose of used batteries/electronics with ordinary solid wastes, since they contain toxic substances.
- Always dispose of used batteries/electronics in accordance with the prevailing community regulations.
- Many electronics retailers now recycle batteries and other electronic components at no charge.

### GENERAL BATTERY PRECAUTIONS

- Never use or charge a battery if it appears to be leaking, discolored, deformed, or in any way abnormal.
- Never disassemble the unit or attempt to remove battery as that could cause leakage of alkaline solution or other electrolytic substances.
- Avoid charging a rechargeable battery when the temperature is not within 5°C - 35° C (41° - 95° Fahrenheit).
- Never expose a battery to any liquid.
- Never expose a battery to excessive heat such as direct sunlight or fire. Never use a battery pack in an unventilated vehicle where excessive internal temperatures may be encountered.
- Always keep batteries out of the reach of infants and small children.

## Table of Contents

 
 
 
Included / Meet Your iBT9 .....	4-5
Waterproof Operation .....	6
Setting Up/Charging the Unit / Turning the Unit ON and OFF .....	7
Charging and Battery Status Indicators .....	8
Using Bluetooth: Pairing Your Device .....	9
Pairing with a Different Device/Playing Audio Via Bluetooth .....	10
Using the Speakerphone feature .....	11
Playing Audio Via Aux line-in .....	11
Charging Devices Via USB Port .....	12
Consumer Product Safety Guide .....	13-14
Troubleshooting .....	15
Warranty .....	16

## Included

1. iBT9 Speaker
2. USB AC adaptor
3. Micro USB charging cable
4. Bottle opener/carabiner clip


### To remove carabiner clip:

1. Hold clip sideways to unit.
2. Press clip hinge post inwards and slide strap loop off of hinge post.

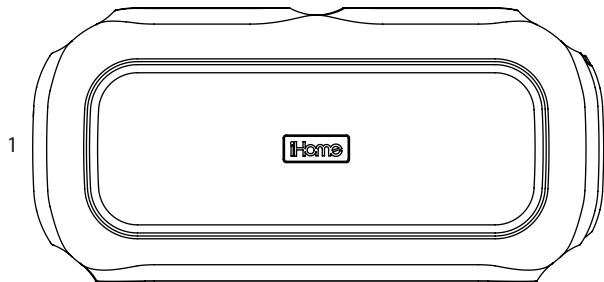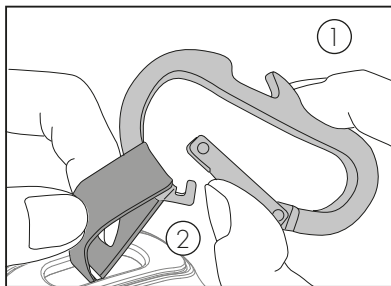


## Meet Your iBT9

 
### Top view

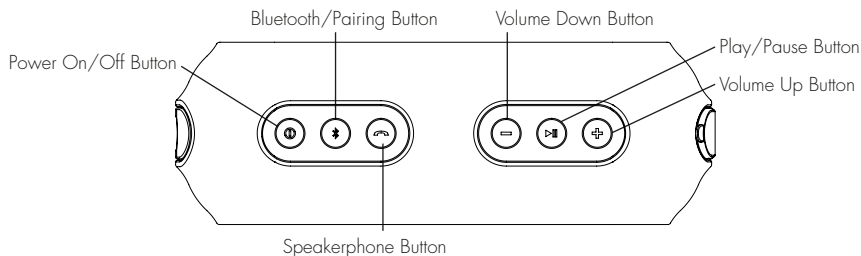

### Right Side view

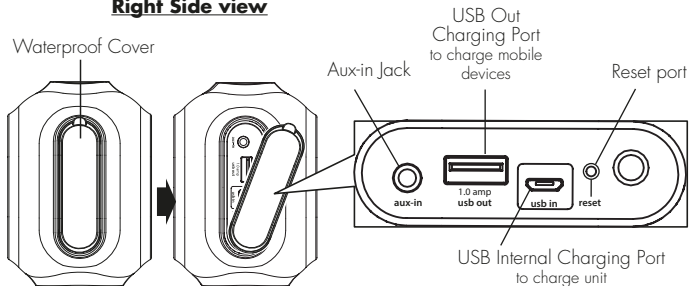 

### Front view

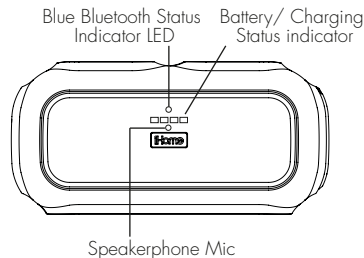 

# Using the iBT9

## IMPORTANT INFORMATION ABOUT WATERPROOF OPERATION

For proper waterproof operation, make sure the waterproof cover on the right side of the unit is completely flush with the unit by pressing along the entire edge of the cover until it is completely and securely in place.



- The unit is IP67 waterproof rated, meaning it is immersible for up to 30 minutes at a depth of 1 meter (3 feet). It will typically withstand rain, snow and being submersed in shallow water. Longer duration or deeper immersion that exceeds the tested limits may cause product failure and void the warranty.
- DO NOT immerse the unit in water for extended periods.
- DO NOT immerse the unit in water deeper than 1 meter (about 3 feet).
- Make sure cover and surrounding surfaces are completely dry before opening cover to prevent moisture from damaging the internal electronics.
- Keep rubber cover free of dirt, sand, or other objects that can interfere with proper sealing. If for any reason the waterproof cover is not making a tight waterproof seal water may enter the unit.
- Rinse with tap water after immersion in salt water or swimming pool.
- DO NOT clean unit with oily soaps or use chemicals or solvents. Clean with damp cloth.

 
## Setting Up/Charging the Unit

To charge the unit and operate the unit on AC power, open the waterproof cover on the right of the unit and connect the included USB charging cable to the USB IN port. Connect the other end to the included USB AC Adaptor, then connect the adaptor to a working wall outlet. While charging, the charging status indicators will show the charge level (see Charging Status table on page 8).

**For first time use, make sure to fully charge the internal battery for about 8 hours.**

## Turning the Unit ON and OFF

1. Press and hold the **Power Button** located on top of the unit for 2 seconds to turn the unit ON. The white battery status and blue Bluetooth status LED indicators on the front of the unit will light and ascending tones will sound.
2. Press the **Power Button** to turn the unit OFF. Descending tones will sound. **Note:** if no audio is detected for 15 minutes, the unit will power off automatically to save battery life.

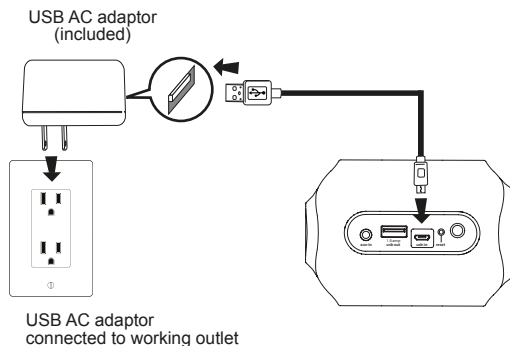








# Using the iBT9




 
## Charging Status Indicators

While charging, the Battery/Charging Status Indicator lights on the front of the unit will show the current charging status of the battery.

Charging Status	
	low, needs charge
	25% charged
	50% charged
	75% charged
	100% charged

## Battery Status Indicators

  
While operating on the internal battery, when the unit is ON the Battery/Charging Status Indicator lights on the front of the unit will appear whenever a button is pressed (excepting the **Power Button**, which will turn the unit off).

Battery Status	
	low, needs charge
	50% charged
	75% charged
	100% charged

# Using the iBT9
 
## Using Bluetooth: Pairing Your Device

Pairing is the set-up process to introduce your Bluetooth-capable device to the iBT9. Once your device is paired, the iBT9 can recognize it and you can play your audio through it.



1. Make sure your Bluetooth device is fully charged. Turn on your Bluetooth device and make it "discoverable" by turning on Bluetooth mode (check in Options or Settings).
2. Press and hold the **Power Button** for 2 seconds to turn on the iBT9. **The first time the unit is turned on it will enter auto pairing mode:** ascending tones will sound and the indicator light on the front of the unit will flash blue while the unit attempts to pair. "iHome iBT9" should appear on your device's menu. Select "iHome iBT9" on device to begin/complete pairing. If your device asks for a password, enter **1234** on the keyboard of your device. A tone will sound and the blue indicator will glow solid. If no device is paired within 3 minutes, the unit will revert to its previous state.
3. To pair with a different Bluetooth device, or at a different time, make sure unit is powered on, then **press and hold** the **Bluetooth Button** (located on top of the unit) for 2 seconds. Select "iHome iBT9" on device to begin/complete pairing.

## Pairing with a Different Device

When you power ON the speaker, it will automatically link with the previously paired Bluetooth device as long as that device is still within range (about 33 feet). To pair with a different device, please follow step 3 on page 9.

## Playing Audio Via Bluetooth

1. Press and hold the **⏻ Power Button** for 2 seconds to turn on the unit. The light on front of the unit will flash blue and ascending tones will sound and the unit will search for a previously paired device. The light will turn solid blue once a previously paired device is detected. You can then listen to audio streamed wirelessly from your paired Bluetooth device.
2. Press the **▶|| Play/Pause Button** to play or pause audio.
3. Press the **▶|| Play/Pause Button** *twice* to advance to the next track. Press *three times* to play the previous track or go to the start of the current track, depending on how far you are into the current track.
4. Press the **- Button** or **+ Button** to adjust the volume on the unit. Press and hold for rapid volume change. The blue LED indicator on the front of the unit will flash 3X when the volume is at maximum or minimum. You can also adjust volume on your device.
5. When done listening, press the **⏻ Power Button** to turn the unit OFF. Remember to turn off your audio device, too.

Note: Playing a Bluetooth device while an Aux-in device is playing will mute the Aux audio.

## Using the Speakerphone feature

## Using the iBT9

 
NOTE: The unit must be powered on to receive a call. A Bluetooth phone must be linked.

1. When a call is received, playing music is muted to hear the ring tone. Press the **Phone Button** to answer the call, or *press and hold* the **Phone Button** to ignore it. For call waiting function, press the **Phone Button** to place a currently active call on hold and answer a new call and to switch between the calls. *Press and hold* the **Phone Button** to end active call and return to a call on hold.
2. When a call is completed, press the **Phone Button** to end the call and resume previous function.

## Playing Audio via Aux In

1. Connect one end of a standard 3.5mm stereo audio cable (not included) to the Aux in jack on the side of the unit under the waterproof cover and connect the other end to the headphone or line-out jack on your audio device.
2. Press and hold the **Power Button** on the unit for 2 seconds to turn it on.
3. Power on the audio device and use the controls on the device to play or pause audio, and navigate tracks.
4. Adjust the volume on the unit as described in step 4 on page 7.
5. When done listening, press the **Power Button** to turn the unit OFF. Remember to turn off your audio device, too.


**Note:** Playing a Bluetooth device while an aux-in device is playing will mute the aux audio.

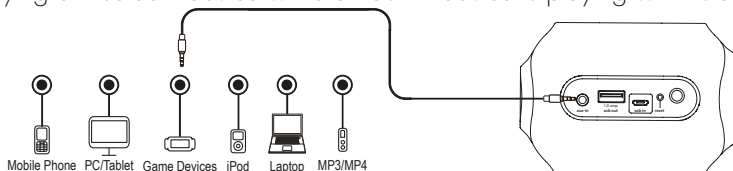

## Charging Devices via USB Port

**Note:** The unit must be powered ON and operating on internal battery (not connected to AC adaptor) to begin charging a device via the USB Port. To charge devices via USB, we recommend that the unit be *fully charged first*. The iBT9 will *not* charge external devices via USB when internal rechargeable battery is too low (battery indicator is blinking). While the unit will automatically power off after 1.5 minutes if no audio is detected (to save battery power), it will continue to charge your device via USB for up to 1 hour when powered off.

 1. Lift waterproof cover located on the right side of the unit to expose the USB Charging Port.
2. Connect the standard size end of a USB cable (not included) to the USB Port and connect the other end to the charging port on your device.
3. Press and hold the **Power Button** on the unit for 2 seconds to turn it on.
4. Monitor charging on your device. If your device does not charge, you must charge your device using the charger that came with it.

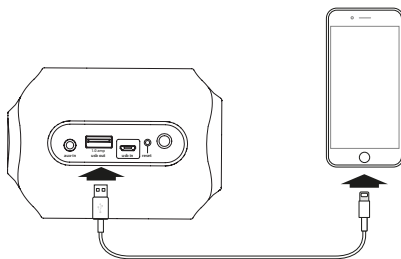

# Consumer Product Safety Guide

## IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – This unit is rated IP67 (will withstand submersion for 30 minutes at a depth of 1 meter (3 feet)), but should not be operated under water. It is also dustproof.
  - Waterproof cover must be properly sealed before use near water.
  - Dry unit completely before opening waterproof cover.
  - Do NOT open waterproof cover if wet or in a wet environment.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.

6. **Cleaning** – The unit should be cleaned only using a warm damp cloth. Do not use oily solvents or chemicals. Rinse the unit off with tap water after use in salt water or swimming pool.
7. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product. Keep waterproof cover free of dirt, sand, or objects that could interfere with a proper watertight seal.
8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
  - A. the power supply cable or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the area under the waterproof cover
  - C. the unit has been dropped or the enclosure damaged.
  - D. the unit exhibits a marked change in performance or does not operate normally.
12. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
13. **Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Questions? Visit [www.ihome.com](http://www.ihome.com)  
or call 1-800-288-2792 Toll Free

# Troubleshooting

## Unit doesn't respond (no power)

- Check that all connections are correct and properly plugged in.
- For internal battery operation, make sure the unit is fully charged.
- Make sure your device is properly paired with the iBT9.
- Make sure the **Power** is ON.

## Unit doesn't respond

- If the unit appears to be “frozen” or locked up or hasn't been used in a long time, you may need to reset it. To do so, use a straightened paper-clip, toothpick, or similar device to press the reset button located under the waterproof cover on the side of the unit. The unit will power off once reset. If unit hasn't been used in a long time, charge unit for a number of hours before attempting to reset.

## Trouble pairing device with iBT9

Bluetooth implementation varies depending on your device's hardware and operating system. Please see our website for updates on pairing.

- If pairing fails, try to pair again by powering on the unit then pressing and holding the Bluetooth Pairing Button on the top of the unit for 2 seconds.
- Make sure your device is working properly. Check your device's manual for details on Bluetooth pairing and linking.

For further information and to see the latest instructions, visit [www.ihome.com/support](http://www.ihome.com/support)



# Limited 1 Year Warranty

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-800-288-2792 to obtain a Return Authorization Number and shipping instructions.

## Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2016 SDI Technologies, Inc. All rights reserved.

Questions? Visit [www.ihome.com](http://www.ihome.com)

or call 1-800-288-2792 Toll Free

		时 间	2016-03-07	订 单 号	GM16034
品 牌	iHome	公司型号	iBT9	客户型号	iBT9
版 本	A0	设计内容	说明书（法文）	料 号	
<del>电 子 软 件</del>		<del>结 构 电 声</del>		PLM文档编号	
设 计 者	LIHONG	标 准 化		项 目 经 理 产 品 经 理	
复 核		业 务		核 准	

展开尺寸	306 x 120 mm
成型尺寸	153 x 120 mm
材质要求	100克环保书纸
印刷要求	1c
工艺要求	无
页码数(页)	18