

T332 IB_US version
Size: 178 x 178 mm (16 pages)
Color: Black text on white paper
Material: 90gsm book paper
Jan. 22, 2016

P1

Model T332

TIMEX®

Bluetooth Dual Alarm AM/FM Clock Radio



For additional information, online registration,
and exclusive special offers visit our website:

www.timexaudio.com

Questions? Contact Customer Service at 1-800-888-4491

Table of Contents


| | |
|---|-------|
| What's in the Box..... | 1 |
| Product Care | 1 |
| Controls Overview | 2 |
| Display..... | 3 |
| Installing and Replacing Backup Batteries | 3 |
| Set Up | 4 |
| Setting the Time | 4-5 |
| Setting and Using Alarms | 6-8 |
| Setting Up and Using Bluetooth | 8-9 |
| Setting and Using the Radio..... | 10-12 |
| Using in Aux-in Audio | 12-13 |
| Sleep Mode | 13 |
| Dimmer..... | 14 |
| Battery Information | 14 |
| Safety Information | 15 |
| Troubleshooting | 16 |
| Warranty Information | 17 |

What's in the Box

This product ships with the following items. Make sure all are present.



1. T332 Alarm Clock

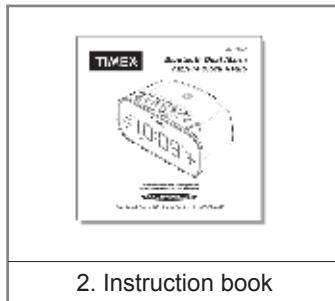


2. Instruction book

Product Care


- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.

Controls Overview


Top Panel

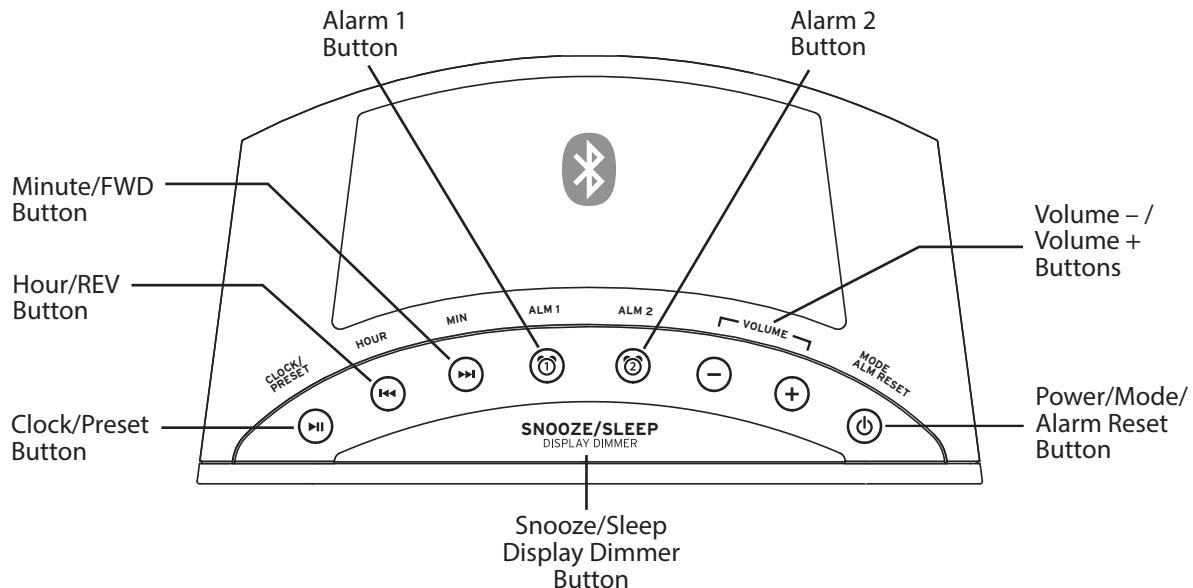

Rear Panel

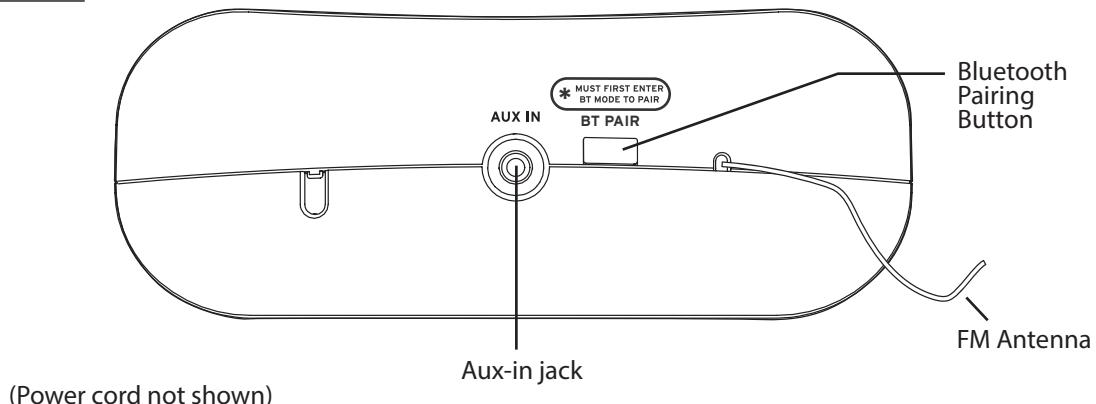


Display

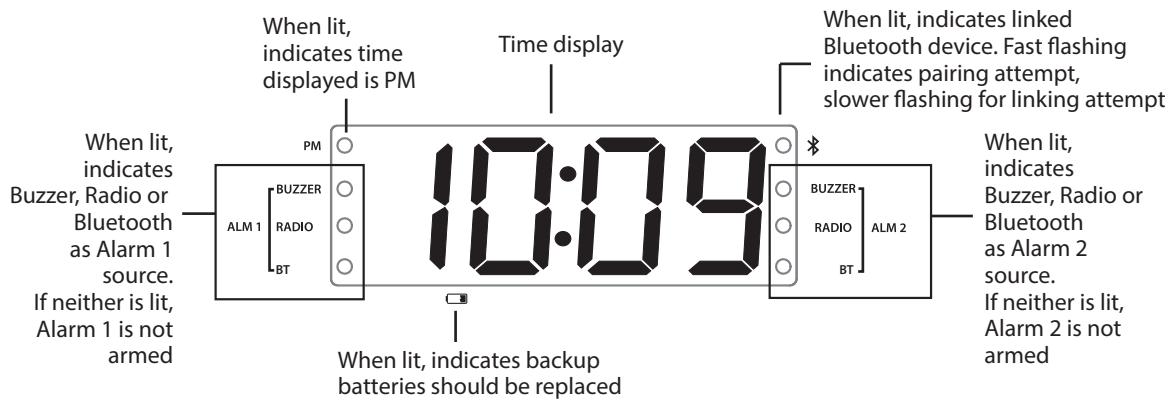

Installing and Replacing Backup Batteries

Your new Timex Clock Radio includes a battery backup system that will maintain the time and alarm settings during a temporary power interruption.

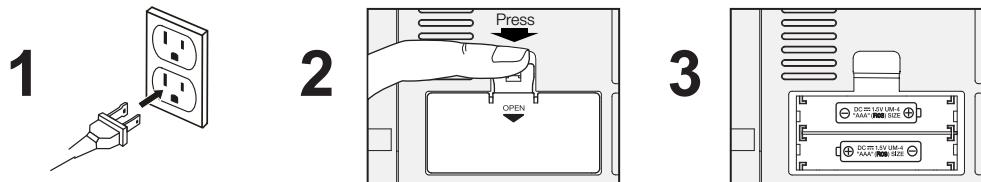


1. Keep unit connected to AC power when changing batteries to avoid losing your settings.
2. Press on the battery door locking tab to open and remove the battery door.
3. Check the correct polarity (+/-) markings in the battery compartment and install two "AAA" batteries (not included).
4. Replace the battery door.

NOTE: With batteries installed, the display will turn off during a power failure but the clock will continue to run and maintain your alarm settings.

Set Up

Connecting to Power Source

Connect the AC plug into a working wall outlet that is not controlled by a wall switch. **The unit does not operate on batteries** (the battery back up system maintains clock settings during power failures).

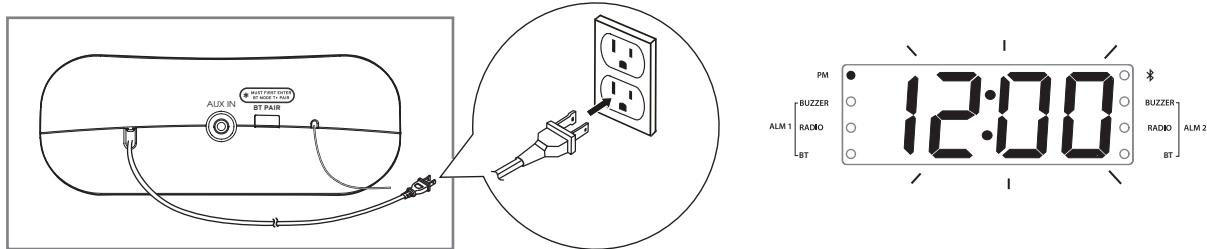


Turning the Unit ON or OFF




- Press and release the **Power/Alarm Reset/Mode Button** on the unit at any time to turn the unit On.
- **Press and hold the Power/Alarm Reset /Mode Button** to turn the unit Off.



Setting the Time

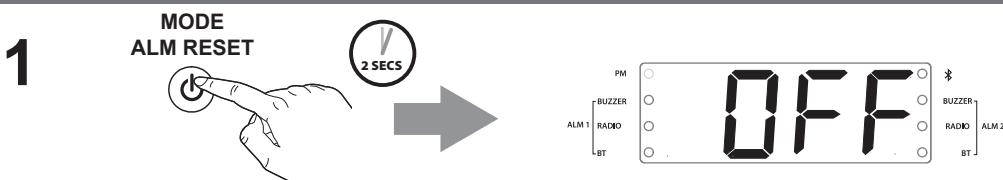

Make sure unit is OFF. To confirm unit is off, **press and hold the Power/Alarm Reset /Mode Button** for 2 seconds until OFF appears on the display.

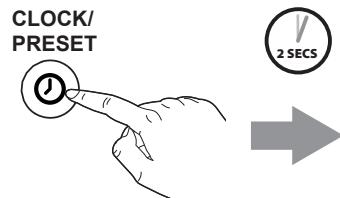
2

Press and hold the **Presets/Clock Button** until the time flashes on the display.

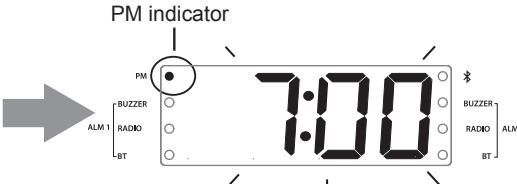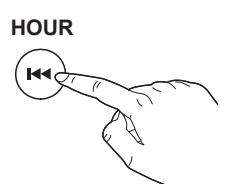
3

Press and release the **Hour/◀◀ Button** to adjust the **HOUR**.

NOTE: The PM indicator will light when the hour is set for PM. There is no AM indicator.

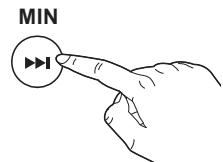4

Press and release the **Minute/▶▶ Button** to adjust the **MINUTES**.

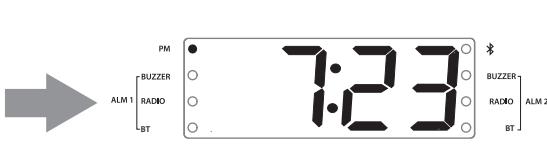
5

Press and release the **Presets/Clock Button** to complete time setting.

Setting and Using Alarms


This unit has two independent alarms, Alarm 1 and Alarm 2. Each is set and operates in the same way. Instructions below show Alarm 1. Follow the same method to set Alarm 2.

1

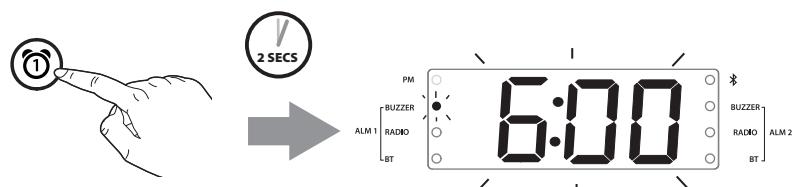

Press and hold the **Alarm 1 Button** until "6:00" flashes on the display.


2

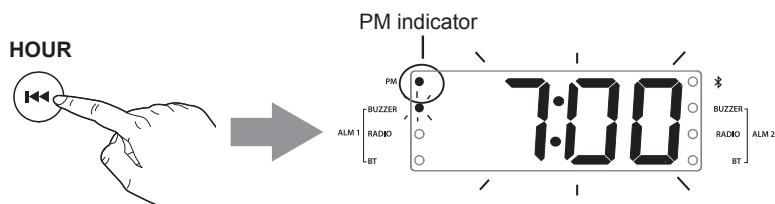

Press and release the **Hour/◀▶ Button** to adjust the **HOUR**.

NOTE: The PM indicator will light when the hour is set for PM. There is no AM indicator.

3

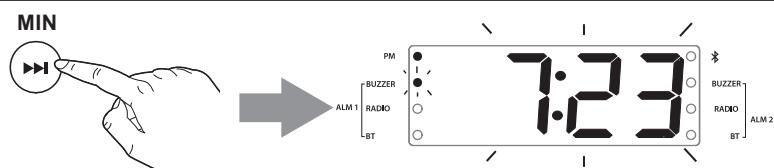


Press and release the **Minutes/▶▶ Button** to adjust the **MINUTES**.

4



Press and release the **Alarm 1 Button** to complete alarm time setting.

SELECTING YOUR ALARM SOURCE/DISARMING THE ALARM

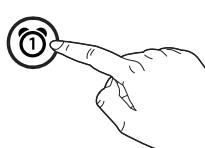

Set alarm to Buzzer

- Alarm set to Buzzer

Set alarm to Radio

- Alarm set to Radio

Set alarm to Bluetooth


- Alarm set to Bluetooth

Disarm alarm


- Alarm OFF
(no indicator)

Press and release the **Alarm 1 Button** repeatedly as needed to cycle to desired alarm mode: **Buzzer** (default), **Radio** (last AM or FM station played), **Bluetooth** or **Off** (alarm is no longer active). Note that the last radio volume listened to will be the radio alarm volume.

RESETTING AN ALARM TO COME ON THE NEXT DAY

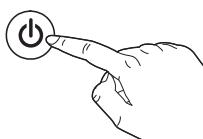

OR

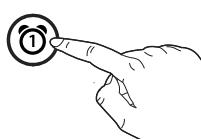

OR



To silence any sounding alarm and reset it come on the next day at the same time, press and release either the **Power/Alarm Reset /Mode Button**, **Alarm 1 Button** or **Alarm 2 Button**.

SNOOZE




Press and release the **Snooze/Sleep Button** when the alarm sounds to silence it for 9 minutes. Snooze can be used several times during alarm.

Setting Up and Using Bluetooth


PAIRING A BLUETOOTH DEVICE



Press and release the **Power/Alarm Reset/Mode Button** as needed to turn unit On and select Bluetooth mode.

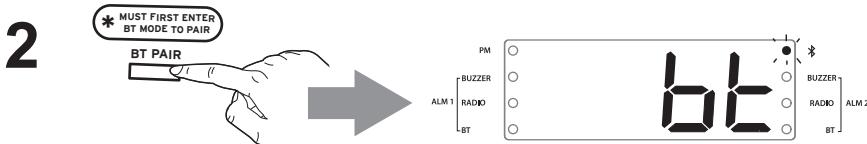


Press and release the **BT (Bluetooth) Pairing Button** located on the back of the unit. The indicator next to the Bluetooth icon will flash quickly on the display.

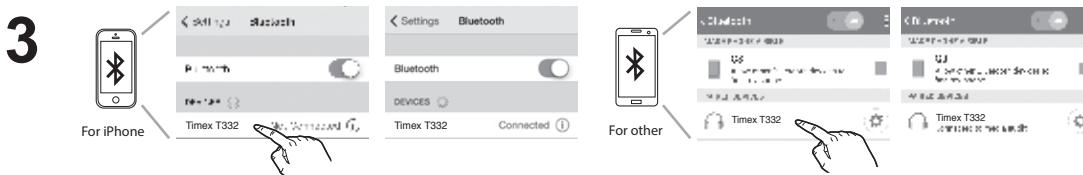


Make sure your Bluetooth-enabled device is turned on and "discoverable" (see your device's manual for details). When "Timex T332" appears on your device's display along with "Not Paired" or similar message, tap on the message to complete pairing. The message should change to "Timex T332 Connected", indicating your device is paired and the Bluetooth indicator on the display will change to solid.

PLAYING BLUETOOTH AUDIO


Once your device is paired, it will link with the device when within range (about 30 feet).

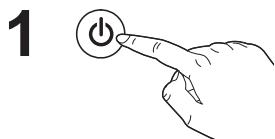


Press and release the **Power/Alarm Reset/Mode Button** as needed to turn unit On and select Bluetooth mode.

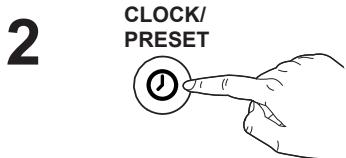

Use the controls *on your Bluetooth device* to select music, control playback and adjust volume. You can also press and release the **Presets/Clock Button** as needed to Play and Pause Bluetooth audio from your device.

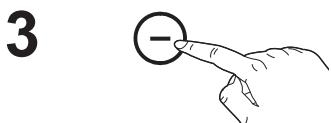

OR

 

If needed, press and release the **Volume - Button** or **Volume + Button** to adjust volume on the unit.

PAIRING WITH A DIFFERENT DEVICE

To pair the unit with a different Bluetooth enabled device while your original device is still within range, you may need to go to the Bluetooth screen on your phone, select the original device and then select “Forget This Device”, “Disconnect”, “Cancel”, etc. to un-pair the original device.


Setting and Using the Radio

BASIC RADIO OPERATION


TIP: Extend FM antenna for best reception.




AM
FM

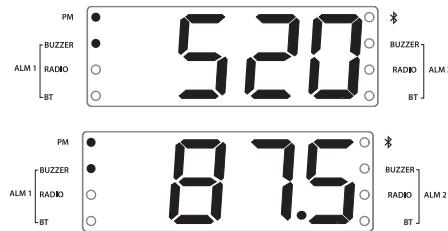


Press and release the **Power/Alarm Reset/Mode Button** as needed to turn unit On and select AM or FM radio band.

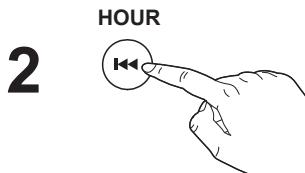

OR

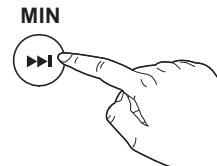

 Press and release the **Hour/◀ Button** or **Minute/▶ Button** to tune radio to a desired station. *Press and hold* to seek the next clear station.



OR




Press and release the **Volume - Button** or **Volume + Button** to adjust radio volume.


PRESET RADIO SETTING AND OPERATION

SETTING RADIO PRESETS

This unit will store up to 20 station presets, 10 AM and 10 FM.

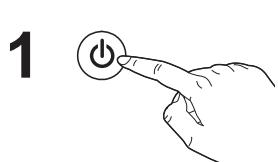


AM
FM

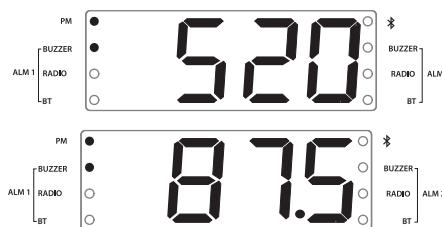


Press and release the **Power/Alarm Reset/Mode Button** as needed to turn unit On and select AM or FM radio band.




OR

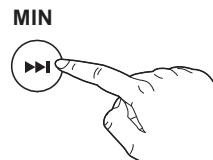


Press and release the **Hour/◀ Button** or **Minute/▶ Button** to tune radio to a station you want to assign to a preset. *Press and hold* to seek the next clear station.

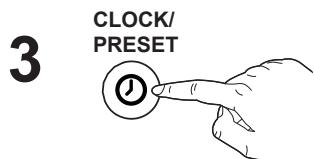

Press and hold the **Presets/Clock Button** to enter presetting mode.

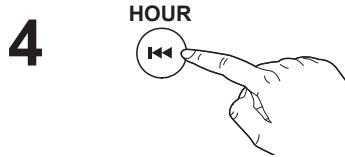


OR

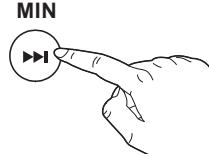

Press and release the **Hour/◀ Button** or **Minute/▶ Button** to select the preset number you wish to assign (P01 - P10).

5

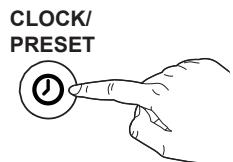


Press and release the **Presets/Clock Button** to confirm the preset number (P01 - P10) you want to assign to the current station. Continue steps 1-4 to set all desired presets.

PRESET RADIO OPERATION

To listen to a preset at any time, press and release the **Presets/Clock Button** as needed to select the desired preset station.


Using Aux In Audio

1

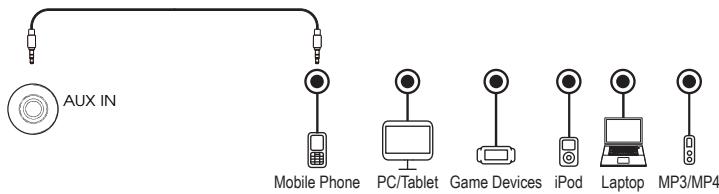

Connect a standard audio cable with 3.5mm plug (not included) to the AUX IN jack located on the back of the unit and to the output/headphone jack of your audio device.

 2



Press and release the **Power/Alarm Reset/Mode Button** as needed to turn unit On and select AUX mode.

3



OR



Control audio playback on your device, making sure output volume is turned up. If needed, press the **Volume - Button** or **Volume + Button** to adjust volume on the unit.

Sleep Mode


Sleep mode allows you to set the unit to turn off after a selected time interval. It allows you to fall asleep while listening to the radio or a device that is connected to the Aux In Jack.

NOTE: It will power off the Timex unit, but it will not power off your AUX device.



Press and release the **Snooze/Sleep Button** in AM, FM, AUX or Bluetooth mode to select the desired sleep interval: 90, 80, 70, 60, 50, 40, 30, 20, 10 minutes or OFF (turns unit off right away).

Dimmer

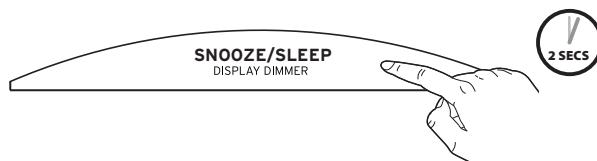

Press and hold the Snooze/Sleep Button to toggle display brightness between high and low settings. Dimmer cannot be adjusted when alarm is sounding.

Battery Cautions and Tips

- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Recharge rechargeable batteries under adult supervision.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in the household trash or fire.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. **Cleaning** – The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.
7. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
 - A. the power supply cable or plug has been damaged.
 - B. objects have fallen into or liquid has been spilled into the enclosure.
 - C. the unit has been exposed to rain.
 - D. the unit has been dropped or the enclosure damaged.
 - E. the unit exhibits a marked change in performance or does not operate normally.
12. **Antenna** – Do not connect an external antenna to the unit (other than that provided).
13. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
14. **Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Troubleshooting

1. The unit does not power ON.

The unit is not connected to AC outlet, the AC outlet has no power, or is controlled by a wall switch that is "OFF". Check AC outlet and wall switch.

2. Alarm does not come on.

The alarm time AM or PM incorrectly set, Alarm was OFF, etc. Check alarm settings.

3. Low battery indicator is on.

Batteries have not been installed correctly in the battery compartment or the batteries may be weak or exhausted. Try replacing batteries.

4. Poor FM Radio reception on certain stations.

Weak or distant station. Try adjusting the direction of the FM wire antenna.

5. Poor AM Radio reception on certain stations.

Weak or distant station. Rotate the unit to improve reception.

6. Unit shuts "Off" unexpectedly.

The unit is in Sleep Mode instead of the power ON mode, the unit was turned ON by an alarm and the alarm time ended, or the AC outlet unit is connected to is controlled by a wall switch that is turned OFF. Check mode on unit. Check wall switch. Turn unit on with Power Button.

FCC/IC Information

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:
 (1) This device may not cause interference; and

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage;

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

Limited 90 Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of ninety (90) days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-800-888-4491 for Return Authorization and shipping instructions.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2016 SDI Technologies, Inc. All rights reserved.

Questions? Visit www.timexaudio.com
 or call 1-800-888-4491 Toll Free

TIMEX is a registered trademark of Timex Corporation in the United States and other countries