

The power output is set at the factory and therefore there is no tune-up procedure