

# Chapter 4

## Windows 2000 Settings

### ■ Overview

This chapter describes how to make the settings for connecting your Windows 2000 computer to a wireless LAN.

### 4.1 Making the Wireless LAN Card Available

<b>Step 1</b>	Before installing the wireless LAN card .....	72p
<b>Step 2</b>	Installing the wireless LAN card .....	77p
<b>Step 3</b>	Installing the wireless LAN card drivers .....	79p
<b>Step 4</b>	Confirming that the installed wireless LAN card is normally operating .....	82p

### 4.2 Preparing for Connecting to the Network

<b>Step 5</b>	Making the network settings .....	85p
<b>Step 6</b>	Installing Client Manager .....	85p

### 4.3 Connecting to the Network

<b>Step 7</b>	-a Communicating via AirStation .....	89p
<b>Step 7</b>	-b Communicating with wireless LAN computers .....	91p
<b>Step 8</b>	Starting communication .....	93p

Follow the procedure in the illustration below to connect your Windows 2000 computer to a wireless LAN.

Making the wireless LAN card available (from page 72)-----

**Step 1**

Check the configuration of the drives on your Windows computer and confirm that its PC card driver operates normally.

**Step 2**

Install the wireless LAN card in the Windows computer.

Preparing for connecting to the network (from page 85)-----


**Step 5**

Make the settings for connecting the Windows computer to the network.

Connecting to the network (from page 89)-----

**Step 7 -a, b**

Make the settings for access to the network.  
a...AirStation  
b...Wireless LAN computers

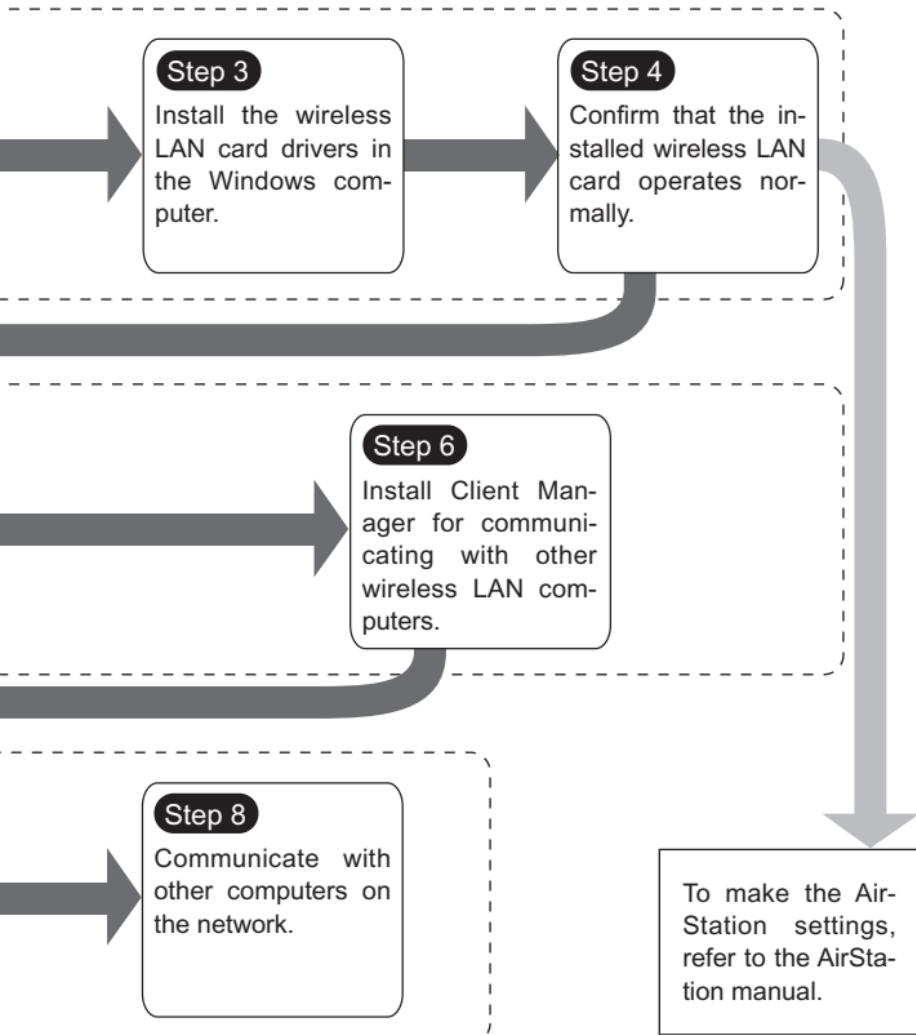

## 4.1 Making the Wireless LAN Card Available

Install the wireless LAN card to connect your Windows 2000 computer to a wireless LAN.


### Step 1 Before installing the wireless LAN card

#### Checking the configuration of your drives

Follow the procedure below to check the configuration of the drivers on your Windows computer in which the wireless LAN card will be installed.

- 1 Turn on the computer to boot Windows 2000. Log in with the log-in name having the administrator authority (Administrator, etc.).
- 2 Double-click [My Computer] on Desktop.

- 3

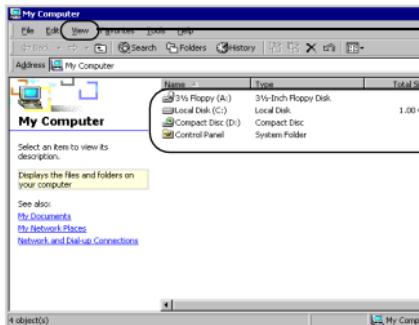

1 Select

Select [View]-[Detail].

2 Check

Check the drive names listed in the window.

These displayed drive names will be necessary in the subsequent procedures. Be sure to take note of these drive names in the table on the upper right of the next page.

Drive Type	Icon	Drive Name (e.g.)
3.5" FDD		(A:)
HDD (local disk)		(C:)
CD-ROM		(D:)


## Checking the PC card driver

Follow the procedure below to verify that the PC card driver on the computer in which the wireless LAN card will be installed is operating normally.

1 Right-click [My Computer] on Desktop.  
Click [Properties].

2 Click [Hardware]-[Device Manager].

3 Click the "+" mark on the left of [PCMCIA adapters].

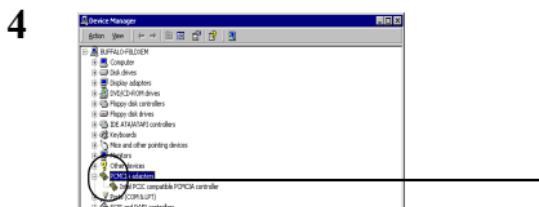

Confirm that the "x" mark is not indicated for the icon under [PCMCIA adapters].

**Note** The displayed PCMCIA controller name varies with the computer model.

⇒ Continued on next page

If such an error mark as "!" or "x" is not indicated, the PC card driver is operating normally.


**Caution** If the icon displayed under [PCMCIA adapters] appears with the ! or x mark, refer to the manual included in the computer and activate the PC card driver.

## Checking the browser settings (only for using the AirStation)

When you use the AirStation, invalidate the dial-up settings and proxy settings under the browser settings.

The following procedure uses Internet Explorer 5.0 or later for example.

- 1 Select [Start]-[Settings]-[Control Panel].
- 2 Double-click [Internet Option].
- 3 Double-click the [Connections] tab.
- 4

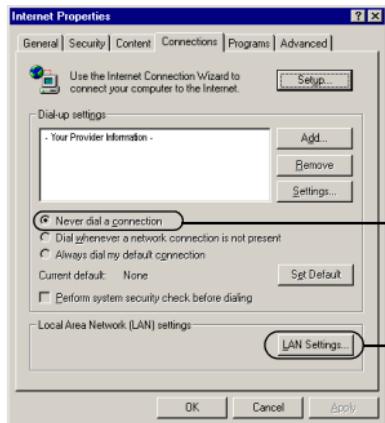

### 1 Click

When the provider information is listed in the [Dial-up settings] area, click the  mark on the left side of [Never dial a connection] below the area to put a dot mark.

### 2 Click

Click [LAN settings] in the "Local Area Network(LAN) settings" area.

## 5 Confirm the items with a checkmark.

For memorandum, put a checkmark for the same items below.

- Automatically detect settings
- Use automatic configuration script
- Use a proxy server
- Bypass proxy server for local addresses

## 6 Upon completion of confirming the items with the checkmark, remove the checkmark from all the items.

### Checking the network adapter

Confirm the current settings of the network function.

- 1 Select [Start]-[Settings]-[Control Panel].
- 2 Double-click [System].
- 3 Click [Hardware]-[Device Manager].
- 4 Click the "+" mark on the left side of [Network adapters], showing the current adapter as listed in the illustration.

⇒ Continued on next page

**5** Disable a LAN board or card if any name.

If there is no LAN board or card name listed, proceed to Step 6.



**1 Select**

Select "Do not use this device(disable)."

**2 Click**

Click [OK].

**6** If any name beginning with "AOL" is found under [Device Manager]-[Network adapters], disable it in the same manner as Step 5.

**7** Click [OK] to close the [Device Manager].

**Caution** If you have disabled any driver in Steps 5 and/or 6, restart the computer.

## Step 2 Installing the wireless LAN card

The wireless LAN card can be installed/removed in/from the computer which is in the ON state.

**⚠ Caution** If your computer is equipped with a power management function that automatically cuts power supply to the computer when it is left idle for a certain period, turn the function off. The wireless LAN card may be disabled if the power management function starts.

Refer to the manual provided with the computer for details on the power management function.


**⚠ Caution** Precautions for installation/removal

- Be sure to handle the computer and its peripherals in such a way as described in the manual of each unit.
- Completely remove any dust from the connectors.
- Never touch the connector portion of the wireless LAN card.
- Use great care for the connector location of the wireless LAN card when installing the card in the computer.  
The connector may be damaged if it is forced.
- The wireless LAN card can be inserted and removed with the computer turned on (Hot Swap feature). However, you should set the wireless LAN card in a safely removable state on Windows before removing it. See "When removing the wireless LAN card" on page 78.

## Installing the wireless LAN card in a notebook computer

Follow the instructions in the illustration below when installing the wireless LAN card in a notebook computer.

When inserting the wireless LAN card into the PC card slot on your computer, attach the BUFFALO's PC card adapter WLI-CF-OP available separately.

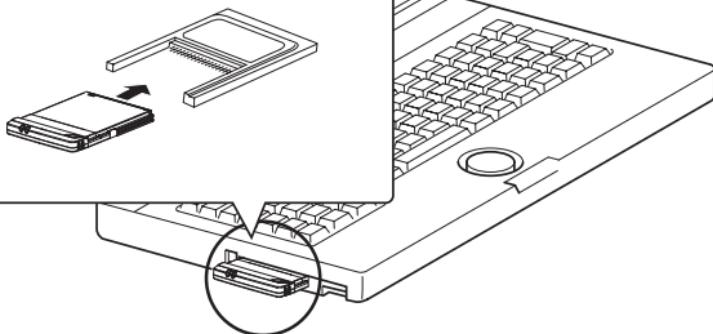

### When removing the wireless LAN card

Follow the procedure below to remove the wireless LAN card when the Windows 2000 computer is running.

- When Client Manager is active, you must not remove the wireless LAN card. Be sure to terminate Client Manager before removing the card.

1 Click the removal icon  in the task tray, and select "Stop BUFFALO WLI-CF-S11G Wireless LAN Adapter."

※ If you cannot find the icon, see the Windows Help.

- 2 When the message "The 'BUFFALO WLI-CF-S11G Wireless LAN Adapter' device can now be safely removed from the system." is displayed, click [OK].
- 3 Remove the wireless LAN card from the computer.

## Step 3 Installing the wireless LAN card drivers

**Caution** Please check the configuration of the drives on your computer (page 72) before installing the drivers. In addition, confirm that the PC card driver is normally operating on your computer (page 73).


**Note** Turn on the computer to boot Windows 2000. Log in with the log-in name having the administrator authority (Administrator, etc.).

- 1 The installed wireless LAN card is recognized and the [Found New Hardware Wizard] window appears.



**1 Click**  
Click [Next].

- 2

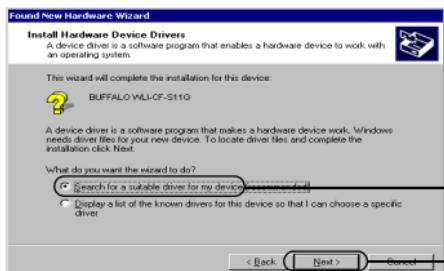

**1 Select**  
When the installed wireless LAN card is recognized as "BUFFALO WLI-CF-S11G," select [Search for a suitable driver for my device[recommended]].

**2 Click**  
Click [Next].

4

Windows 2000 Settings

**3****1 Select**

Select the "Optional search locations" as shown below.

Floppy Drive :  
Not checked

CD-ROM Drive :  
Not checked

Specify a locations :  
Checked

**2 Click**

Click [Next].

**4** Insert the "AirStation Driver CD" into the CD-ROM drive.

**Caution** When you insert the "AirStation Driver CD" into the CD-ROM drive, the Simple Installation Wizard window may automatically appear. In this case, click [Cancel], and then [Abort], closing the window.

**5****1 Enter**

Enter "D:\CFS11G\WIN2000" to the "Copy manufacturers' files from" field.

**2 Click**

Click [OK].

6



1 Check

Confirm that "d:\cfs11g\win2000\nets11.inf" is displayed.

2 click


Click [Next].

⇒ Continued on next page

4

Windows 2000 Settings

7

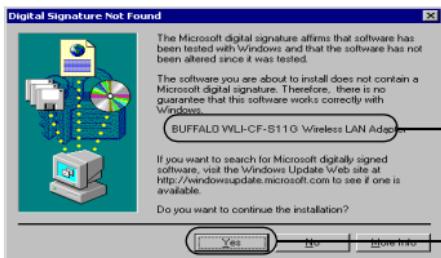

1 Check

Confirm that "BUFFALO WLI-CF-S11G Wireless LAN Adapter" is displayed.

2 Click

Click [Yes].

The message "There is no guarantee that this software works correctly with Windows" appears, but the operation has been verified in BUFFALO. Click [Yes] to proceed with the installation procedure.

8 Click [finish].


Now you have completed the wireless LAN card driver installation procedure. Proceed to the next step to confirm that the installed wireless LAN card is normally operating.

#### Step 4 Confirming that the installed wireless LAN card is normally operating

Upon completion of the installation of the wireless LAN card drivers, confirm that the wireless LAN card is normally installed by using the procedure below.

- 1 Select [Start]-[Settings]-[Control Panel].
- 2 Double-click [System].

3

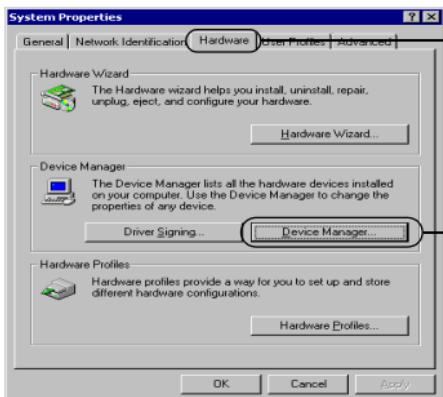

1 Click

Click the [Hardware] tab.

2 Click

Click the [Device Manager] button.

4 Confirm that "BUFFALO WLI-CF-S11G Wireless LAN Adapter" is displayed under [Network adapters] without any error mark ("x" or "!"") indicated.

When "BUFFALO WLI-CF-S11G Wireless LAN Adapter" is displayed without any error mark ("x" or "!"'), your wireless LAN card is normally operating.

#### If an error mark ("x" or "!"') is indicated

See "I want to uninstall the wireless LAN card" on page 102 in Chapter 5, and then uninstall and re-install the wireless LAN card drivers.

4

## **To make the AirStation settings**

Refer to the AirStation manual to make the AirStation settings.

## 4.2 Preparing for Connecting to the Network

### Step 5 Making the network settings

Upon completion of confirming that the installed wireless LAN card is normally operating, make the settings for connecting to the network. For how to make the settings, refer to the Windows 2000 manual or Help file.

### Step 6 Installing Client Manager

"Client Manager" is a tool for communicating with wireless LAN computers directly or via AirStation. It is necessary to install Client Manager in all wireless LAN computers.

Use the procedure below to install Client Manager.

- 1 Insert the "AirStation Driver CD" into the CD-ROM drive.

**⚠ Caution** When you insert the "AirStation Driver CD" into the CD-ROM drive, the Simple Installation Wizard window may automatically appear. In this case, proceed to Step 4.

- 2 Double-click [My Computer] on Desktop.
- 3 Double-click the CD-ROM icon (  ).

⇒ Continued on next page

4




1 Select

Select [Install the Client Manager].

2 Click

Click [Next].


5

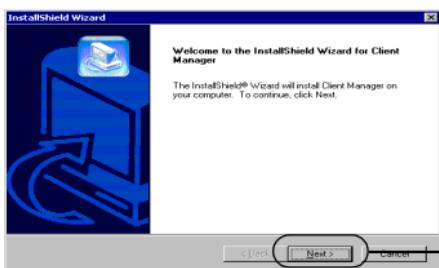

1 Click

Click [Next].


6

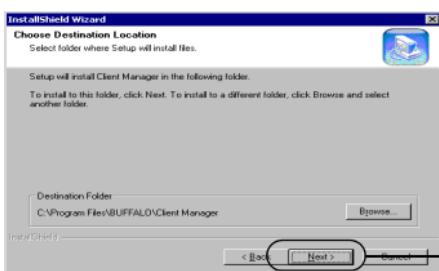

1 Click

Click [Next].

7

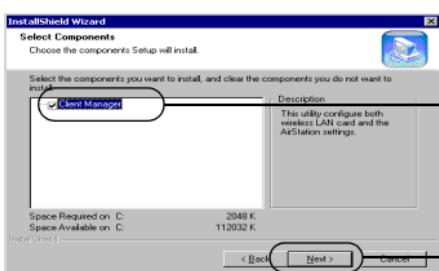


1 Select

Select "Client Manager."

2 Click

Click [Next].

8

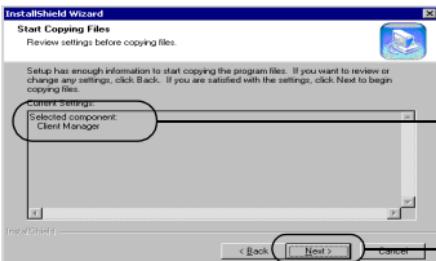
**1 Check**

Reconfirm the component to be installed.

**2 Click**


Click [Next]. Copying the files required for the installation will start.

9

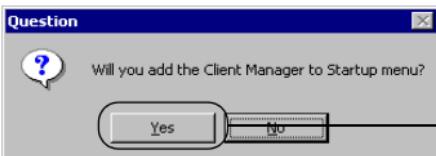**1 Click**

Click [Yes]. Client Manager will be registered in the Startup menu.

10

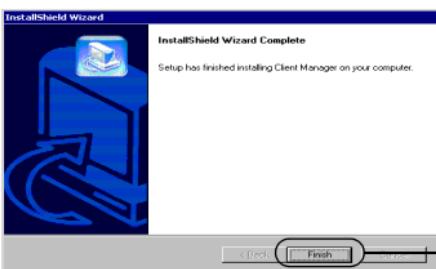**1 Click**

Click [Finish].

Now you have completed the Client Manager installation process.

⇒ Continued on next page

## To uninstall Client Manager

- 1 Select [Start]-[Settings]-[Control Panel].
- 2 Double-click "Add/Remove Programs."
- 3 Select "Client Manager" and click [Add/Remove].
- 4 Select "Remove" and click [Next].
- 5 When the message "Do you want to completely " appears, click [OK].
- 6 When the "InstallShield Wizard Complete" window opens, click [Finish].

## 4.3 Connecting to the Network

Upon completion of computer settings, you can connect your computer to the network. There are two methods for connecting the computer to the network as shown below.


- Communicating via AirStation **Step 7 -a**
- Communicating with wireless LAN computers **Step 7 -b**

### **Step 7 -a Communicating via AirStation**


To make communications using the AirStation, set the ESS-ID using Client Manager.

#### 1 Select [Start]-[Programs]-[AirStation Utility]-[Client Manager].

If the icon below appears in the task tray in the lower right on the screen, you can double-click that icon to start Client Manager.

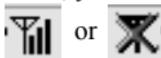

2

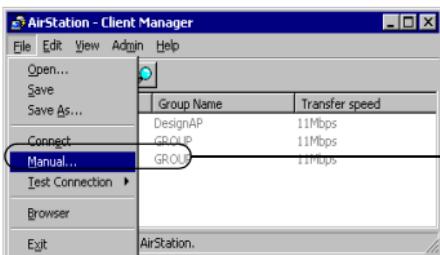

1 Select  
Select [File]-[Manual].

Group Name	Transfer speed
DesignAP	11Mbps
GROUP	11Mbps
GROUP	11Mbps

⇒ Continued on next page

**3**

1. Select "11Mbps Communication over AirStation" in the "Network Mode" field.
2. Enter the AirStation ESS-ID to the "ESS-ID" field.
3. Click [OK].

The initial setting of the AirStation ESS-ID shows the last six digits of the MAC address of the AirStation plus "GROUP" (upper-case).


**4**



**1 Click**  
Click [OK].


Enter an "WEP Key" if encryption with WEP is used in the network. If the AirStation is used in the initial state, no encryption is set. Leave the area empty in this case.

**5**

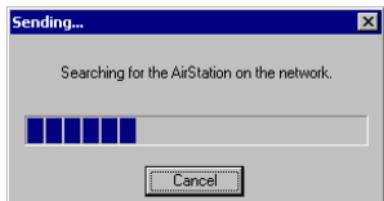

AirStation retrieval will be started.

6

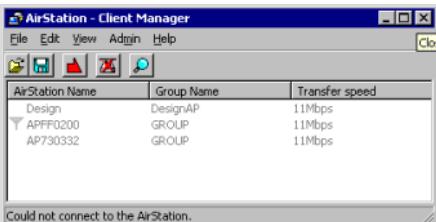

When this window appears, the access to the AirStation is successful.

**Note**

When the access to the AirStation is successful, the AirStation indication turns from gray to black so that the antenna mark (▼) appears. If the AirStation indication does not change to black, check the AirStation ESS-ID and WEP settings, and then repeat from Step 2.

**Note**


After the computer has succeeded in connecting to the AirStation, a slower data rate such as "2Mbps" may be displayed in the "Transfer speed" column. In this case, the correct data rate will appear when the practical communication starts.

## Step 7 -b Communicating with wireless LAN computers

When communicating with wireless LAN computers, manually set a radio channel using Client Manager.


### 1 Select [Start]-[Programs]-[AirStation Utility]-[Client Manager].

If the icon below appears in the task tray in the lower right on the screen, you can double-click that icon to start Client Manager.

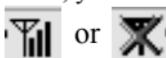

⇒ Continued on next page

2

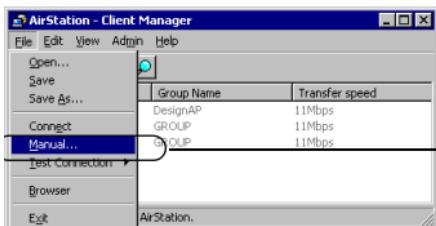

1 Select

Select [File]-[Manual].

3



1 Select

Select "Peer to peer communication" in the "Network Mode" field.


2 Select

Select the same channel as the other computers that you wish to communicate with in the "DS Channel" field.

3 Click

Click [OK].

4

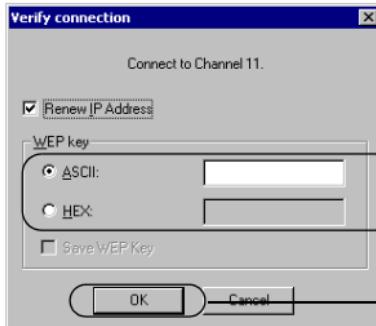

1 Enter

Enter an "WEP Key" if encryption with WEP is used in the network. If the initial settings are used, no encryption is set. Leave the area empty in this case.

2 Click

Click [OK].

Now you have completed the radio channel configuration procedure.

## Step 8 Starting communication

Upon completion of the radio channel configuration, you can access a computer on the network.

For how to make the network settings and how to make communications, refer to the Windows 2000 manual or Help file.

## MEMO