

EXHIBIT A
[FCC Ref. 2.1033(b)(3)]

"Installation and Operating Instructions
Furnished to the User"

Exhibit A(1) - User's Guide

Important Information

Equipment Approval Information

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

1 Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
- If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

Interference Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

US NUMBER IS LOCATED ON THE CABINET BOTTOM
REN NUMBER IS LOCATED ON THE CABINET BOTTOM

MEMORY

Store up to 24 memory numbers, which can be recalled by the memory number 0. For more information, see the Memory section of the manual.

STORING A NAME AND NUMBER IN MEMORY

- Make sure the phone is OFF from ringer mode.
- Press the memory button.
- Press the memory button again. The display shows "NAME".
- Press the memory button again. The display shows "NUMBER".

NOTE: To store a name and number in memory, you must first enter the name and number.

For example, to store the name "John" and the number "1234" in memory, you would first enter "John" and then "1234". After you enter the name and number, you would press the memory button to store the name and number in memory.

- Press the memory button.
- Press the memory button again. The display shows "NAME".
- Press the memory button again. The display shows "NUMBER".
- Press the memory button again. The display shows "NAME".
- Press the memory button again. The display shows "NUMBER".

NOTE: To store a name and number in memory, you must first enter the name and number.

- Press the memory button.
- Press the memory button again. The display shows "NAME".
- Press the memory button again. The display shows "NUMBER".
- Press the memory button again. The display shows "NAME".
- Press the memory button again. The display shows "NUMBER".

STORING A REDIAL NUMBER

- Press the redial button.
- Press the memory button to store the number. The display shows "MEMORY".
- Press the memory button again. The display shows "NUMBER".

NOTE: To store a redial number in memory, you must first enter the number.

DIALING A STORED NUMBER

- Press the memory button.
- Press the memory button again. The display shows "NUMBER".
- Press the memory button again. The display shows "NUMBER".

NOTE: To dial a stored number, you must first enter the number.

- Press the memory button.
- Press the memory button again. The display shows "NUMBER".
- Press the memory button again. The display shows "NUMBER".

INSERTING A PAUSE IN THE DIALING SEQUENCE

When you dial a number, you can insert a pause in the dialing sequence by pressing the pause button.

REVIEWING AND DELETING STORED NUMBERS

- Press the memory button.
- Press the memory button again. The display shows "NUMBER".
- Press the memory button again. The display shows "NUMBER".

CHAIN DIALING FROM MEMORY

Chain dialing allows you to dial a second number immediately after the first number is dialed.

- Press the memory button.
- Press the memory button again. The display shows "NUMBER".
- Press the memory button again. The display shows "NUMBER".

NOTE: To chain dial from memory, you must first enter the number.

CHANGING A STORED NUMBER

- Press the memory button.
- Press the memory button again. The display shows "NUMBER".
- Press the memory button again. The display shows "NUMBER".

NOTE: To change a stored number, you must first enter the number.

CONNECTING AN OPTIONAL HEADSET TO THE HANDSET

For hands-free operation, you can connect an optional headset to the handset.

- Press the memory button.
- Press the memory button again. The display shows "NUMBER".
- Press the memory button again. The display shows "NUMBER".

NOTE: To connect an optional headset, you must first enter the number.

CHANGING THE BATTERY

Make sure the battery is OFF before you change it.

- Remove the battery cover.
- Remove the battery.
- Insert the new battery.
- Close the battery cover.

BATTERY SAFETY PRECAUTIONS

- Do not short-circuit the battery.
- Do not dispose of the battery in fire.
- Do not dispose of the battery in water.

GENERAL PRODUCT CARE

Use the phone in a safe, dry, and well-ventilated area.

CAUSES OF POOR RECEPTION

- Check for obstructions.
- Check for interference.
- Check for antenna damage.

DISPLAY MESSAGES

When you see a message on the display, it means there is a problem with the phone.

- Check for low battery.
- Check for network error.
- Check for memory full.

ENTER NAME

When you enter a name, you can store it in memory.

DELETED

When you delete a number, it is removed from the memory.

DELETED

When you delete a name, it is removed from the memory.

DELETED

When you delete a number, it is removed from the memory.

DELETED

When you delete a name, it is removed from the memory.

DELETED

When you delete a number, it is removed from the memory.

DELETED

When you delete a name, it is removed from the memory.

DELETED

When you delete a number, it is removed from the memory.

LIMITED WARRANTY

This warranty covers defects in materials and workmanship.

- Warranty period is 12 months.
- Warranty is void if the product is damaged.
- Warranty is void if the product is used for commercial purposes.

ACCESSORY ORDER FORM

DESCRIPTION	QUANTITY	PRICE	TOTAL
Headset			
Car charger			
Travel kit			
Memory card			

For more information, visit our website.

Thank you for choosing our products.

Contact us for more information.

Visit our website for more information.

Call us for more information.

Write to us for more information.

Visit our website for more information.

Call us for more information.

How state law affects this warranty

- Some states do not allow the exclusion or limitation of consequential damages.
- Some states do not allow the limitation of the amount or type of damages.
- Some states do not allow the exclusion of incidental or consequential damages.

This warranty is governed by the laws of the state of California.

This warranty is void if the product is damaged.

This warranty is void if the product is used for commercial purposes.

This warranty is void if the product is used for commercial purposes.

This warranty is void if the product is used for commercial purposes.

This warranty is void if the product is used for commercial purposes.

This warranty is void if the product is used for commercial purposes.

This warranty is void if the product is used for commercial purposes.

This warranty is void if the product is used for commercial purposes.

This warranty is void if the product is used for commercial purposes.

This warranty is void if the product is used for commercial purposes.

This warranty is void if the product is used for commercial purposes.

GENERAL PRODUCT CARE

To keep your telephone working and looking good, follow these guidelines:

- Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping the handset, as well as other rough treatment to the phone.
- Clean the phone with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship the phone at a later date.

SERVICE

This product may be serviced only by the manufacturer or its authorized service agents. Changes or modifications not expressly approved by ATLINKS USA, Inc. could void the user's authority to operate this product. For instructions on how to obtain service, refer to the warranty included in this guide or call customer service at **1-800-448-0329**.

Or refer inquiries to:
ATLINKS USA, Inc.
Manager, Consumer Relations
P O Box 1976
Indianapolis, IN 46206

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date _____

Name of store _____