

Impala

Your RadioShack ~~Blaster~~ is built to handle the road in style, whether the road is the hallway inside your house or the sidewalk outside. Built to 1/12 scale, it can reach speeds of up to 1020 feet per minute! The Blaster's racing wheels handle the straightaways or rough spots, and its differential gear really handles the corners.

Note: You need the following (not supplied) to power your Blaster:

 
- One 9-volt battery (such as RadioShack Cat. No. 23-553) for the transmitter
- At least one 9.6-volt rechargeable battery pack (Cat. No. 23-229 or 23-329) for the car
- One battery pack charger (Cat. No. 23-240)

- Never leave dead or weak batteries in the transmitter or the car.
- Dispose of batteries and the battery pack promptly and properly; do not bury or burn them.

In the Transmitter

The transmitter uses one 9-volt battery for power. For the best performance and longest life, we recommend an alkaline battery, such as Cat. No. 23-553.

Follow these steps to install the transmitter's battery.

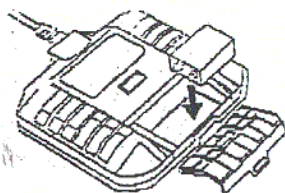

1. Pull up on the tab on the bottom edge of the transmitter so the battery compartment cover pops off.
2. Place a battery in the compartment according to the polarity symbols (+ and -) marked inside.
3. Replace the cover and snap it shut.

When the transmitter's range decreases, replace its battery.

INSTALLING BATTERIES

Cautions:

- Use only a fresh battery/battery pack of the required size and recommended type.
- If you will not be using the car for a week or more, remove the battery from the transmitter and the battery pack from the car. Batteries can leak chemicals that can damage electronic parts.

SUNCON TOYS IND. LTD.

FCC ID : GLE136002

JOB # : 271H0


EXHIBIT # : 3A

In the Car


The car uses one 9.6-volt rechargeable battery pack (such as Cat. No. 23-229 or 23-329) for power.

You must charge a rechargeable battery pack before you can use it to power your Blaster. To charge it, follow the battery charger's instructions. Then follow these steps to put the battery pack in the car.

 1. Slide the car's OFF/ON switch to OFF.

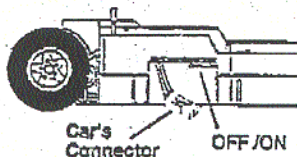


 2. Use a coin to turn the battery compartment cover's latches counter-clockwise until they stop. Then lift off the cover.

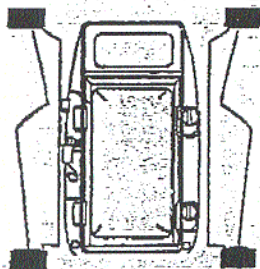

3. Place the battery pack in the compartment so the wires from the pack slide down into the slot on the side of the compartment.

 4. Replace the cover and turn the latches clockwise until they stop to secure the cover.
5. Connect the battery pack's white connector to the car's matching connector. They only fit together only one way. Do not force them!

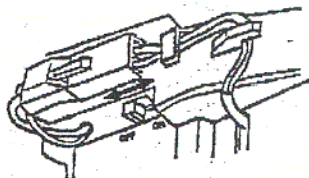

Caution: Be sure the connectors and wires do not touch the Blaster's moving parts.

If the Blaster loses power or does not respond to the transmitter, recharge the battery pack.

SUNCON TOYS IND. LTD.

FCC ID : GLE136002

JOB # : 271H0

EXHIBIT # : 3B

Cautions:

- Use only the recommended battery pack and charger.

- Do not charge or recharge the battery pack while it is in the car.

After you charge or recharge the battery pack (for 12 to 14 hours), disconnect it from the charger. Overcharging the battery pack could damage it.

- When you disconnect the battery pack from the charger, do not pull on the connector's wires. You might damage the battery pack.

Note: Occasionally, let the battery pack fully discharge before recharging it. Otherwise the battery pack loses its ability to fully charge.

Important: At the end of the battery pack's useful life, it must be recycled or disposed of properly. Contact your local, county, or state hazardous waste management authorities for information on recycling or disposal programs in your area. Some options that might be available are: municipal curb-side collection, drop-off boxes at retailers such as your local RadioShack store, recycling collection centers, and mail-back programs.

DRIVING THE BLASTER

 
Warnings:

- This car can reach much higher speeds than many other radio-controlled cars. Be careful to avoid high-speed collisions with people and objects.

- Never play with your Blaster in the street.

1. Slide the car's OFF/ON switch to ON.

2. Slide HIGH/LOW on the back of the car to HIGH for driving on smooth surfaces or LOW for rough surfaces or for climbing slopes.

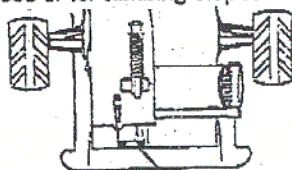

HIGH ↔ LOW

Note: If you cannot easily move the HIGH/LOW switch, slightly turn the car's back wheels by hand. Then try again.

SUNCON TOYS IND. LTD.


FCC ID : GLE136002

JOB # : 271H0

EXHIBIT # :

3c

 3. Use the transmitter's control levers to drive and steer the Blaster.

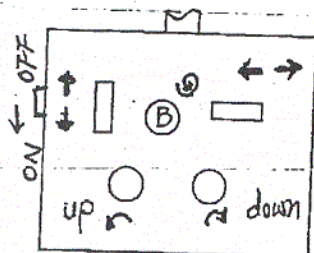

Left Control Lever

- Push forward to move forward.
- Push forward all the way for turbo speed.
- Pull back to move backward.
- Release to stop.

Right Control Lever

- Push left to move left.
- Push right to move right.
- Release to go straight.

Caution: If the Blaster gets stuck under an object, immediately release the transmitter's control levers and retrieve the car.

4. When you finish playing with the Blaster, slide OFF/ON to OFF.

 
Press the B button then the car's driver B which builds upon the right side of the car roof. It will turning until you release the button.

Press the Up button then the car's driver A which builds upon the left side of the car roof. It will turn up or down by pressing the up and down button.

WHEEL ALIGNMENT

If the Blaster does not go in a straight line when you release the right control lever, adjust the wheel alignment control on the bottom of the car.

Slide the control toward L if the car is pulling to the right, or toward R if the car is pulling to the left.

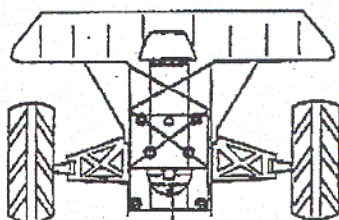

Wheel Alignment Control

HELPFUL HINTS

These hints can help you get the most enjoyment from your Blaster.

- Running your car continuously for long periods generates high heat levels. Heat causes wear and tear on the motor. To help keep heat levels down, when your car's battery pack dies, let the car cool at least 10 minutes before installing a newly charged battery pack.
- If someone uses a CB nearby, it might interfere with control of the car. If this happens, move the car and transmitter away from the CB.

SUNCON TOYS IND. LTD.

FCC ID : GLE136002

JOB # : 271H0

EXHIBIT # : 30

- You cannot operate your Blaster near devices with transmitters that use the same frequency as your car (either 27 MHz or 49 MHz). Check your car's box to see which frequency your Blaster uses.
- If the Blaster moves slowly and you just installed a fully charged battery pack, check the wheel mechanisms for lint, thread, hair or dust.

CARE

The following suggestions will help you care for your RadioShack Blaster so you can enjoy it for years.

- Do not drive the car in puddles, on a wet floor, on sand, or in mud, rain, or snow. These can damage it.
- Do not expose the car to temperature extremes.
- Clean it with a damp cloth to keep it looking new.

Modifying or tampering with the Blaster's or transmitter's internal components can cause a malfunction and might invalidate the warranty and void your FCC authorization to operate them. If the Blaster or the transmitter does not work properly, take them to your local RadioShack store for assistance.

THE FCC WANTS YOU TO KNOW

Your Blaster or transmitter might cause TV or radio interference even when it is operating properly. To determine whether your Blaster or transmitter is causing the interference, turn off your Blaster and release the transmitter's control levers. If the interference goes away, your Blaster or transmitter is causing the interference. Try to eliminate the interference by:

- Moving your Blaster and transmitter away from the TV or radio
- Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Blaster and transmitter.

Note : The manufacture is not responsible for any radio or TV interference caused by unauthorised modifications to this equipment. such modifications cloud void the user's authority to operate the equipment.

SUNCON TOYS IND. LTD.


FCC ID : GLE136002

JOB # : 271H0

EXHIBIT # : 3E

USER-REPLACEABLE PARTS

 You can order replacement parts for your vehicle at your local RadioShack store. Simply identify the part(s) you need from this exploded view, then find the part number in the list on Page 7.

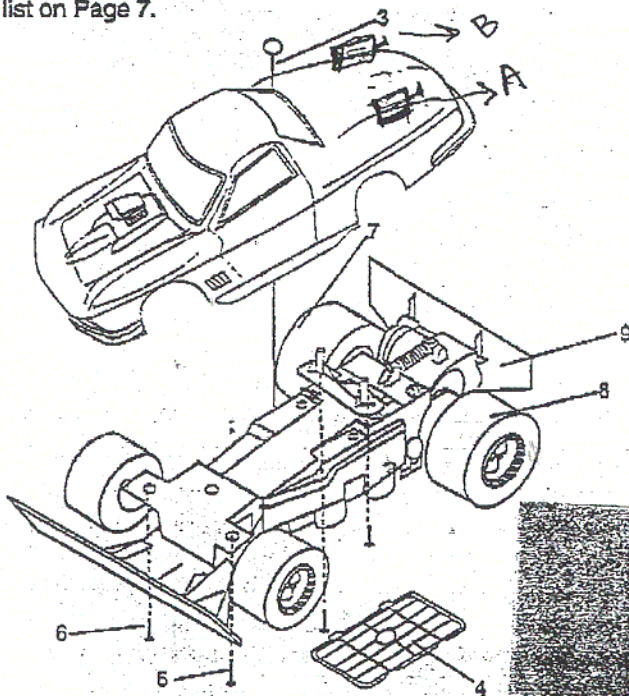

SUNCON TOYS IND. LTD.

FCC ID : GLE136002

JOB # : 271H0

EXHIBIT # : 3F

Ref. No.	Description	RSU #	NP Part #
1	Transmitter 27 MHz	12047775	ZA90136
2	Transmitter 49 MHz	12047757	ZA90135
3	Antenna (4.4 mm wire for receiver)	12047742	A90101
4	Car Battery Door	11444080	DB1742
5	Transmitter Battery Door	10611258	DB1064
6	Hardware Kit 60-4209 Consists of: Metal Screw 3 x 16PT (3) Metal Screw 2.6 x 10PT (2) Metal Screw 3 x 12PM (2) Metal Screw 3 x 12PT (4) Metal Screw 3 x 34ST (2) Washer 403 (1) Washer M3 (2) Washer 1010-9 (2)	12047783	HW6004209
7	Rear Wheel Assembly L	12047791	Z90092
8	Rear Wheel Assembly R	11914645	Z90446
9	Rear Bumper Guard	11914645	Z90446
10	Car Body Assembly, Label	12047817	Z91193
11*	Owner's Manual	12047809	MU6004209

*Not shown in explicit

SUNCON TOYS IND. LTD.

FCC ID : GLE136002

JOB # : 271H0

EXHIBIT # : 36

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 500, Fort Worth, TX 76102

We Service What We Sell

3.97

SUNCON TOYS IND. LTD.

FCC ID : GLE136002

JOB # : 271H0

EXHIBIT # : 34