

 
SBT608 User Manual

FRONT

BACK


SHARPER
IMAGE®

Bluetooth Speaker

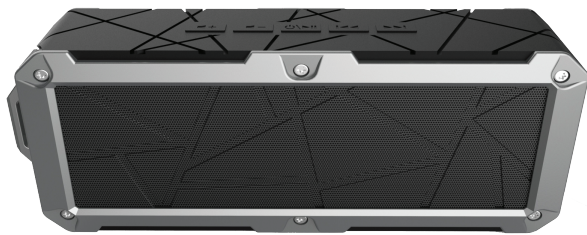

User Guide
SBT608

 In the Box

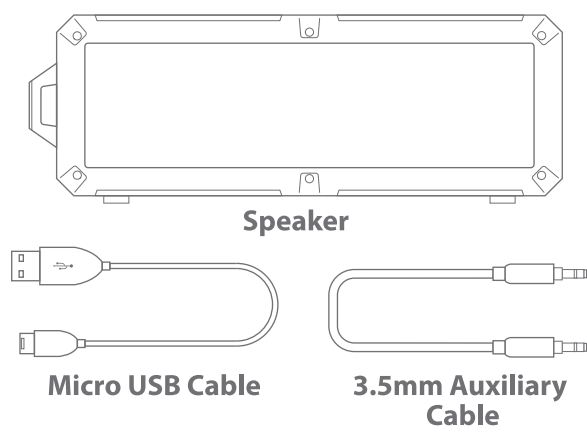


Pairing the Speaker

1. Turn the speaker ON by long pressing the [⏻] button. A tone will be heard indicating the speaker has power and the LED indicator will quickly flash BLUE.
2. Set your Bluetooth-enabled device to search for Bluetooth devices. When the Bluetooth-enabled device finds the speaker, select “SBT608” from the list of found devices.
3. After a successful pairing, a tone will be heard and the LED indicator will flash BLUE.

i If a previously paired device is in range when the speaker is turned on, the speaker will connect to it automatically.

On an iOS or Android Device

 - Go to **SETTINGS > BLUETOOTH** (Make sure Bluetooth is turned ON)

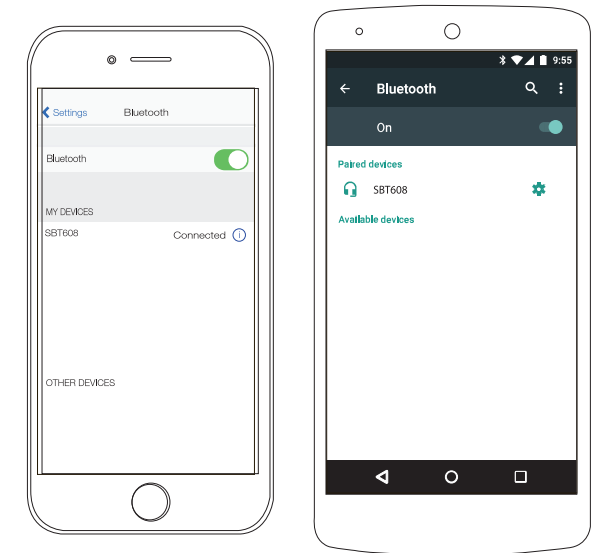

i The screenshots above are typical of many Bluetooth-enabled devices in the market today, and are used to assist in the explanation of the pairing process. Your Bluetooth-enabled device's interface and interaction with the speaker may differ slightly from the illustrations above.

Using the Speaker

NOTE: This speaker has a IP4 water resistance rating. That means this speaker can handle minor splashes of water or rainfall but CANNOT BE SUBMERGED in water. If the speaker is submerged in water, immediately remove, dry the outside of the speaker and let the speaker sit and dry on it's own before using.

ALWAYS MAKE SURE THE PROTECTIVE COVER ON THE SIDE OF THE SPEAKER IS COMPLETELY SEALED

Powering ON/OFF

- To turn the speaker ON, long press the [⏻] button. A tone will be heard indicating that the speaker has power.
- To turn the speaker OFF, long press the [⏻] button again.

Adjusting Volume

- To increase volume, quick press the [⏮+] button.
- To decrease volume, quick press the [⏭−] button.

Playing Music

To enjoy music wirelessly on your speaker, make sure that the speaker is properly paired to your Bluetooth-enabled device. If you are pairing the device for the first time, please consult the “Pairing the Speaker” section of this user guide.

 
Playing/Pausing Music

- To pause music playback, quick press the [⏻] button.
- To resume music playback, quick press the [⏻] button, again.

Skipping Tracks

- To skip to the next track, quick press the [⏭] button.
- To skip to the previous track, quick press the [⏮] button.

Location of Controls

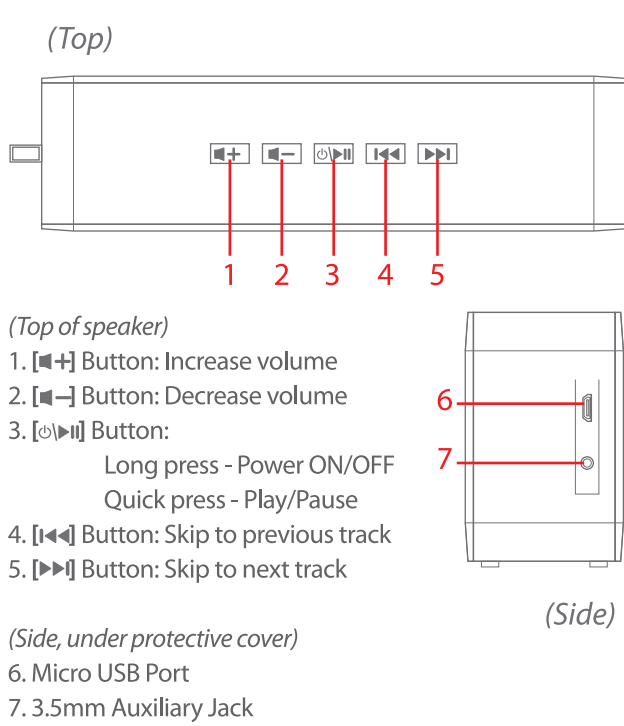


Charging the Speaker

WARNING: Make sure that the speaker is completely dry and that no water or moisture has entered beneath the protective cover before charging.

KEEP AWAY FROM WATER WHILE CHARGING.

To charge the speaker, pull the protective cover back on the side of the speaker and attach the small end of the micro USB cable to the USB charging port on the back panel of the speaker. Attach the large end to the USB port on a computer, USB charging device, or USB adaptor.

 The LED indicator will turn RED while charging and turn OFF when fully charged.

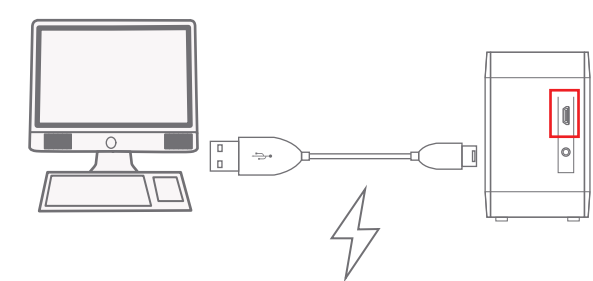


i Make sure you charge your speaker for at least **3 - 4 hours** before using it for the first time.

Using as a Wired Speaker

WARNING: Make sure that the speaker is completely dry and that no water or moisture has entered beneath the protective cover before using as a wired device.

KEEP ANY MEDIA-PLAYING DEVICES AWAY FROM WATER WHILE IN USE

 To use the speaker as a wired device, pull the protective cover back on the side of the speaker and connect one end of a 3.5mm auxiliary cable to the 3.5mm auxiliary jack on the back panel of the speaker and attach the other end to the headphone jack on your media playing device.

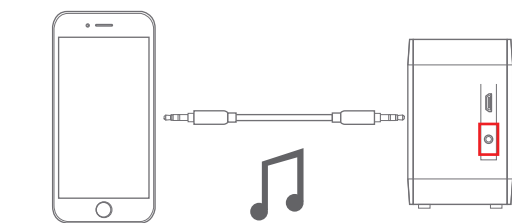

i Connecting the audio cable will override Bluetooth mode if it is enabled. When the cable is disconnected, the speaker will automatically reconnect to the last paired device if Bluetooth mode is enabled.

Questions and Customer Support

For further assistance or troubleshooting, please call our customer support line:

☎ Phone: 1-877-768-8481
Monday-Friday 8AM-10PM (EST)

💻 www.southern telecom.com
Click on “Product Support”

Legal Information

READ CAREFULLY AND KEEP THIS MANUAL

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undersired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Limited Warranty

90 Days Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Call the Customer Support number located below, or go to our website portal to receive an SRO number.
- Provide proof of the date of purchase within the package (dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:
Customer Service Dept. 36
c/o Southern Telecom
400 Kennedy Drive
Sayreville NJ 08872
Should you have any questions or problems concerning this product, please contact our customer service department at:
Customer Support:
☎ Phone: 1-877-768-8481
Monday-Friday 8AM-10PM(EST)

💻 www.southern telecom.com
Click on “Product Support”

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:

• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY AIT, INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

• REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AIT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations on exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

Sharper Image® name and logo are registered trademarks. Manufactured and marketed by Southern Telecom under license. © Sharper Image. All Rights Reserved.

SHARPER IMAGE®

