 


onn.[™]

QUICK START GUIDE

Large Wi-Fi Speaker

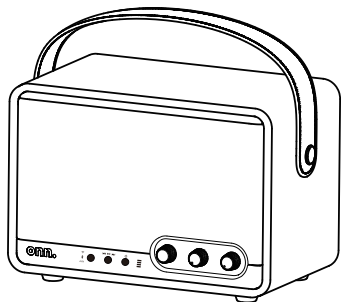

100136628

Contents & Information

CONTENTS & INFORMATION

Features.....1

OVERVIEW.....2

OPERATION.....4

CLEANING & CARE.....12

Cleaning.....12

SPECIFICATIONS.....12

TROUBLESHOOTING.....13

Features

- 360° Directional Sound
- 2.1 Channels, 3 speakers inside the unit
- 36W RMS output / 144W peak output (4 x RMS)
- Multi-room Wi-Fi streaming
- Bluetooth* with up to 65 ft (20 m) range
- Apple AirPlay*
- Party Sync mode—compatible with onn.[™] Wi-Fi speaker models: 100135446, 100136627, 100136628
- Built-in rechargeable battery with up to 20 hours of playtime
- IPX4 water-resistant
- USB charging port with emergency power charge: 5V⇒2.1A

Overview

PREVIOUS TRACK
PLAY / PAUSE / CALL
NEXT TRACK

VOLUME KNOB

SOURCE

POWER

BATTERY STATUS

BASS KNOB

TREBLE KNOB

Figure 1

RESET


 
AC CHARGING PORT

USB OUTPUT CHARGING PORT

AUX INPUT

Figure 2

CHARGING

Device may need to be charged before use.
Charging:  flashing.
Fully charged:  remain solid white.

PLAY MUSIC






Control	Action	Result
	Press & hold 2 sec	Power on / off
	Press x 2	In Bluetooth mode, enter / exit Party Sync mode
	Rotate clockwise or counter-clockwise	To increase or decrease the volume level
	Rotate clockwise or counter-clockwise	To increase or decrease the bass level
	Rotate clockwise or counter-clockwise	To increase or decrease the treble level

Table 1

GENERAL OPERATIONS








Control	Action	Result
	Press x 1	To switch between Bluetooth, Wi-Fi and AUX modes
	Press & hold 5 sec	• In Bluetooth mode, clear Bluetooth paired history • In Wi-Fi mode, clear Wi-Fi paired history
	Press & hold 2 sec	In Bluetooth mode, trigger Bluetooth pairing status
	Press x 1	• Play / Pause • To accept incoming call
	Press x 2	Next track
	Press x 3	Previous track
	Press & hold 3 sec	• To reject incoming call • Activate voice assistant

Table 2

onn.[™]

For product assistance
WE CAN HELP
1-888-516-2630
7 DAYS/WEEK
7:00am- 9:00pm CST

SAVE THIS
QUICK START GUIDE
PLEASE READ AND KEEP
FOR FUTURE REFERENCE.

Find more at **Walmart.com**

Manufactured in China for: Walmart, Inc.

Operation

POWER ON / OFF

Press & hold power button for 2 sec to power on / off the speaker.

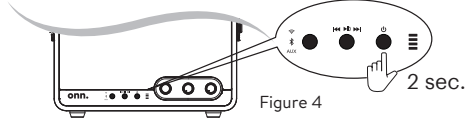 



Figure 4

CONNECT VIA BLUETOOTH

1. Press source button to switch to Bluetooth mode.
2. Press & hold source button for 2 sec to trigger Bluetooth pairing,  flashing white.
3. Connect to your device through Bluetooth* wireless technology, search for "onn. Wi-Fi Speaker L".

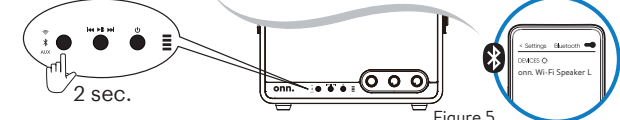 

 


Figure 5

CONNECT VIA WI-FI

1. Press source button to switch to Wi-Fi mode.
2. Wi-Fi searching:  flashing white.
3. Connect your iOS device to your Wi-Fi network.
4. Select "onn Wi-Fi Speaker L" to set up AirPlay.
5. AirPlay ready:  remain solid white.
6. Make sure your speaker is connected to the same Wi-Fi network as your iOS device.




Figure 6

Remark:

"It might take 16-20 secs for this speaker to join your Wi-Fi network.
*Android device cannot connect this speaker via Wi-Fi, you can connect it via Bluetooth or Aux in port.

PLAY THROUGH AirPlay

1. Through AirPlay, stream audio from your iOS device (iOS 11.4 or later is required) to the speaker.
2. On your iOS device, swipe down from the upper right corner of the screen, go to the Control Center.
3. Touch the AirPlay icon.
4. Select the speaker which is connected to the Wi-Fi, now you can start streaming audio from your iOS device.

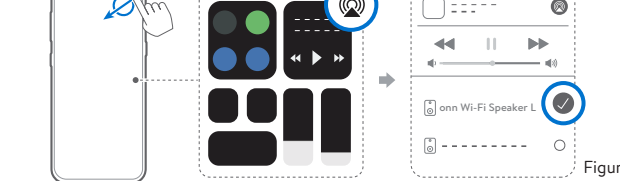 


Figure 7


Remark:

Android device cannot play through AirPlay, you can play through Bluetooth or Aux in port.

Remark:

you can select multiple speakers which are connected to the same Wi-Fi network, and let them stream audio together.

1. ENTER BROADCAST MODE

Power on one speaker and connect your device to this speaker via Bluetooth. Press power button x 2 to enter broadcast mode, you will hear "Broadcast". The  will start breathing.

 



Figure 8

2. BROADCAST WITH OTHER SPEAKER(S)

Power on other speaker(s) and switch to Bluetooth mode, then press power button x 2 to enter broadcast mode, you will hear "Broadcast". The  will also breathe. After 3-6 seconds, the speakers are synced successfully, now you can stream music and enjoy party sync audio.




Figure 9

3. EXIT BROADCAST MODE

Press power button x 2 of each speaker to exit broadcast mode, you will hear "Broadcast off".




Figure 10

4. BROADCAST COMPATIBLE LIST

This speaker can be party synced with multiple "onn. Wi-Fi Speaker L" or "onn. Wi-Fi Speaker M" or "onn. Wi-Fi Speaker S".




Figure 11

CONNECT VIA AUX IN PORT

Use a 3.5 mm Aux cable (not included) to connect the speaker to your audio source.





Figure 12

In AUX mode  cannot control the speaker, you can ONLY control the speaker from your audio source device.

ATTENTION

1. Always keep the charging port dry before connecting to AC power.
2. To ensure it is waterproof, always close the protective cover securely.




Figure 13

TIPS

1. USB-A charging port with emergency power can charge your other smart devices (5V ⇒ 2.1A output) when this speaker is powered on.
2. Fully charge the battery if you might not use this speaker in the near future. Place it in a cool, dry place.
3. Recommend to charge it at least one time for every 6 months in order to keep the battery performing well. A prolonged empty battery may result in fewer hours of usage between charges.

Cleaning & Care

CLEANING

1. Wipe down surfaces with a light cloth.
2. Never use abrasive pads to clean device.
3. Avoid using liquids to clean device.

Specifications

Weight

5.18 lb

Color

Rich black


Product Dimensions (L x W x H)

10.06 x 5.78 x 6.71 inches

Troubleshooting

Problem	Prevention/Solution
Cannot find "onn. Wi-Fi Speaker L" on my Bluetooth device	• Ensure Bluetooth function is activated on Bluetooth device • Double check if this speaker has already connected to another last-time paired device
Cannot find the speaker via Wi-Fi	• Switch to Bluetooth mode, press & hold source button for 5 sec to clear Bluetooth paired history
No Sound	• Adjust the volume • When you are using connection with external device, (Bluetooth device, etc) adjust volume level through external device • Check the input source and select correct input source
Can not Power on	• Charge battery
A malfunction with the speaker	• Press and hold the reset hole 1 second with a pin, until you see this speaker been powered off. After 3 seconds, you can power it on and use it as usual

Table 3

 奋达科技	料号	12.005.0004.07484		尺寸(mm)	展开尺寸760X95mm, 成型尺寸95X95mm		环保要求	说明书类说明: 1、公差 (mm): 0<a≤50 (+0.3/-0.2), 50<a≤150 (+1/-0.5), >150 (+1.5/-1。有特殊要求的, 按标示公差执行。 2、要求图文清晰可辨,内容完整,折叠正确,无重影,墨尿、杂点、脏点、异物、粉点、套印不准。 3、尺寸按展开尺寸及成型外尺寸测量计算。
项目名称	24年WWA243智能音箱项目	产品型号	WA2436	材质	128g铜版纸		■RoHS2.0、Reach	
日期	2024.02.20	部件名称	说明书	页码P数	8页 (16P)		■包装指令94/62/EC	
包装工程师	肖成松	平面工程师	刘梅红	颜色	单黑+1专(PANTONE 285C)		□大豆油墨印刷	
设计版本	变更提出人	变更原因		是否有可参考	表面处理	■无 □光油 □哑油 □水性光油 □水性哑油 □UV油 □光胶 □哑膜 □防刮花哑膜		□无氯漂白工艺
A0				□刀模 ■颜色	工艺	□无 □烫金 □烫银 □击凸 □击凹 □压网 □局部UV □其它		□粘合剂为非石油基
				■无	条码要求	■无条码 □有条码 (清晰易扫描)		□油墨中禁止使用矿物油 (法国)
				□有:	装订方式	■风琴折 □包心折 □骑马钉 □胶装 □线装 □其它		■TPCH (美国)

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.