



FCCCA

1:30 SCALE HIGH SPEED RC CAR

JOIN US, FEELING THE SPEED AND PASSION



- THERE MAY BE SOME DIFFERENCE BETWEEN THE
- REAL COLOR OF THE PRODUCT AND THE PACKING.

ITEM NO:3013A

- 1.4 channel, can travel freely on the ground.
2. Stand-alone for switch design
3. Charging time is 4 hours, 20 minutes for remote control
4. Selectable frequency : 49MHZ
5. The distance of remote control is more than 5 meters.

INSTRUCTIONS

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Packing has to be kept since it contains important information.

TO REPLACE BATTERIES

To change the batteries remove the safety screws from the battery compartment cover and make sure the positive (+) and the negative(-) poles are in the correct position as shown in the diagram.
To ensure proper safety and operation, battery replacement must always be done by adult. Never let a child use this product unless battery door is secured. Batteries are small objects and could be ingested. Keep all batteries away from small children. Immediately and safely dispose of any used batteries.



Radio Control



STEERING ALIGNMENT TRIM 3X "AA" BATTERIES (NOT INCLUDED) ON/OFF SWITCH

TRANSMITTER

FORWARD CONTROL TURN LEFT CONTROL



REVERSE CONTROL TURN RIGHT CONTROL







2X "AA" BATTERIES (NOT INCLUDED)



ATTENTIONS

About the product



1. Small parts inside, can not be put into mouth to avoid choking risk. Not for children under 3 years.
2. For technic reason, there's projecting part of the item. Please be careful when playing.
3. Not to play on risky places like playing on the road etc.
4. To avoid unforeseen accident, please do not put your face or hands near the wheels when it is moving.
5. Please keep the item away from places that of too high or too low temperature, like under direct sunlight or heating installation.
6. Keep the item dry. If it happens to get wet, please use absorbent cloth to make it dry.
7. Do not play it on sand, or out doors on rainy day.
8. To avoid to get hurt, please do not let your fingers, hair or clothes touch the wheel when you are playing.
9. When the car or the controller is in low power, the speed of the car will obviously become lower or it may not in good condition for controlling. Please replace the battery to new ones then.
10. Please take out of the battery when you are not going to play it for a period.

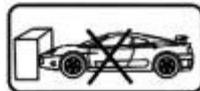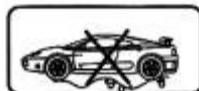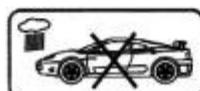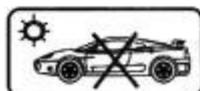



OPERATION

1. PUT THE SWITCH UNDER THE CARBODY TO "ON" AND THERE WILL BE CAR STARTING SOUND.
2. TURN ON THE SWITCH OF THE CONTROLLER, THE SIGN LIGHT WILL BE ON.
3. PRESS THE BUTTONS ON THE CONTROLLER TO PALY.

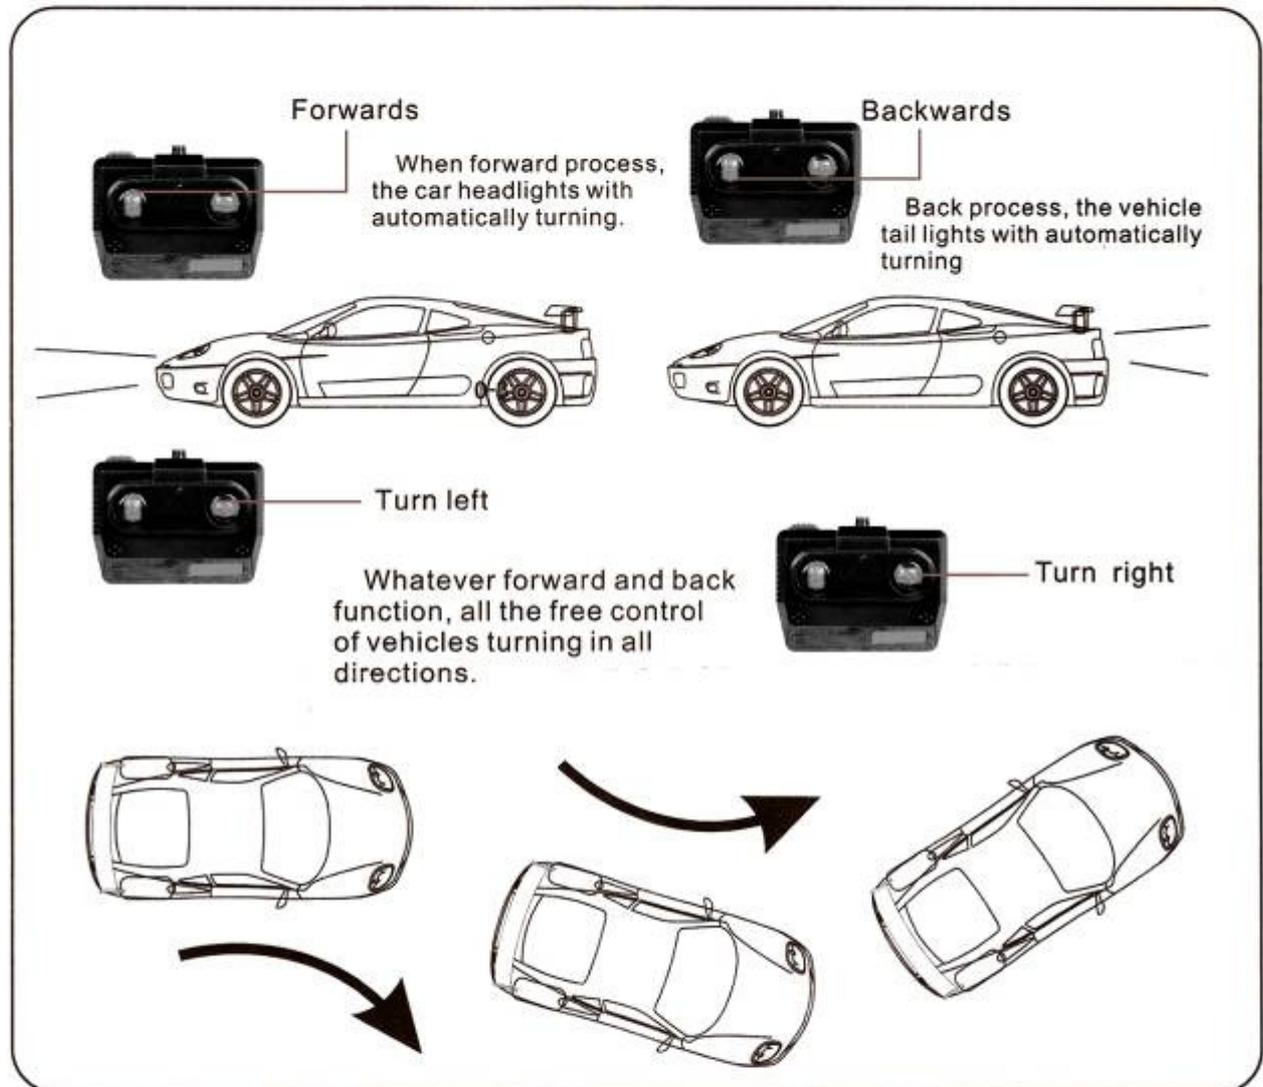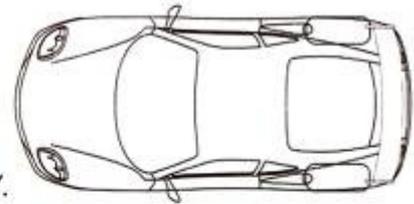

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.