

---

## CONTENTS

---

Important Safety Information .....	3
1. Introduction.....	5
Check Accessories .....	5
Icons On screen .....	5
2. Menu&Keypad Overview .....	6
3. Getting Started .....	7
4. Basic Operation .....	7
4.1 Menu Operate .....	7
4.2 Make a Call.....	7
4.3 Note In Call .....	7
4.4 Loud Speaker.....	7
4.5 Receiving Calls .....	8
4.6 Call Waiting.....	8
4.7 Speed Dial .....	8
4.8 Lock the keypad.....	8
4.9 Alarm .....	8
4.10 Organizer .....	8
4.10.1 Scheduler .....	8
4.10.2 Note.....	8
4.11 Voice Record .....	8
4.12 Game.....	9
4.13 U Disk .....	9
4.14 Contacts.....	9
4.14.1 Add New.....	9
4.14.2 Search.....	9
4.14.3 Groups .....	9
4.14.4 Speed Dial.....	9
4.14.5 Copy .....	9
4.14.6 Move.....	9
4.14.7 Delete .....	9
4.14.8 My Number .....	9
4.14.9 Memory Info.....	9
4.15 Messages .....	9
4.15.1 New Message .....	9
4.15.2 Inbox .....	10
4.15.3 Outbox .....	10
4.15.4 Voice Mail .....	10
4.15.5 Draft.....	10
4.15.6 Templates .....	10

4.15.7	Recipient Groups .....	10
4.15.8	Delete Messages .....	10
4.15.9	Message Settings.....	10
4.15.10	Memory Info .....	11
4.16	Mp3 Player.....	11
4.17	FM Radio .....	11
4.18	Camera.....	12
4.19	Call Manager.....	12
4.19.1	Dialed.....	12
4.19.2	Received .....	12
4.19.3	Missed.....	12
4.19.4	Note In Call.....	13
4.19.5	Call Duration.....	13
4.19.6	Delete History.....	13
4.19.7	Call Settings .....	13
4.20	Profiles.....	13
4.20.1	Vibrate Only.....	13
4.20.2	Silent .....	13
4.20.3	General .....	13
4.20.4	Outdoor .....	14
4.20.5	Headset.....	14
4.21	Tools .....	14
4.21.1	Stopwatch.....	14
4.21.2	Calculator .....	14
4.21.3	World Clock.....	14
4.22	Bluetooth.....	14
4.22.1	Bluetooth on/off .....	14
4.22.2	Paired devices.....	14
4.22.3	My device info .....	14
4.23	Access .....	14
4.24	File Manager.....	14
4.25	Settings.....	14
4.25.1	Display Settings.....	14
4.25.2	Security Settings.....	14
4.25.3	Phone Settings .....	15

## Important Safety Information

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

### ◆ Charger and Adapter Safety

- I The charger and adapter are intended for indoor use only.
- I Do not expose the battery charger to direct sunlight or use it in areas of high humidity, such as the bathroom.
- I Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.

### ◆ Battery Information and Care

- I Use only manufacturer-approved battery and chargers specific to your phone model since they are designed to maximize battery life.
- I Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- I Do not dispose of your battery by fire or with hazardous or flammable materials.
- I The battery does not need to be fully discharged before recharging.
- I When charging, please do not remove the battery.
- I Unplug the charger during lightning storms to avoid electric shock or fire.
- I Make sure that no sharp-edged items such as animal's teeth, nails, come into contact with the battery. There is a risk of causing a fire
- I Do not disassemble or short-circuit the battery.
- I Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- I Keep the battery's metal contacts clean.
- I Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- I Recharge the battery after long periods of non-use to maximize battery life.
- I Do not leave the battery in hot or cold places as it may deteriorate battery performance.
- I Battery life will vary due to usage patterns and environmental conditions.
- I Use of extended backlighting, Mini-Browser, and data connectivity kits affect battery life and talk/standby times.
- I The self-protection function of the battery will cut the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

### Explosion, Shock, and Fire Hazards

- I Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- I Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- I When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- I If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- I Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of causing a fire.

- I Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

### **General Notice**

- I Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- I Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- I When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- I Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- I Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact a manufacturer Authorized Service Center to replace the damaged antenna.
- I Do not immerse your phone in water. If this happens, remove the battery immediately. If the phone does not work, take it to a manufacturer Authorized Service Center.
- I Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- I The power cord on this product will expose you to lead, a chemical known to the State of California to cause (cancer) birth defects or other reproductive harm. Wash hands after handling
- I Do not disassemble the phone.
- I Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
- I The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The Manufacturer is not liable for damage due to the loss of data.
- I When you use the phone in public places, set the ring tone to vibration so as not to disturb others.
- I Do not turn your phone on or off when putting it nearby your ear.
- I When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.
- I Do not use a hand-held phone while driving.
- I Be careful that children do not swallow any parts such as battery or rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.
- I Never store your phone in temperatures less than -10°C or greater than 50°C.

## 1. Introduction

Congratulations on your purchase of the advanced and compact cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with many advanced features of the CDMA system such as greatly enhanced voice clarity this phone offers:

- Ø Message, Voice mail, and Caller ID.
- Ø MP3
- Ø Voice record
- Ø Loud speaker
- Ø FM Radio
- Ø Camera
- Ø Bluetooth
- Ø Any key answer, 99 speed dialing.
- Ø Optional accessories with greater convenience and enhanced functionality.
- Ø English/Indonesian language support.

### Check Accessories

Your mobile phone comes with one adapter, one battery, one headset, one user guide and one warranty guide. Please verify that these accessories are included.

### Icons On screen

The LCD shows icons on the top of the LCD screen.

Different icons appear based on the phone's operating mode.

Icon	Description	Icon	Description
	Network signal strength.		Profile - outdoor.
	CDMA 1X signal		Profile - general.
	Make a call.		Profile - silent.
	New text message.		Profile - vibrate.
	Alarm clock turn on.		Profile - headset.
	Battery power level.		Keypad lock
	Bluetooth		U disk connected.

## 2. Menu&Keypad Overview

<b>Alarm</b>			<b>MP3 Player</b>	Music Box
<b>Organizer</b>				MP3 Settings
<b>Note</b>			<b>FM Radio</b>	
<b>Voice Record</b>			<b>Camera</b>	
<b>Game</b>			<b>Call Manager</b>	Dialed
<b>U Disk</b>				Received
<b>Contacts</b>	Add New			Missed
	Search			Note In Call
	Groups			Call Duration
	Speed Dial			Delete History
	Copy		Call Settings	
	Move		<b>Profiles</b>	Vibrate Only
	Delete			Silent
	My Number			General
Memory Info		Outdoor		
<b>Messages</b>	New Message			Headset
	Inbox		<b>Tools</b>	Stopwatch
	Outbox			Calculator
	Voice Mail			World Clock
	Draft		<b>Bluetooth</b>	
	Templates		<b>File Manager</b>	
	Recipient Group		<b>Settings</b>	
	Delete Messages		<b>Configuration</b>	Security
	Message Settings			Phone Settings
	Memory Info			



Name	Description
Left Soft key	Execute the displayed function on the left bottom line.
Answer key	In the idle, press it to enter the Recent calls list. Dial or answer a call.
Number key	Editing numbers,characters and symbols.
Navigation key	In the idle, Up: press it to enter Messages menu. Down:press it to enter Contacts list.

Name	Description
	Left: press it to enter FM Radio interface. Right: press it to enter MP3 Player interface. OK:press it to enter shortcuts. In the others, press the navigation key to move the cursor.
Right Soft key	Execute the displayed function on the right bottom line. In the pop-up submenus interface, press it to close the submenus.
End/PWRkey	Press it to exit; Press and hold it to power on/off.

### 3. Getting Started

#### Charging the Battery

Use the charger provided with your phone.

**Warning!** Use only the charger provided with the phone or authorized by manufacturer.

Use any chargers other than above mentioned may damage your phone or battery.

- I Plug the end of the adapter into the phone's charger port. The battery power level will move after the correct connection.
- I When the battery power level becomes static, the battery is fully charged. Disconnect the adapter from the phone.
- I The charge time varies depending upon the battery level.

### 4. Basic Operation

#### 4.1 Menu Operate

1) In standby screen, press [ **Left Soft** ] key to enter the Main Menu screen.

2) Using [ **Navigation** ] keys to choose the menu item, and press [ **Left Soft** ] key or [ **OK** ] key to enter the item.

You could press the corresponding number keys according to the Menus Overview to select the item directly.

3) Press [ **Right Soft** ] key to return to the previous menu item or quit the Main Menu.

4) Press **END/PWR** key to return to the standby screen directly.

#### 4.2 Make a Call

1) Type the phone number or select one contact in the phone book, then press **Call** key.

2) To end the call, press **END/PWR** key.

**Note:** 1. In standby screen, press **Call** key to view the recent calls.

2. Type the speed dial number, press **Call** key to call the assigned contact.

3. In addition, you can make a call to message sender by pressing **Call** key during a message check.

#### 4.3 Note In Call

This function is a convenient feature which you can note during a call.

When you need,press [ **Left** ] key in the call could switch to use the call memo.

When you have saved call memo,you can find it in menu **<Call Logs>- <Note In Call>**,then you can view,edit message,save,erase.

#### 4.4 Loud Speaker

This function is a convenient feature which enables you to call using loud speaker

When you need,press [ **OK** ] key in the call could switch to using loud speaker.

## 4.5 Receiving Calls

When the phone rings or vibrates (if the Vibrate Mode is enabled), press **Call** key to answer.

To end an answered call, press **END/PWR** key.

## 4.6 Call Waiting

While a call is in progress, you may hear two beeps indicating another incoming call. When call waiting is enabled, you can put the active call on hold while you answer the other incoming call.

This service should be provided by your service provider.

- 1) Press **Call** key to receive a waiting call during the first call.
- 2) Press **Call** key again to switch between two calls.

## 4.7 Speed Dial

Speed Dial allows you to make a call faster by just pressing a corresponding number.

Enter Menu < **Contacts** > - < **Speed Dial** >.

Select an unused Speed Dial number, then press [ **OK** ] or select < **Options** > - < **Assign** > , assign the number you want.

Memory locations 3 to 99 should be used for your most frequently used phone numbers.

**Note:** You can only select the speed dial contact from the phone contacts.

## 4.8 Lock the keypad

In the standby screen,press[ **Left Soft** ] key to select Settings-Phone settings-Key Lock-Enable.

**Note:** When keypad is locked, you can still answer an incoming call.

## 4.9 Alarm

You can set three alarm time by this mobile phone.After you set the alarm time, the icon will be displayed on the screen.

### Snooze Function

When the alarm rings,press Snooze key to stop the alarm for 5/10/15 mins,press stop key to stop the alarm.

Scheduler keeps your agenda convenient and easy to access. Simply store your appointments and your phone alerts you with a reminder at the time you set.

## 4.10 Organizer

### 4.10.1 Scheduler

**How to use buttons:**

[ **Navigation** ] **Key:** Move cursor to the left, right, up or down.

[ **2** ]: Move to the previous year.

[ **8** ]: Move to the next year.

[ **4** ]: Move to the previous month.

[ **6** ]: Move to the next month.

Allow you to input your schedule.

1. Select the date, then press [ **OK** ].
2. Select < **Option** > - < **Add** >.
3. Enter your schedule information including:Date,Memo,Set alarm and time.
4. Press [ **OK** ] to save the schedule after you finish setting.

### 4.10.2 Note

You can use this function to record memo.

## 4.11 Voice Record

**Record New:** Record the voice.

**Voice Records:** Play the saved voice record. You also could rename and delete the voice records in the options.

In addition to the above features, it also includes stopwatch, calculator and world clock functions.

#### 4.12 Game

This handset supports FiveChess game.

#### 4.13 U Disk

Allow you to use the phone as a U Disk when the T-flash card is inserted in the phone. Connect the phone and a compatible PC correctly with the USB Data Cable, select **< Connect >**.

#### 4.14 Contacts

Keep records of your contacts, search, add, modify or delete.

##### 4.14.1 Add New

You can store multiple contact details under a name: Group ID, Mobile Number, Office Number, Home Number, Other Number, Ringtone, E-mail address and Note.

Input the details, press **Select key** to save the new contact.

##### 4.14.2 Search

To find phone numbers you have stored in the Phone.

1. Select **Menu > Contacts > Search**.
2. You can search the contact as following:
  - (1) Press [ **Up/ Down** ] to scroll through your Contacts alphabetically.
  - (2) Enter full or initial character of contact name.
  - (3) Enter full or part number of contact phone number
3. Select the contact, press **Select key** and choose **View** to view.

##### 4.14.3 Groups

Allow you to change Group Name. You may assign Ring Tones by Group.

Select your desired Group using [ **Up** ]/[ **Down** ], then press [ **Left Soft** ] key **< Options >**. you can **Add members, Set Ring Tone** and **Rename**.

##### 4.14.4 Speed Dial

Speed Dial allows you to make a call faster by just pressing a corresponding number.

Select an unused Speed Dial, then press [ **OK** ] or select **< Options > - < Assign >**, assign the number you want.

If you have already set up more than two shortcut dials, in **< Options >**, you can **Replace, Delete, Delete All**.

I **Replace:** Select Replace to change the number assigned to a particular location.

I **Delete:** Delete Speed Dialing saved in phone.

I **Delete All:** Delete all stored Speed Dialing.

##### 4.14.5 Copy

Allow you to find and copy contact from Phone to UIM card or from UIM card to Phone.

##### 4.14.6 Move

Allow you to find and move contact from Phone to UIM card or from UIM card to Phone.

##### 4.14.7 Delete

Allows you to find and delete contact saved in Phone or in UIM Card.

##### 4.14.8 My Number

Allow you to view and edit your phone number.

##### 4.14.9 Memory Info

Check the capacity of contacts you have stored in the UIM card or in the phone's memory

#### 4.15 Messages

Text message and voice mailbox become available in the handset.

##### 4.15.1 New Message

Allow you to send a text message. If there is any interruption by a call while composing

a message, messages automatically will get saved in the Drafts.

- 1). Select < **Menu** > - < **Messages** > - < **New Message** >.
- 2). Type your message then press [ **OK** ] key.
- 3). Entering the phone number where the message is to be sent.  
You can add up to 10 recipients.

Select < **Options** >:

- I **Send**: Use to send the message.
- I **Recent Numbers**: Select a recent sent number.
- I **Search Contacts**: Select number from Contacts.
- I **Recipient Groups**: Select number from SMS Groups Members.
- I **Priority**: Set Message Low or High.
- I **Save Sent Msg**: Set Sending Msg to be save or not.

#### 4.15.2 **Inbox**

Received text messages and page messages may be searched, and the contents may be viewed. Received messages are sorted in an order of urgent unread messages, unread messages and read messages.

- 1). Select < **Menu** > - < **Messages** > - < **Inbox** >.
- 2). After selecting the desired message with [ **Up** ]/[ **Down** ], press[ **OK** ] to view the message.

Select < **Options** >:

- I **Reply**: Reply to this message.
- I **Forward**: Forward a received message to others.
- I **Call**: Make a call to sender.
- I **Edit Before Call**:Edit the phone number before you make a call.
- I **To Inbox**: Move or copy the selected message from the UIM card to the Inbox.
- I **To UIM Card**: Move or copy the selected message from the Inbox to the UIM card.
- I **Save Adress**: Save the number of Message's Sender to Contacts.
- I **Extract URL**:It can extract the text content of the web site.
- I **Delete**:Delete the selected message.

#### 4.15.3 **Outbox**

Sent and unsent text messages can be saved,and the contents may be viewed.

#### 4.15.4 **Voice Mail**

Voice mail notification indicates the quantity of new voice mail message in your mailbox.

Only the recent voice mail notification will be stored in your phone, previous message will be overwritten.

**Note**: Check with service provider for availability of this feature.

#### 4.15.5 **Draft**

Message failed in transmission may be stored here.

After selecting the desired message with [ **Up** ]/[ **Down** ]; press[ **OK** ] to view the message and entry to the process for Send Message.

#### 4.15.6 **Templates**

There are 9 predefined phrases in the Templates. You may edit the templates and add new templates.

#### 4.15.7 **Recipient Groups**

Allow you to change Group Name. You may send a message by Group. Select yourdesired Group using [ **Up** ]/[ **Down** ].

#### 4.15.8 **Delete Messages**

You can delete all stored messages from different folders and make them empty.

The folders including **Phone,Outbox,UIM Card and Draft**.

#### 4.15.9 **Message Settings**

You can customize your phone's message facility according to your requirement by configuring various options i.e. Priority, Delivery ACK, Validity Period,Save Sent

Message, UIM Inbox Lock, Auto Scroll Timer, Auto Delete Inbox, Msg Reminder, Save Location.

**Priority:** When sending a message, you can select the default from **Low** or **High**.

**Delivery Ack:** Allow you to select delivery acknowledgement with your messages.

**Validity Period:** Allow you to select the validity time with your messages.

**Save Sent Message:** With this feature on, messages are automatically saved in the Outbox after transmitted.

**UIM Inbox Lock:** Lock the Archive for your privacy, if you want to enter the menu Archive in UIM, you need to input lock code. Default lock code is **0000**

**Auto Scroll Timer:** When view the details of message, if message contents are more bigger than screen's, the content display will be scrolled with the scroll timer.

**Auto Delete Inbox:** With this feature on, the latest message is automatically erased in the inbox when the number of inbox message is up to the max quantity.

**Msg Reminder:** when receive the new message and don't operate anything, the phone will remind you.

**Save Location:** You can save the message in Phone or UIM Card.

**Callback Number:** You can make the callback number enable or disable.

**UDH:** Select on/off to choose whether activate long SMS function.

#### 4.15.10 Memory Info

Allow you to view the available memory in Phone, Outbox, UIM Card and Draft.

### 4.16 Mp3 Player

1. Press **< Select >**, enter into **Music Box , Mp3 Settings**.

2. Enter into **Music Box**, select one Mp3 which stored in My Music of T-Flash card, then press **[ Options ]**, select the **(Play/Rename/Set as ringtone/Delete/Delete All)**, then press **[ OK ]** to confirm .

3. When MP3 is playing, press **[Option]**, you can select **Hide** to play MP3 in the background. And you can select Repeat Settings, set Skin, set EQ, and set MP3 as ringtone.

4. When MP3 is playing, press **“\*”** key to turn up volume, press **“#”** to turn down volume. press **[left]** key to switch to the previous song, press **[right]** key to switch to the next song, press **OK** key to stop playing the song, then press **OK** key to continue to play the song, and press **[down]** key to return to the MP3 Box interface.

**NOTE:** The folder name in T-flash card for playing mp3 in the phone shall be “My Music”. If you store mp3 in the folders with different names, you can't play them in the phone. The following way is how to add MP3 songs:

1. Power off the handset, insert the T-flash card in the mobile, lock properly.

2. Power on the handset, connect the handset with PC by USB data cable. Select

**Menu > Extras > U Disk>Connect.**

3. Copy mp3 files from PC into the folder named “My Music”.

4. Press **[Left Soft]** key to disconnect the phone with the PC.

5. Select **Menu > MP3 Player > Music Box**, then you can play MP3.

### 4.17 FM Radio

When you want to play FM Radio, please insert the headset.

#### 1. Access to Radio

You can enjoy radio broadcasting through this phone.

Select **< Menu > - < FM Radio >** on the idling screen, press **[Right Soft]** key to choose FM Radio icon then press **OK** key to enter FM Radio.

#### 2. Selecting a Channel

When the radio is switched on, the default channel or the channel you listened to last time is selected. Press **[ Up ] / [ Down ]** to change to the next channel and press **[ Left ] / [ Right ]** to adjust the volume. You also can press the

number key to switch to different channel.

### 3. Listen to the Radio

Select < **Hide** > to play radio in the background.

Select < **Options** > to select **Switch Off, Speaker on/off, Record, Edit Channel, Auto Scanning, Reset, Reset All.**

I **Switch Off:** Turn off the radio, and back to previous screen.

I **Record:** Make a record while FM Radio is playing.

I **Speaker On:** When Speaker on, you can listen to the radio without headset.

I **Edit Channels:**

Edit the selected channel's name and channel frequency.

I **Auto Scanning:** Search for all available channels automatically and save the channels by pressing [ **OK** ] key.

I **Reset:** Reset the selected channel to default frequency.

I **Reset All:** Reset all channels to default frequency.

#### NOTE:

1.If you set the ring tone or adjust the volume in **Volume Setting** while the radio is on, the radio will stop playing until you finish setting.

2.When there is an incoming call, the radio will stop automatically until the call is over.

3.Playing FM Radio with headset could have a better performance than without headset

4. The voice records will be stored in the folder named **Records** in the T-Flash card.

## 4.18 Camera

### Take photo

Allow you to take a photo.

1. Select < **Take Photo** >, activate the camera.

2. Press [ **Left** ] key < **Option** >, select (    ) with [ **Left** ]/[ **Right** ] key, press[ **Up** ]/[ **Down** ], to select the item, then press [ **OK** ] to confirm.

3. Press[**OK**]key to take a photo.



: Set the resolution of the photo for 640X480 or 320X240 pixels.



: Adjust the brightness of the image which the camera gets.



: Enter into the album .

**NOTE:** Only when the photos are saved in the folder named "Images" in your T-flash card, the handset could show these pictures in the **File Manager ->T-Flash ->Images.**

### General album

You can see the photos list.

### Restore Default Settings

In this function, you can set the camera to factory settings.

## 4.19 Call Manager

Call Logs maintains all types of call details and allow you to set Call Settings (answer mode, call waiting, call forward etc), show call duration and also allows you to delete call history.

### 4.19.1 Dialed

Allow you to view list of all Dialed Calls.

1. Press [ **Left Soft** ] key < **Options** >, **View / Message / Edit Before Call / Save / Delete / Delete All** appear on the screen.

### 4.19.2 Received

Allow you to view list of all Received Calls.

For details, refer to [4.12.1].

### 4.19.3 Missed

Allow you to view list of all Missed Calls

For details, refer to [4.12.1].

#### 4.19.4 Note In Call

Allows you to view of quick note (number only) which saved during the call. While a call is in process, press [ **Left** ] key to save a Call note.

#### 4.19.5 Call Duration

Allow you to view the duration of selected calls.

1. Press [ **Up/Down** ] to highlight the list of calls
2. Press [ **Left Soft** ] key < **Reset** > to clear call duration one by one.

#### 4.19.6 Delete History

Allow you to erase call from different folders and make them empty.

1. Select the item (**Received / Missed/ Dialed**) to erase, then press [ **Left Soft** ] key < **Select** >.
2. Select < **Yes** >, then press [ **OK** ] .

#### 4.19.7 Call Settings

**Answer Mode:** Allow you to determine how to answer an incoming call.

**Call Forward:** Allow you to configure the call forward service which diverts incoming calls to a user-specified number.

**Call Waiting:** Allow you to configure the call waiting services which hold incoming calls that you can answer or not.

**Voice Privacy:** Use an encrypted high security line so that others can not eavesdrop on your conversation, or use a standard line.

**Clear Voice:** You can cut down the noise around when you are making a call.

**Call Connect Alert:** With this feature on, you will hear the reminding sound when the mobile connect to the mobile station during the originating call.

**Int'l Call Prefix:** Set the international call access code to **Manual** or **Automatic**, then long press "0" shall serve as "+" .

1. Set **Manual / Automatic** with [ **Up** ]/[ **Down** ], then press [ **OK** ].
2. Edit the access code you want in Manual Mode, then press < **Save** >.

**Auto Answer:** You can set this function on/off.

**Block List:**You can set block numbers.

## 4.20 Profiles

Customize the phone's profiles.

### 4.20.1 Vibrate Only

Allow you to set the phone profile mode to Vibration mode.

### 4.20.2 Silent

Allow you to set the phone profile mode to Silent mode.

### 4.20.3 General

Set the phone profile mode to general mode.

Select the < **General** >, then select < **Edit** > to set the details in General mode.

#### 1) Ring Alert

Allow you to select the alert type for an incoming call.

##### •Ring Type

Choose the ring type to remind you when there is a new incoming call.

##### •Ring Tone

Select a tone between Default and Downloaded ring tones. When there is a new incoming call, the selected tone is played.

#### 2) Message Alert

Allow you to select the alert type for a new incoming message

##### •Message Type

Choose the alert type of reminding when receiving a new message.

##### •Message Tones

Select a message tone, when receiving a new message, the selected tone is played.

#### 3) Volume Setting

Choose a Volume sub-menu and press [ **Left** ]/[ **Right** ] to adjust the

volume of different modes, then press [ **OK** ] to confirm.

#### **4) Service Alert**

Allow you to set the system service alert **On** or **Off**.

#### **4.20.4 Outdoor**

Allow you to set the phone profile mode to Outdoor mode.

#### **4.20.5 Headset**

When you insert the headset,the headset mode will turn on automatically.

### **4.21 Tools**

#### **4.21.1 Stopwatch**

This phone supports stopwatch.

#### **4.21.2 Calculator**

This phone supports calculator.

#### **4.21.3 World Clock**

This phone supports world clock.

### **4.22 Bluetooth**

#### **4.22.1 Bluetooth on/off**

Select **On** to active Bluetooth first before you using it.

#### **4.22.2 Paired devices**

Active the BT first, search for the device,then you can pair the device.

If there is no applicable device in the screen list,press [**left soft**] key to scan the device you want to pair with. When the desired device is shown on the screen, press [**OK**] to connect,enter the needful password if it's necessary.

If you want to pair your phone with a BT headset,the default password is 0000.

After the paring process,you can transfer your files or use your BT headset.

#### **Note:**

1.Only files in the external memory card can be transfered by BT.Please make sure the memory card is prepared for your phone.

2.The limit distance in what you can scan the device suitable is 50 meters.

#### **4.22.3 My device info**

You can see your device information with this function.

### **4.23 Access**

This is UTK 2.0 function supported by UIM card.

### **4.24 File Manager**

The File Manager manage all the folder of images and music,also,you can check the capacity of phone memory and T-Flash card memory.

### **4.25 Settings**

#### **4.25.1 Display Settings**

##### **Backgrounds**

Wallpaper:Allow you to choose different kinds of background to be displayed on the screen.

##### **Clock**

Allow you to choose the mode of clock to be displayed on the standby screen.

##### **Time**

Allow you to view the time as **12 Hours** Style or **24 Hours** Style.

##### **LCD Brightness**

You can choose different brightness of LCD display.

##### **LCD Backlight**

Screen and buttons are lighted for a designated length of time, allow you to use your mobile phone in the dark with convenience.

#### **4.25.2 Security Settings**

You must key in Lock Code to enter the **Security** Setting. The default Lock Code is

0000.

**PIN Code Settings:** Allow you to set UIM Card's **PIN Code Request** and **Change PIN Code**.

1. Select **PIN Code Request** to be **On**.

The phone requests you to key in the Pin Code. After you type in the correct Pin Code, the **PIN Code Request** is activated **On**, and you must type in the correct Pin Code to turn phone power on in the future.

**Note:**

1). The initial default Pin Code could be gotten from the UIM card provider.

2). If you type in the wrong Pin Code three times continuously, the UIM card will be locked automatically. You should get the PUK code from the card provide to unlock the UIM card.

2. Select **Change PIN Code**.

You could change the Pin Code here. For confirmation, the phone will request you to enter current Pin Code and prompt you to enter the new Pin Code twice.

**Phone Lock:** Keep your phone from unauthorized use. Select Lock Mode, the options are (**Off/Now/On Power Up**).

1). Select **Now**, the phone will be locked immediately. You need to key in the correct Lock Code to activate the phone.

2). Select **On Power Up**, the phone will be locked after powered on, and you need to key in the correct Lock Code to activate the phone.

**Note:** The continuous wrong inputs of the Lock Code wouldn't lock the UIM card.

When the handset is locked, input "0000" to unlock the phone.

**Change Phone Code:** Allow you to change to a new four-digit lock code number. For confirmation, your phone will prompt you to enter the new lock code twice.

**Reset Factory Settings**

Reset all settings to the default options.

Reset all items in the phone. (Delete all contacts, all messages, internal gallery photos and other records in the phone)

**Warning:** Please confirm the important contacts, messages, photos and other records in the phone are backuped before you reset factory settings..

#### **4.25.3 Phone Settings**

**Language**

You can select the phone language between English and Indonesian.

**Key Lock**

Enable this function, the keypad will be locked automatically when the standby screen turns off.

**Airplane Mode**

Set the phone to airplane mode **On** or **Off**. On airplane mode, user can not make calls or send messages, the phone disconnects with mobile station.

**Version**

You can view the name of the mobile phone, the S/W, PRL and H/W version.

**FCC RF Exposure Information and Statement**

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types C1188 (FCC ID: HEO12863) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the Head is 0.398W/kg and when properly worn on the body is 0.482W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

**FCC WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.