

Get to know your device

GizmoWatch3™

Para la versión en español, visite
verizonwireless.com/support.

verizon✓

Setting Up Your GizmoWatch

Charging Your GizmoWatch

Before you start, charge your watch completely.

1. Line up the gold pins on the charging cord with the charging contacts on the back of the watch. The watch and charging cord are magnetized and should connect without effort.



NOTE: The image is for illustration purposes only and appearance of the actual wrist strap pattern may vary.

2. Plug the other end of the cord into the charging adapter and plug the adapter into an electrical outlet.

WARNING: Use only approved chargers with your device. Incompatible chargers or tampering with the charging contacts could damage your device and void the warranty.

Preparing Your Smartphone

Download the GizmoHub app from the Google Play™ Store or the Apple® App Store®.

The GizmoHub app lets you set up, call, message, find and control your child's GizmoWatch.

Wearing Your GizmoWatch

1. Wrap the wristband around your child's wrist, making sure that the camera is on top of the screen.
2. Slide the wristband through the buckle and adjust for comfort (**A**).

A



3. Insert the pin on the underside of the buckle into one of the holes on the wristband (**B**).

B



4. Slide the wristband through the loop (**C**).

C



NOTE: The watch should fit snugly, but not too tightly, around your child's wrist.

Swapping the Loop Strap

NOTE: Additional loop straps are supplied in three different colors: orange, green, and blue.

1. Pull the release knob all the way in the opposite direction (**A**).




2. Detach the wristband from your GizmoWatch (**B**).



3. Remove the loop strap from the wristband (**C**).



4. Replace the loop strap (**D**).

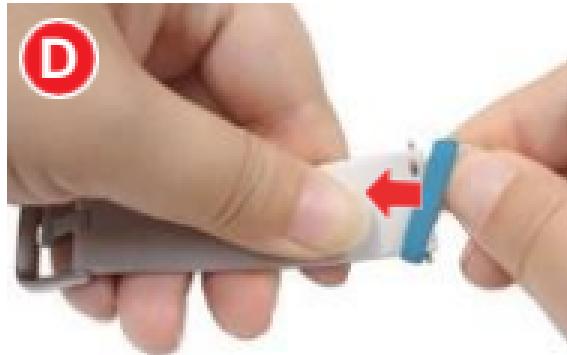

Replacing the Wristband

1. Insert the pin (the opposite side of the release knob) into the pin hole on your GizmoWatch (**A**).



2. Pull the release knob all the way in the opposite direction and align the other end of the pin with the hole on your GizmoWatch (**B**). Release the knob to lock the wristband in place.



Turning Your GizmoWatch On and Off

To turn your watch on, press and hold the **Power**  button until the screen lights up.

To turn it off, press and hold the **Power**  button until you see “POWER OFF WATCH?” on the screen. Then tap  to turn off your watch.



Activating and Pairing Your GizmoWatch

Follow the instructions in the app and on your GizmoWatch to complete setup.

Using Your GizmoWatch


NOTE: Screen images and icons are for illustration purposes only and may differ from the actual device.

Adjusting the Volume

Swipe to the left from the **Watch screen** until you see the **Settings Menu**.

Tap  to go to the **Volume screen**. Then drag around the circle to adjust the volume levels.

Alternatively, you can use the bottom Increase (+) or Decrease (-) volume controls.

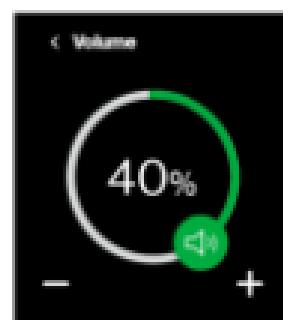


Making a Call

1. From the **Watch screen**, swipe left to open the **Contact List**. Then select the contact you want to call.

2. Tap  to make audio call.

3. Tap  to make video call.

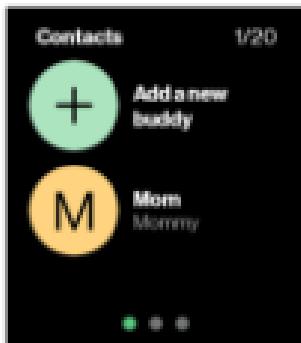

NOTE: Your GizmoWatch can only make and receive calls from phone numbers on your child's Contact List. These numbers may be for mobile phones, landlines, and other Gizmo devices. You can manage the Contact List in the Gizmo Hub app.

Receiving a Call


When someone from your child's contact list calls the GizmoWatch, it will ring and the caller name will be shown on the screen.

- To answer the call, tap .
- To reject the call, tap .



- To end the call, tap .


TIP: To adjust the volume during the call, tap .

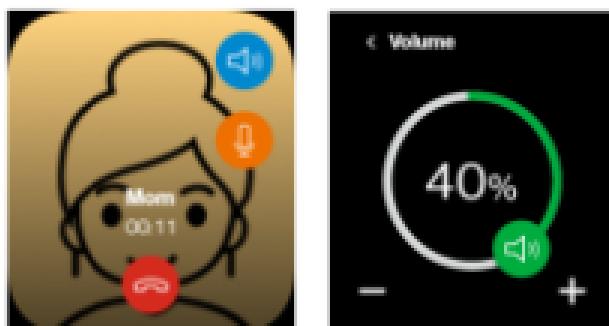


NOTE: Making and receiving calls and messages requires a network connection.

Sending a Message

1. From the **Watch screen**, swipe left to open the **Contact List**. Then select the contact you want to message.

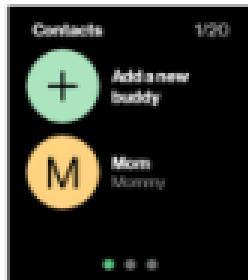

2. Tap  to create a new message. Then:
 - To create a voice message, tap .
 - To choose from a list of pre-written messages, tap .
 - To send an emoji, tap .

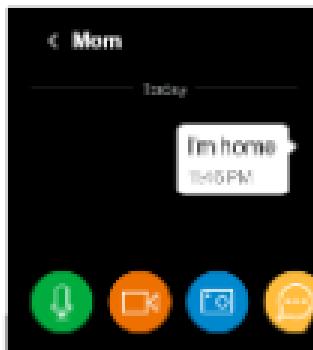

Receiving a Message

When the GizmoWatch receives a new message, it will appear on the Home screen. To reply, tap the contact.



NOTE: Your GizmoWatch can only receive messages from contacts with the GizmoHub app or from other Gizmo devices if the sender is a GizmoBuddy. It can't receive messages from non-Gizmo devices.

Additional information

Your wireless device and third-party services

Verizon is the mobile carrier associated with this wireless device, but many services and features offered through this device are provided by or in conjunction with third parties. Verizon is not responsible for your use of this device or any non-Verizon applications, services and products, including any personal information you choose to use, submit or share with others. Specific third-party terms and conditions, terms of use and privacy policies apply. Please review carefully all applicable terms, conditions and policies prior to using this wireless device and any associated application, product or service.

© 2022 Verizon. All Rights Reserved.

