

EXHIBIT C

User Manual

TO OPERATE:

1. Switch the ON/OFF VOLUME control ON by pushing the dial down. To turn OFF, move the dial up until you hear it click
2. To transmit, press the PUSH TO TALK button and speak into the microphone. Speak in a normal voice
3. To receive, release the PUSH TO TALK button, and listen to the sender's message.
4. Your voice will transmit up to 100 feet in areas with clear reception.
5. The walkie talkie can attach to your belt with the BELT CLIPS for ease and portability.

“THE FOOLING FACTORS CAN AFFECT THE PERFORMANCE AND OPERATING RANGE OF THE WALKIE TALKIE: COMPUTERS, ACTIVE ELECTRONIC EQUIPMENT, FLUORESCENT LIGHTS AND TALL BUILDINGS”

CAUTION:

1. If your walkie talkie does not operate properly try a new set of batteries since your batteries may be defective or have low voltage even though they appear to be new.
2. After use always return the ON/OFF control to the OFF position.
3. Do not touch antenna with your fingers or hand. It will cause weak transmission.
4. Your walkie talkie set has been fully adjusted prior to shipment from the factory. Do not touch the internal parts other than replacing the battery.
5. Manufacturer recommends alkaline batteries for maximum performance.
6. To prevent damage, do not expose the set to rain or moisture.

To ensure proper function:

- Do not mix new & old batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Battery installation should be done by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (If removable)
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.

BATTERY INSTALLATION:

1. Slide the ON/OFF SWITCH to the OFF position.
2. To open the BATTERY COVER, slide the BATTERY COVER in downward motion to release the door.
3. To install 9 volt or “6LR61” battery observe the battery polarity by matching the snap on the connector with the proper snap terminals on the battery. Use care not to bend the connector terminals. Push the battery connector firmly on the battery. Reinstall the BATTERY COVER.

INFORMATION TO THE USER

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device. Pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception. Which can be determined by turning the equipment off and on the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

This booklet is available from the US government Printing Office
*Washington, DC 20402, Stock NO. 004-000-00345-4.

CAUTION: Any changes of modifications not expressly approved by the grantee of this device could void the users authority to operate the equipment.