

APPLICANT MOTOROLA INC.

FCC ID: IHDP56LB1

INSTRUCTION MANUAL

A representative version of the user's manual follows:



MOTOROLA **MT716**

User's Guide

MOTOROLA **LANTANA MT716**

User Guide

Final DRAFT

10/07/30

Dummy Page - To be discarded before printing

Use this template with A6MotoLandscapeProduct1 StructApps.

See the Reference Pages for template user instructions.

Congratulations

MOTOROLA MT716

Do it all—work, answer emails, watch TV, browse the web, find a restaurant—all on your MOTOROLA **MT716**.

- Don't miss your favorite program, watch TV when and where you want ("Mobile TV" on page 29).
- Surf the Internet to your heart's content ("Web" on page 29).
- Enjoy yourself with powerful features, such as, **Mobile Market, Fetion, 139Mail, Monternet, DCD, Navigation** and **Mobile Stock** ("Apps for all" on page 32).
- Run your business. Get access to great business features, such as **Mobile Reader, Notes**, and **Business Card Reader**.

Caution: Before assembling, charging, or using your phone for the first time, please read the important legal and safety information packaged with your product.

More

Accessories: Find accessories for your phone at www.motorola.com/products.



DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION

Your phone

the important keys & connectors



When you open your phone, the screen adjusts for you.



Note: Your phone might look a little different.

Contents

 
Let's go	3
Touchscreen & keys	5
Home screen	7
App menu	8
Calls	9
Contacts	12
Messaging	14
Text entry	16
Tips & tricks	18
Personalize	20
Photos & videos	21
Business tools	24
Music	24
Mobile TV	29
Web	29
Apps for all	32
Bluetooth™ wireless	32
Wi-Fi™	34
USB & memory card	35
Tools	36
Management	38
Security	39
Troubleshooting	41
Safety, Regulatory & Legal	42

Let's go

let's get you up and running

Assemble & charge

1 cover off

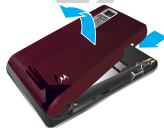

2 SIM in



 
3 battery in



 
4 microSD in



5 cover on

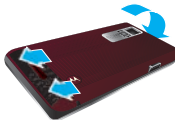

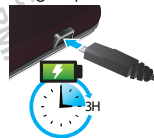

6 charge up



Caution: Please read "Battery Use & Safety" on page 42.

Turn it on & off

To turn on your phone, press Power  (on the top right).

To turn off your phone, press and hold Power , then touch **Power off** in the menu that opens.



Note: This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.

Wi-Fi™ connect

If you want to use a Wi-Fi network for even faster Internet access, press Home  >  **Settings** > **Wireless Lan Settings**. Touch **WLAN** to turn on, search for and connect to wireless networks. There's more in "Wi-Fi™" on page 34.

Cool content & more

Browse and download the coolest apps on the planet from the Internet. On top of that, you get a full HTML browser, so you can surf in style.

Download new apps from the "Web" on page 29. Your phone comes with 122 MB of internal memory, and an optional microSD memory card (upto 16 GB) can be installed—you can load it up with photos, videos, and

music from your computer using "USB drag & drop" on page 35.

Security

There are plenty of ways to protect your phone and your information, in "Security" on page 39.

DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION


Touchscreen & keys

a few essentials


Touch tips

 
Here are some tips on how to navigate around your phone.

Touch


To choose an icon or option, *touch* it. Try it: In the home screen, touch  **Contacts**.

Touch & hold


To open special options, *touch and hold* an icon or other item. Try it: In the home screen, touch  **Contacts**, then touch and hold a contact to open options.

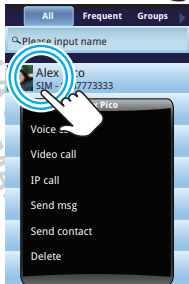

Drag

To scroll through a list or move slowly, *drag* across the touchscreen. Try it: In the home screen, touch  **Contacts**, then drag your contacts list up or down.

 Tip: When you drag or flick a list, a *scroll bar* appears on the right. Drag the scroll bar to move the list to a letter A-Z.

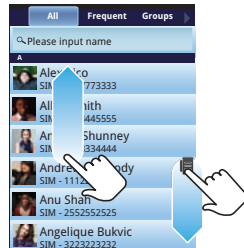




Flick

 
To scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

Tip: When you flick a long list, touch the screen to stop it from scrolling.

Key tips

Menu, home, back & TV


Press Home  to close any menu or app and return to the home screen. Press and hold Home  to show the last few apps you used, then touch an app to open it. In the home screen, press Home  to open or close the app menu.

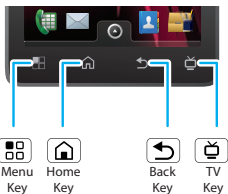



Press Menu  to open menu options, or Back  to go back.

Press TV  to open Mobile TV. See "Mobile TV" on page 29.


Sleep & wake up

To save your battery, prevent accidental touches, or when you want to wipe smudges off your touchscreen, put the touchscreen to sleep by pressing Power .

To wake up the touchscreen, press Power , then drag the moving circle to the bottom left corner of the screen.

Tip: To change how long your phone waits before the screen goes to sleep automatically, press Home  > **Settings** > **Display settings** > **Screen timeout**.

Power key menu

Press and hold Power  to turn off the phone (**Power off**), or set the mode (**Normal mode**, **Vibrate mode**, **Silent mode**, **Outdoor mode**), or turn on **Airplane mode**.

Adjust volume


Press the volume keys to change the ring volume (in the home screen), or the earpiece volume (during a call).



Home screen

quick access to the things you need most

Quick start: Home screen


The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or press Home  from a menu. It's basically like this:




Use & change your home screen

On your home screen, *shortcuts* open your favorite apps, bookmarks, contacts and more.



Flick the home screen left/right to see more panels of shortcuts.

- To **open** something, touch it. Press Home  to return to the home screen.

You can find details about the settings for **Messages** ("Set up messaging" on page 15) or **Mobile Music** ("Music" on page 24).

- To **add** something, touch and hold an empty spot until you see the options. You can add apps, shortcuts, folders, widgets, and wallpapers.
- To change your **wallpaper**, press Menu  > **Wallpaper**.
- To **move** or **delete** something, touch and hold it until you feel a vibration, then drag it to another spot, another panel, or into the trash.

Search

To search, press Menu  > **Search** > **Local Search** or **Web Search**. Then, touch the field, enter text, then touch  Search.

















Type, then touch the icon for a text search.

Phone status & notifications





At the top of the screen, icons on the left notify you about new messages or events (flick the bar down for details). Icons on the right tell you about phone status:



	Bluetooth™ active		network (full signal)
	GPS active		network (roaming)
	Wi-Fi active	G	GPRS (fast data)
	downloading	E	EDGE (faster data)
	vibrate	3G	3G (fastest data)
	silent		airplane mode
	mute call		battery (charging)
	speakerphone active		battery (full charge)
	alarm set		

App menu



Quick start: App menu

The app menu shows you all of your applications. To open it from the home screen, touch the app tab  or press Home . To close it, touch the app tab  or press Home  again.



Note: The apps shown may vary.

Switching apps

Press and hold Home  to see the last few apps you used, then touch the app you want. Press Home  to close an app and return to the home screen.

 
Calls

it's good to talk

Quick start: Calls

Dialing options

Find it: Home  >  **Phone**

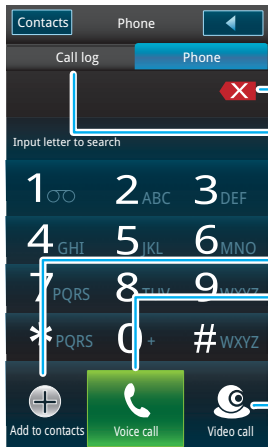

Delete

Touch to delete a digit you entered.

Call History

Touch to open, then touch an entry to call.

Create Contacts

 
Call

Enter a phone number, then touch to make a voice call.

Video Call

Enter a phone number, then touch to make a video call.

In-call options

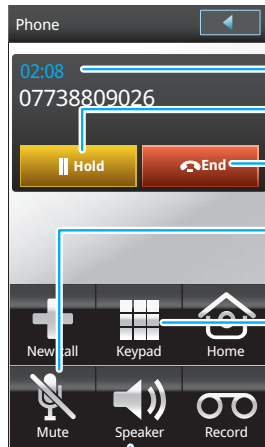

Call Timer

Hold Call

Touch to hold call.

End Call

Touch to hang up.

Mute

Touch to mute or unmute the call.




Keypad

Touch to open a dial pad, to enter numbers during a call.

Speakerphone

Touch to turn on or off.

Note: Video call options may be different.

Tip: To use other features during a call, like **Contacts**, press Home  or Back  to hide the active call. To reopen it, touch  **Phone**.

Make & answer calls

To make a call, touch  **Phone**, enter a number, then touch **Voice call**.

To enter the international dialing code, touch and hold #.

To answer a call, touch **Answer**.

If your phone is locked, drag up to answer.

Note: When you hold your phone to your ear, the display goes dark to avoid accidental touches. When you move your phone away from your ear, the display lights up again.

End calls

To end a call, touch **End**. Touch **Decline** to send an incoming call to voicemail.

Tip: If your phone is locked, drag down to hang up.




Video calls

Make a call and see each other while you talk, you'll both need a 3G video phone. If your phone is roaming on a non-3G network, video calls will not work.

To make a video call, touch  **Phone**, enter a number, then touch **Video call**. To end a video call, touch **End**.

Speed dial

Find it: Home  >  **Settings** > **Call settings** > **Speed dial**

- To add or edit entries, touch a number, then press Menu  > **Save**.
- To clear entries, touch a number, then press Menu  > **Discard**.
- To call, touch  **Phone**, then touch a number.

Go handsfree

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

To use the speakerphone during a call, touch **Speaker**:

Mute, hold & record

During a call:



- To mute the current call, touch **Mute**.
- To put a call on hold, touch **Hold**.
- To record the current call, touch **Record**.

Enter numbers during a call

To enter numbers during a call, touch **Keypad** and then touch the number.

Recent calls

Find it: Home  >  **Phone** > **Call log**

- To call a number, touch it.
- To send a text message or contact, make voice or video call, or other options, touch and hold an entry.
- To filter the list, press Menu  > **Category**.
- To clear the list, press Menu  > **Delete**.

Conference calls

To start a conference call, call the first number. After they answer, touch **Hold**, then **New call** and call the next number. When the next number answers, touch **Merge**.

Your phone number

Find it: Home  >  **Settings** > **Call settings** > **My caller number**



Your caller ID

To hide your number from the people you call, press Home  >  **Settings** > **Call settings** > **Other basic settings** > **Caller number**.

Emergency calls

Note: Your service provider programs one or more emergency phone numbers (such as 911 or 112) that

you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press Home  >  **Phone** (if your phone is locked, touch **Emergency**).
- 2 Enter the emergency number.
- 3 Touch **Call** to call the emergency number.

Note: Your mobile device can use GPS and AGPS signals to help emergency services find you. See “GPS & AGPS” in your legal and safety information.

Call forwarding & waiting

You can forward calls all the time, or only when your phone is busy, unanswered, or unreachable (not on the network):

Find it: Home  >  **Settings** > **Call settings** > **Voice call forwarding**

When you're on a call and a second call comes in, **Call waiting** lets you answer it by touching **Answer**. You can turn off **Call waiting**, to send second calls straight to your voicemail:

Find it: Home  >  **Settings** > **Call settings** > **Other basic settings** > **Call waiting**

Restrict outgoing calls

To restrict your phone so that it can only dial a few numbers:

Find it: Home  >  **Settings** > **Call settings** > **Fixed dialing number**

- To turn fixed dialing on, touch **FDN is disabled**.
- To add or delete the allowed numbers, touch **Manage FDN list**.

Cool down

 
In very limited circumstances, such as where your phone has been exposed to extreme heat, “Cool Down” message screens will appear. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in “Cool Down” mode, only emergency calls can be made.

Contacts

contacts like you've never had before

Quick start: Contacts

Find it: Home  >  **Contacts**

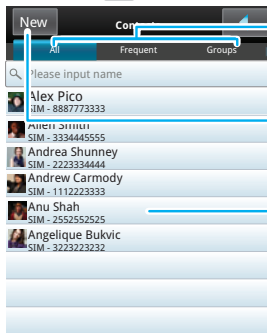

Group


Touch to choose which group to show.

Create Contacts



Touch **New**.

Contacts List

Touch to view.
Touch & hold to call or delete.

Tip: To search the list, touch  to open a display keypad, then type a name. When you flick or drag this list, a scroll bar appears on the right. Drag the scroll bar to move the list faster.


Import contacts from your SIM

If you need to import the contacts from your SIM card, touch  **Contacts**, then press Menu  > **Copy to phone**.

Create contacts

Find it: Home  >  **Contacts** > **New**

Touch a field to type name and details.

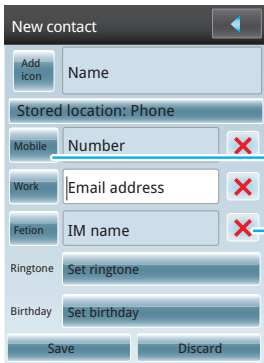

Touch **Mobile** to choose a different type for this entry.

Touch **x** to remove this entry.

When you're finished, touch **Save**.

Where are contacts saved? You can choose where to save new contacts: **Stored location:Phone** or **Stored location:SIM card**.

Call, text, or email contacts


Find it: Home  >  **Contacts**

For **Voice call**, **Video call**, **Send msg**, **Send contact**, or other options, touch and hold the contact.

View & use contacts

Find it: Home  >  **Contacts**

- To filter the contacts by group, touch the filter name at the top.
- To find a contact, just type the name.

Touch a contact to open their details. Press Menu  to start a call, send a message, and more.


Online contacts

My PIM is a service provided by China Mobile to synchronize your contacts, calendar, and tasks.

Find it: Home  >  **My PIM**

Edit or delete contacts

Find it: Home  >  **Contacts**

Touch the contact, then touch Menu  > **Edit** or **Delete**. You can set a ringer, address, and other details.



Where are contacts edited or deleted? Your phone edits the contacts in its memory. Your changes won't affect your SIM card.

Synchronize contacts

When you change one of your **Contacts**, you can synchronize your contacts, see "Synchronize with Backup" on page 75.

Groups

You can put your **Contacts** into groups that you create (like "friends," "family," or "work"). Then, you can find contacts faster by showing one group at a time.

To create a group in your **Contacts**, touch **Groups** > **New**. Enter a group name, then press Menu  > **Save**. To add members, touch a group name, then press Menu  > **Add**.

 
To show only one group in your **Contacts**, touch **Groups** at the top of your screen and choose the group name.

Messaging

sometimes it's best 2 text, or IM, or email . . .

Quick start: Messaging

Find it: Home  >  **Messaging** > **Inbox**

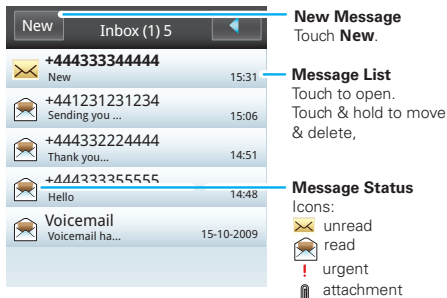





Tip: To switch between folder and message view press Menu  > **Folder view** or **Message view**. To see more messages, flick or drag up.

Read & reply to messages

Every text and email is automatically delivered to you, ready for your immediate reply. The best part is you


don't have to dig through any apps, screens or menus—every message streams right to the phone, viewable exactly the way you want.

Find it: Home  >  **Messaging** > **Inbox**


- To open a message, touch it.
- To respond to a message, just open it and press Menu  > **Reply**. Type your response and touch **Send**.
- To open options, press Menu .
- For email, touch  **Messaging** > Menu  > **Enter mail**.

Create messages

Find it: Home  >  **Messaging** > **New**

Choose a message type, then enter the recipient and message. In text messages and emails, press Menu  for options, like **Add subject**, **Add page**, or **Discard**.

Send & receive attachments



To send a file in a message, open a new message and touch .

When you receive a message with an attachment, open the message and touch the file name to download it. Then, touch the name again to open it. Some file formats can be converted to HTML for faster

viewing, and your phone will show a button that says **Get HTML version**.

Tip: To send and receive large attachments faster, use a Wi-Fi connection, in “Wi-Fi™” on page 34.

Set up messaging

To add email accounts, press Home  >  **Mail** > **Others**.







Email is for personal email accounts. For account details, contact the account provider.

Note: While you are using a Wi-Fi network, you cannot access **Yahoo Mail** accounts. You can still use your browser to see these accounts at mail.yahoo.com.

To change your settings, press Home  >  **Messaging** > Menu  > **Enter mail** > **Others**.






Instant messages

To send and receive instant messages, you can use **Fetion** or your browser.

- To use the instant messaging app, press Home  >  **Fetion**.
- To use your browser, press Home  >  **Browser** > Menu  >  **Settings**, then enter your provider's Web site and touch **Go**. Once you're there, follow the link to sign in.

Note: Your IM options will depend on your IM provider. To browse instant messaging apps, go to www.android.com/market.

Voice mail

When you have a new voicemail,  shows at the top of your screen. To hear the voicemail, press Home  >  **Phone**, then touch and hold your voicemail number. To set your voicemail number, in the home screen press Home  >  **Settings** > **Call settings** > **Voice mail**.













Text entry










think keyboard, now think smaller

Typing tips

To use the full keypad, slide open your phone (there's a keypad diagram within "Your phone" on page 2):


To use the full keypad, slide open your phone:


To...	
To change text input mode	Press Text input 
Enter symbols chosen from a list	Press Symbols 
Enter alternate characters in the corners of keys	Press Alternate 
Enter several alternate characters, until you press Alternate  again	Press Alternate  twice
Enter one capital letter	Press Shift 
Enter only capital letters, until you press Shift  again	Press Shift  twice
Select text (Scroll  , or skip pages (Scroll  up/down)	Press Shift  + Scroll 

To...	
Cut selected text	Press Menu  > X
Copy selected text	Press Menu  > C
Paste cut or copied text	Press Menu  > V
Delete a character (hold to delete more)	Press Delete 
Delete the current line	Press Alternate  + Delete 
Jump to the beginning/end of a line	Press Alternate  + Scroll 
Start a new line (email or social networking) or send the message (text messages)	Press Return 

To change your text entry settings, from the home screen, press Menu  > **Settings** > **Language and input**.

Touchscreen keypad

 To open the keypad, touch a text field. To close the keypad, press Back .

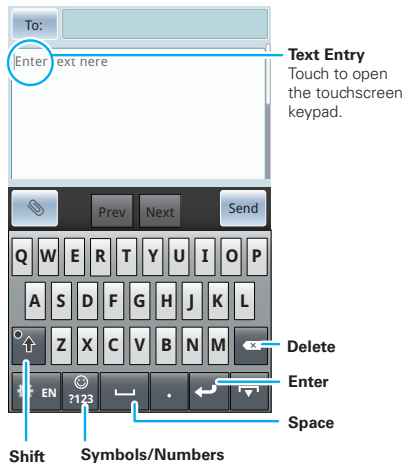

Text entry settings

When you use the touchscreen keypad, your phone suggests words from your dictionary and chosen language. Your phone also automatically enters apostrophes in some words, like “dont.”










Find it: Menu  > **Settings** > **Language and input**



To change the language and the style for your touchscreen keypad, tap **Select language**.

Tips & tricks

a few handy hints




Shortcuts





To...	
Return to the home screen	Press Home  .
See recently dialed numbers	Press Home  >  Phone > Call log .
Search	Press Home  > Search .
Turn airplane mode on	Press and hold Power  > Airplane mode .
Sleep/wake your phone	To sleep, press Power  . To wake, press Power  , then drag the moving circle to the bottom left corner of the screen.
Turn ringer on/off	Press volume keys up/down.
Turn AGPS on/off	Press Home  >  Settings > Location > Assisted GPS .

To...	
Turn GPS on/off	Press Home  >  Settings > Location > Enable GPS satellite ites.
Delete an app or shortcut	Touch and hold the app or shortcut until you feel a vibration, then drag it to the trash can.

Battery tips

Your phone is like a small computer, giving you a lot of information and apps, at 3G speed, with a touch display! Depending on what you use, that can take a lot of power. So, if you want to save battery life between charges, you could reduce:

- recording or watching videos, listening to music, or taking pictures.
- WiFi™, and Bluetooth™ use: Press Home  >  **Settings**, then touch **Bluetooth** or **Wireless Lan Settings** > **WLAN** to turn them off or on.
- network searching: If you are out of coverage, to stop your phone from looking for networks, press and hold Power  to open the Power key menu, then touch **Airplane mode**.

- display brightness: Home  >  **Settings** > **Display settings** > **Brightness** > *(dimmer setting)*.
- display timeout delay: Home  >  **Settings** > **Display settings** > **Screen timeout** > *(shorter setting)*.

Personalize

add your personal touch

Add shortcuts

- 1 Find an empty spot on your home screen where you want to add a shortcut. You can flick left or right to see other panels on your home screen.
- 2 Touch and hold the empty spot until you see a menu.
- 3 Touch **Shortcuts**, **Folders**, or **Wallpapers**.
- 4 From the list, touch the shortcut you want.


Add widgets

- 1 Find an empty spot on your home screen where you want to add a widget. You can flick left or right to see other panels on your home screen.
- 2 Touch and hold the empty spot until you see the a menu.
- 3 Touch **Widgets**.
- 4 From the list, touch the widget you want.



Profiles

For incoming calls and other events, use profiles to set ringstyles and volume settings.

Find it: Home  >  **Settings** > **Profiles**

You can select from the profiles listed profiles. To edit a profile just touch it. To create a new profile, press Menu  > **New**.

Sounds

To choose your ringtone and volume press Home  >  **Settings** > **Sound settings** > **Ringtone** or **Volume**.

Display settings

To set your display brightness and screen timeout press Home  >  **Settings** > **Display settings** > **Brightness** or **Screen timeout**.

Date & time

Set date, time, time zone, and formats:

Find it: Home  >  **Settings** > **Date & Time settings**

Language & region

Set your menu language and region:

Find it: Home  >  **Settings** > **Language and input** > **Select Language**


Photos & videos

see it, capture it, share it!

Photos

Take & share photos


Take that family photo, and send it to family and friends.

Find it: Press Camera 




Touch screen to show/hide options. Touch to change options.

Tip: Press the volume keys to zoom in and out.

To take the photo, press Camera 

When you see “Touch image for more options” touch the screen, then touch **Share** or **Delete**.

From the viewfinder screen, press Menu  > **Gallery**, then touch a photo:





- To **set** the photo as a wallpaper, press Menu  > **Wallpaper**.
- To **send** the photo in a message, press Menu  > **Share**. For more info on sharing your photos, see “Share your photo gallery” on page 22.
- To **delete** the photo and return to the previous photo, press Menu  > **Delete**.
- To **show** photo details, press Menu  > **Properties**.


Photo options

In the viewfinder, touch the screen to see options:

options	
Scenes	Set to Auto , Portrait , Landscape , or Night Portrait .
Effects	Set to Normal , GrayScale , Sepia , or Negative .
Flash	Turn flash on or off.
Mode	Set to Camera , Camcorder , or Auto Timer .

View your photos

 Find it: Home  >  **Pictures**

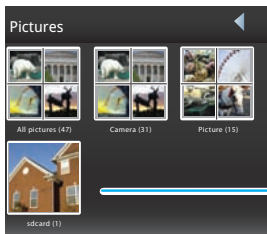

Categories

Touch a category to open.


Play a slideshow

Press Home  >  **Pictures**, touch a category. Press Menu  > **Slideshow** to start a slideshow. To stop the slideshow, touch the display. To return to the pictures, press Back .

Share your photo gallery


Find it: Home  >  **Pictures**

To send your photo in a message:

- 1 Touch a category, then touch a photo. Press Menu  > **Share**.
- 2 Choose how you want to share—**Mail**, **Messaging** or **Bluetooth**.

Manage your photos

Find it: Home  >  **Pictures** > *category*


Touch a photo, then press Menu 


- To delete the photo, touch **Delete**.
- To set the photo as wallpaper, touch **Wallpaper**.
- To view details, touch **Properties**.
- To set your photo order list, touch **Settings** > **Sort order**.

Tip: To copy photos from your phone to a computer, go to “USB drag & drop” on page 35.

Edit your photos

Find it: Home  >  **Pictures** > *category* > *photo*

To crop a photo, press Menu  > **Crop**, stretch and drag the crop square to the size you want, then touch the crop save icon.

To rotate a photo, press Menu  > **Rotate**.

Videos



Record & share videos

Find it: Home  >  **Camcorder**





Touch screen to show/hide options.

Touch to change options.

Tip: To send your video in a message, set the video quality to **Small (QVGA)**: Press Menu  >  **Settings** > **Video Resolution**.

To record a video, press Camera . To stop the video recording, press Camera  again.

When you see “Touch video for more options” touch the screen, then touch  to play, **Share**, or **Delete**.

From the viewfinder screen, press Menu  > **Gallery** to see a thumbnail of your videos.

 
To **play** the video, touch the thumbnail.

To **delete** the video, press Menu  > **Delete**.

Play your videos

Find it: Home  >  **Video** > *video*


Progress Bar

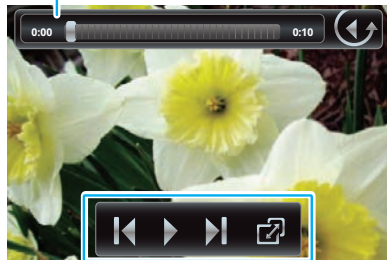


Video Controls

Manage your videos

Find it: Home  >  **Video**

To delete a video, press Menu  > **Delete**.


To set your video order by name, press Menu  > **Sort by name**.

Business tools

make work easier

Keep up to date with all your work, with access to **Mobile Reader, Notes, ToDo List, Quickoffice**, and more.

Select apps



From the home screen touch **Business tools** , then touch the app you want to use.

 
Music

when music is what you need...

Quick start: Mobile Music


Touch, touch, play—instant music. Just open your music library, then select what you want to play.

Find it: Home  >  **Mobile Music**

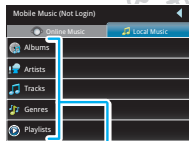


Categories

 Touch a category, then touch a song or playlist.

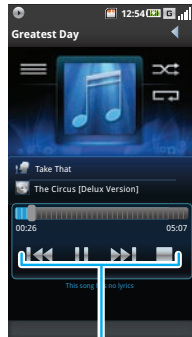

Music Controls

Tip: When a song is playing, you can add it to a playlist or set as your ringtone. Press Menu  > **Add to** or **Set ringtone**.

Set up music

What music transfer tools do I need?

To put music on your computer and then load it on your phone, you need:

- A Microsoft™ Windows™ PC.
- A USB data cable.

Do I need a memory card?

Your music can be stored on phone's internal memory (122 MB) or your memory card. Your phone supports removable microSD memory cards up to 16 GB capacity. To make sure your memory card is installed, go to "Assemble & charge" on page 3.

Tip: To see the available memory on your phone and memory card, press Home  >  **Settings** >

Storage information.

What music file formats can I play?

Your phone can play many types of files: MP3, M4A, AAC, ACC+, MIDI, WAV, and OGG Vorbis.

Note: Your phone does not support any DRM protected files.

What headphones can I use?


You can go wireless with Bluetooth™ stereo headphones or speakers (see "Bluetooth™ wireless" on page 32).

Get music

Note: Copyright—do you have the right? Always follow the rules. See "Content Copyright" in your legal and safety information.

Transfer using USB

Transfer music files from a computer to your memory card.

- 1 With a memory card inserted, and your phone showing the home screen, connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer. Your phone should show  in the status bar.

Note: Your phone supports Microsoft™ Windows™ XP, and Windows Vista™. Other operating systems may not be compatible.

- 2 Your phone shows a USB connection dialog. Touch **UMS mode**. You can't use the files on your memory card while it is connected.

- Find “Removable Device” (your memory card) in the “My Computer” window.

Note: Your phone’s internal memory is also shown as a “Removable Device”, so highlight and select “Properties” to check.

- Drag and drop your music to a folder on your memory card.

Tip: To help manage your music, create a “Music” folder on your memory card.

 
- When you’re done, use the “Safely Remove Hardware” feature to finish.

Play music

Music library

Open your music library, then select what you want to play.

Find it: Home  >  **Mobile Music**

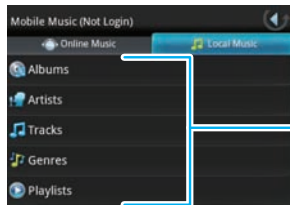


Categories

Touch to list songs or playlists.

Your music is stored by artists, albums, songs, and playlists. Touch a category, then touch the song or playlist you want to play.

Music player

 Just touch a song or playlist to get going.

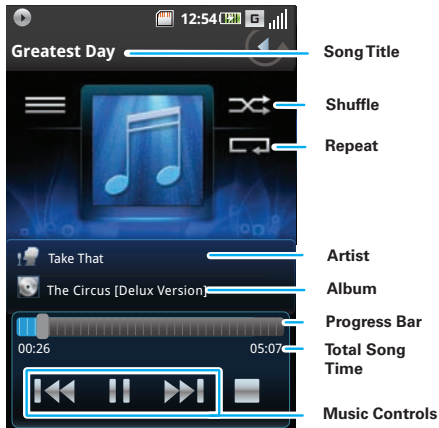

Music player controls

controls	
play/pause/stop	Touch ► / / ■.
previous/next	Touch ◀◀ / ▶▶.

controls

fast forward/rewind	Touch and hold ◀◀ / ▶▶.
shuffle	Touch ⌘.
repeat	Touch ↻.
volume	Press the side volume keys.
add to playlist	Press Menu ☰ > Add to .
use as ringtone	Press Menu ☰ > Set ringtone .

Hide, wake, turn off


Press Home (🏠) to use another app. Your music continues to play.


When you see (▶) in the status bar, a song is playing, flick down to see details. Touch the song to return to the music controls.

To turn off your music, touch (■).

Playlists

To add a song from the music library to a playlist, touch and hold the song then touch **Add to playlist**. Choose an existing playlist. From the music library you can

create new playlists, touch **Playlists** > Menu  > **Create**.

To add a song to the playlist you're playing, press Menu  > **Add to** in the music player.

To edit, delete and rename playlists, touch and hold the playlist, in the music library.

Quick start: Radio

Listen to news and music anywhere, for free.

Find it: Home  > **FM Radio**



Change Frequency


Touch to scan up/down or to change by 0.1/-0.1.


Pause

Channel Presets

Touch to go to channel.

To tune stations, press Menu  > **More** > **Scan**.


To change volume, press the side volume keys. To use the loudspeaker, press Menu  > **More** > **By Loudspeaker**.

To turn off the radio, press Menu  > **Exit FM**.

Use radio presets

To **store** the current station as a preset, press Menu  > **Save Channel**.

To **go to** a preset station, touch the channel number.

To **manage** presets, touch the channel number, then press Menu  > **Edit Channel**.

To **clear** presets, touch the channel number, then press Menu  > **Clear Chan....**

 
Mobile TV

watch TV anywhere

Quick start: Mobile TV

See your TV shows when and where you want, right on your phone.

Find it: Home  >  **Mobile TV**

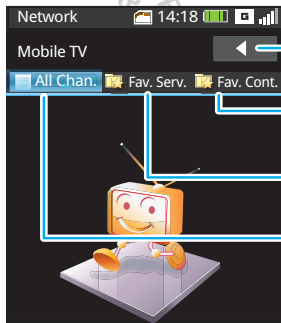


Exit
Close Mobile TV.

Favorite Controls
Show favorite controls.

Favorite Services
Show favorite services.

All Channels
Show all channels.

Watch programs

To manually scan channels, press Menu  > **Rescan**.

To change volume, press the side volume keys.

 
To close, press Menu  > **Exit**.

Web

surf the web with your phone

Quick start: Browser

Find it: Home  >  **Browser**

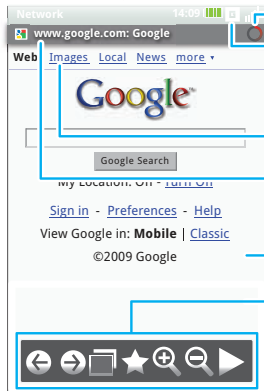

The page is loading.

Connection
Mobile Network: **G, E, 3G**
Wi-Fi: 

Links
Touch to open.

Web Address
To go to an address, touch **Go**.

Drag or flick to scroll.

Touch the screen to open a menu where you can navigate, zoom, and more.


Note: If you can't connect, contact your service provider.

Connect

Your phone uses the mobile phone network (over the air) to automatically connect to the Web.

Note: This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.

 
To use a wireless network, press Home  >

 **Settings** > **Wireless Lan Settings**. Touch **WLAN** to turn it on and to search for nearby wireless networks. Touch a network to connect. There's more in "Wi-Fi™" on page 34.

Web touch tips

Zoom & navigate

In Web pages, when you scroll (drag or flick), icons appear at the bottom of your screen.

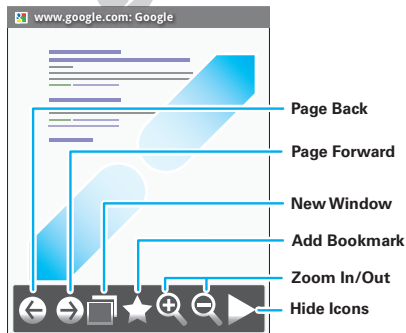


Select links


When you touch a link, your phone outlines it and then opens it.

source.android.com/options

[Android Community - Tracking the Android Platform](#)

Browser options






Press Menu  to see browser options:

options	
Refresh 	Reloads the current page.
Bookmarks	Manage your bookmarks.
History	View your history.
Copy text	Lets you copy text to clipboard.
Downloads	View your download history.
Settings	Shows more browser options, such as Set text size .
More	Shows More actions .
Exit	Close your browser.

Download apps

Warning: Apps downloaded from the Web can be from unknown sources. To protect your phone and personal data, only download apps from sources you trust.

Note: Downloaded apps are stored in your phone memory.

- 1 If you want to download apps from any Web page, press Home  >  **Browser** >  > **Settings** > **Show security warnings**.
- 2 To launch the browser, press Home  >  **Browser**.
- 3 Find the app you want to download and touch the download link.

Manage your downloads

To view files or apps you have downloaded, press Home  >  **Browser** >  > **Downloads**.

To clear your download history, touch **Clear list**. To cancel, touch **Cancel all downloads**.

Apps for all

got the app you want

China mobile

Get all the fun games and cool apps you want from China Mobile or the Web (see “Download apps” on page 31). China mobile provides you with access to **Mobile Market, Fetion, 139Mail, Monternet, DCD, Mobile Stock, Navigation**, and much more.

Select apps

Scroll to and touch the app you want to use.

Manage apps

Find it: Home  >  **Settings** > **Storage information** > **Manage storage** > **Other applications**

Touch an app in the list, then touch **Uninstall** (for apps you downloaded), **Clear data**, or other options.

 
Bluetooth™ wireless

lose the wires and go wireless

Quick start: Bluetooth wireless

Find it: Home  >  **Settings** > **Bluetooth settings**

Note: To extend battery life, turn Bluetooth power off when not in use.

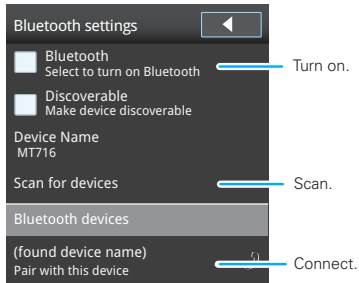

Turn Bluetooth power on or off

Find it: Home  >  **Settings** > **Bluetooth**

Connect new devices


Note: This feature requires an optional accessory.

To connect with a new device, you need to pair with it. You only need to do this once for each device—to connect again, see “Reconnect devices” on page 33.


- 1 Make sure the device you are pairing with is in discoverable mode.

Note: Refer to the guide that came with the device for details.

- 2 Press Home  >  **Settings** > **Bluetooth settings**.

- 3 Touch **Bluetooth** to turn on, and then touch **Scan for devices**. If Bluetooth is already on, press Menu  **Scan for devices**.

- 4 Touch a device to connect.

- 5 If necessary, touch **OK**, or enter the device passkey (like **0000**) to connect to the device. When the device is connected, the Bluetooth indicator  appears in the status bar.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Reconnect devices

To automatically reconnect your phone with a paired device, simply turn on the device.

To manually reconnect your phone with a paired device, touch the device name in the **Bluetooth devices** list.

Disconnect devices

To automatically disconnect your phone from a paired device, simply turn off the device.

To manually disconnect your phone from a paired device, touch the device name in the devices list, then touch **OK** to disconnect.

Edit properties

Press Home  >  **Settings** > **Bluetooth settings** > **Device name**. Enter a name and touch **OK**.

Wi-Fi™

 
home, office, or hotspot

Quick start: Wi-Fi

Find it: Home  >  **Settings** > **Wireless Lan Settings** > **WLAN settings**

Note: To extend battery life, turn off Wi-Fi power when not in use.

Use a wireless network for fast Internet access and to download data.

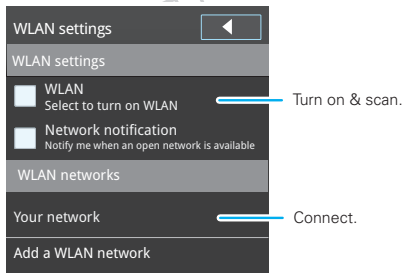

Turn Wi-Fi on or off


Find it: Home  >  **Settings** > **Wireless Lan Settings** > **WLAN**

Note: Your phone's Wi-Fi features and power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Wi-Fi features in France unless you are indoors.

Wi-Fi search & connect


To find networks in your range:

Find it: Home  >  **Settings** > **Wireless Lan Settings** > **WLAN settings**

1 Touch **WLAN** to turn on and scan. If Wi-Fi is already on, press Menu  > **Scan**. Your phone lists the networks it finds within range.

Tip: To see your phone's Wi-Fi details, press Menu  > **Advanced**.

2 Touch a network to connect.

3 If necessary, enter **Network SSID**, **Security**, and **Wireless password**, and touch **Connect**. When your phone is connected to the network, the wireless indicator  appears in the status bar.

Tip: When you are in range and Wi-Fi is on, you will automatically reconnect to available networks you've connected to before.

USB & memory card

connect your phone and computer, then drag & drop

 
USB drag & drop

Note: This feature requires an optional accessory.

You can transfer your pictures, videos, music, ringtones, and more, from your computer to your phone's memory card.

Note: Your phone supports Microsoft™ Windows™ XP, and Windows Vista™. Other operating systems may not be compatible.

- 1 With a memory card inserted, and your phone showing the home screen, connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer. Your phone should show  in the status bar.



- Note:** Make sure to connect the phone to a high power USB port. Typically, these are located directly on your computer.
- 2 Your phone shows a USB connection dialog. Touch **UMS mode**. You can't use the files on your memory card while it is connected.

- 3 On your computer, use the "My Computer" window to find "Removable Disk".

Note: Your phone's internal memory is also shown as a "Removable Device", so highlight and select "Properties" to check.



- 4 Click on the "Removable Disk" icon to access the memory card.
- 5 Drag and drop your pictures, videos, music, ringtones, and more, to your phone folder. To help manage your files, you can create more folders in your phone folder.
- 6 When you're done, use the "Safely Remove Hardware" feature to finish.

Memory card



To make sure your memory card is installed, go to "Assemble & charge" on page 3.

Manage files

Find it: Home  >  **File Manager**

Touch a file or folder to open. Press Menu  to create a **New folder, Sort by, Copy, Cut, Delete**, or show **Properties** and more. Press Menu  > **More** to **Bluetooth transfer**, and more.

Remove or format your memory card

Before you remove or format your memory card, you need to unmount it. Press Home  >  **Settings** >

Storage information >

Unmount/Reject storage card.

To format your memory card, touch **Format SD card.**

Warning: All data on your memory card will be deleted.

 
Tools

stay on top of things

My Favorites

Want to quickly find that family photo or play your favorite song? All your stuff in one place—just touch to open what you want.

Find it: Home  >  **My Favorites**

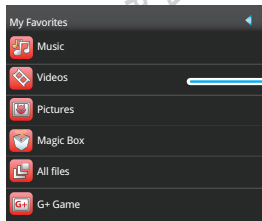

Categories

Touch a category, then touch a playlist, song, video, photo, or file.

 
Alarm

Find it: Home  >  **Alarm Clock**

To turn on an alarm, touch **OFF**.

When an alarm sounds, touch **Dismiss** to turn it off or **Snooze** to delay.

To add an alarm, touch **New**, then enter alarm details.

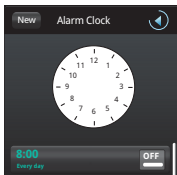

Calculator

Find it: Home  >  **Calculator**

Sound recorder

Find it: Home  >  **Recorder**

To record, touch . To stop the recording, touch , then touch **Save** or **Discard**.

To play the recording, touch .

Calendar


Find it: Home  >  **Calendar**

Your calendar events can be viewed in different ways:

Press Menu  > **Switch View**.

When you highlight an event in the day and week views, more details appear.


Add calendar events

 
From any calendar view, touch **New** and enter event details, then press Menu  > **Save**.

Manage calendar events

To edit an event, touch and hold it. Edit event details, then when you're done, touch **Save**.

To delete an event, touch and hold it, then touch **Delete**.


To go to today press Menu  > **Today**.

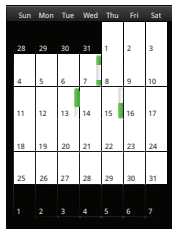

Management



stay in control

Airplane mode

Use airplane mode to turn off all your wireless connections—useful when flying. Press and hold Power  > **Airplane mode**.



Note: When you select airplane mode, all wireless services are disabled. You can then turn Wi-Fi and/or Bluetooth back on, if permitted by your airline. Other wireless voice and data services (such as calls and text messages) remain off in airplane mode. Emergency calls to your region's emergency number (e.g., 911) can still be made.

Update my phone

To keep your phone current, software updates may be available. Press Home  >  **DM Service** > **Software Update** to see if your phone is up to date.

Network

You should not need to change any network settings. Contact your service provider for help.

Press Home  >  **Settings** > **Mobile networks** to show options for roaming networks, network selection, operator selection, and access point names.

Note: To make any call, including an emergency call, the network setting for your phone must be the same as the local wireless network. For example, in Europe, set the phone's network to GSM.

Synchronize with Backup


Find it: Home  >  **Backup**

The Backup app on your phone lets you copy your information (messages, settings, email, notes, and contacts) on to your memory card. It's easy to backup the information you want to keep up-to-date.

- 1 Touch what you want to backup, such as, **Contacts in phone, SMS in phone, MMS in phone, Settings**, and more.
- 2 Press Menu  > **To Storage Card**.
- 3 Enter your backup name.

Restore your data from your memory card.

Warning: The data on your phone will be overwritten.

 
- 1 Touch **Restore** > *backup name*.
- 2 Touch what you want to restore, such as, **Contacts in phone, SMS in phone, MMS in phone, Settings**, and more.
- 3 Press Menu  > **Restore**.

Security



help keep your phone safe

Quick start: Security

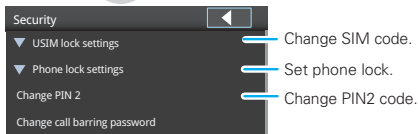Find it: Home  >  **Settings** > **Security**





Screen timeout

Set your phone to display a timeout screen, and prevent accidental screen touches or key presses. Press Home  >  **Settings** > **Display settings** > **Screen timeout**. You can also set a phone lock to prevent others from using your phone.

To set your phone lock, press Home  >  **Settings** > **Security** > **Phone lock settings** > **Phone lock**.

Note: You can make emergency calls on a locked phone ("Emergency calls" on page 11). A locked phone still rings, **but you need to unlock it to answer**.



Passcode lock



To set the passcode, press Home  >  **Settings** > **Security** > **Phone lock settings** > **Phone lock**.

Enter a passcode, then touch **OK**.




When prompted, enter the passcode to unlock the phone.

Personalize your timeout screen


To change your timeout, press Home  >  **Settings** > **Display settings** > **Screen timeout**. If you don't touch the screen or press any keys for this amount of time, the screen locks automatically. To unlock, see "Lock & unlock" on page 39.

To lock when flip is closed, press Home  >  **Settings** > **Display settings** > **Autolock when flip close**.

Lock & unlock

To lock the screen/phone, press Power  or press Home  >  **Settings** > **Security** > **Phone lock settings** > **Lock now**.

To unlock the phone:

- Switch the phone on to display the passcode screen. Enter your passcode and touch **Unlock**
- Press Menu  to display the passcode screen. Enter your passcode and touch **Unlock**.

Forgot your passcode?

 
If you forget your passcode you will need to reset your phone to its initial factory settings, see “Reset” on page 40.

Lock pattern

To set the lock pattern, press Menu  > **Settings** > **Display settings** > **Set unlock pattern**.

Follow the instructions to draw your lock pattern.

When prompted, draw the pattern to unlock the phone.

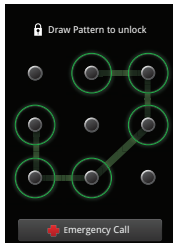

Lock your SIM

Enable SIM PIN

To lock your SIM (the next time you power up the phone you will need to enter your SIM PIN), press Home  > **Settings** > **Security** > **USIM lock settings** > **Lock USIM**. Enter your SIM PIN code.

Caution: If you enter an incorrect PIN code three times, your phone locks your SIM card and asks for your PIN unlock code, see “PUK code” on page 40.

Change SIM PIN


To change your SIM PIN, press Home  > **Settings** > **Security** > **SIM lock settings** > **Change PIN2**.

PUK code

To unlock your SIM PIN, you need to enter your PIN unlock code (PUK code) when prompted.

Note: Your PUK code is provided by your service provider.

Reset

To reset your phone to factory settings, press Home  > **Settings** > **Master clear & reset** > **Master reset**.

Warning: All data on your phone will be reset to factory settings.

To erase all the data on your phone, press Home  > **Settings** > **Master clear & reset** > **Master clear**.

Warning: All data on your phone will be deleted.

Troubleshooting

we're here to help

Crash recovery

In the unlikely event that your phone stops responding to touches and key presses, try a quick reset. Remove the back cover and battery ("Assemble & charge" on page 3), then replace and turn on your phone as usual.

Service & repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).



DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION

Safety, Regulatory & Legal

Battery Use & Safety

Important: Handle and store batteries properly to avoid injury or damage.

Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the mobile device or battery come in contact with water.*** Water can get into the mobile device's circuits, leading to corrosion. If the mobile device and/or battery get wet, have them checked by your service provider or contact Motorola, even if they appear to be working properly.*
- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your mobile device or battery near a heat source.*** Excessive heat can damage the mobile device or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:
- **Don't dry a wet or damp battery with an appliance or heat source,** such as a hair dryer or microwave oven.

DOs

- **Do avoid leaving your mobile device in your car in high temperatures.***
- **Do avoid dropping the battery or mobile device.*** Dropping these items, especially on a hard surface, can potentially cause damage.*
- **Do contact your service provider or Motorola if your mobile device or battery has been damaged from dropping or high temperatures.**

* **Note:** Always make sure that the battery compartment is closed and secure to avoid direct exposure of the battery to any of these conditions.

Important: Use Motorola Original products for quality assurance and safeguards. To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection),

Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola Original" hologram.

Motorola recommends you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and try charging it again;
- If the message remains, contact a Motorola authorized service center.

Important: Motorola's warranty does not cover damage to the mobile device caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

Proper and safe battery disposal and recycling: Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

- www.motorola.com/recycling
- www.rbrc.org/call2recycle/ (in English only)

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.



Warning: Never dispose of batteries in a fire because they may explode.

Battery Charging

Notes for charging your product's battery:

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.

- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

Driving Precautions

Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle. Using a mobile device or accessory for a call or other application while driving may cause distraction. Using a mobile device or accessory may be prohibited or restricted in certain areas, always obey the laws and regulations on the use of these products.

While driving, NEVER:

- Type or read texts.
- Enter or review written data.
- Surf the web.
- Input navigation information.
- Perform any other functions that divert your attention from driving.

While driving, ALWAYS:

- Keep your eyes on the road.
- Use a handsfree device if available or required by law in your area.
- Enter destination information into a navigation device **before** driving.
- Use voice activated features (such as voice dial) and speaking features (such as audible directions), if available.
- Obey all local laws and regulations for the use of mobile devices and accessories in the vehicle.
- End your call or other task if you cannot concentrate on driving.

Remember to follow the “Smart Practices While Driving” in this guide and at www.motorola.com/callsmart (in English only).

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing videos or games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing videos or games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

Caution About High Volume Usage

Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected.



To protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at direct.motorola.com/hellomoto/nss/AcousticSafety.asp (in English only).

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Nov0109]

Small Children

Keep your mobile device and its accessories away from small children.

These products are not toys and may be hazardous to small children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Operational Warnings

Obey all posted signs when using mobile devices in public areas.




Potentially Explosive Atmospheres




Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.

Symbol	Definition
	Do not dispose of your battery or mobile device with your household waste. See "Recycling" for more information.
	For indoor use only.
	Listening at full volume to music or voice through a headset may damage your hearing.

Radio Frequency (RF) Energy

Exposure to RF Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

RF Energy Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions:

- When placing or receiving a phone call, hold your mobile device just like you would a landline phone.
- If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

- Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

Specific Absorption Rate (IEEE)

Your model wireless phone meets the governmental requirements for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed and manufactured to not exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed for the safety of all persons, regardless of age or health, and to account for any variations in measurements. The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate (SAR). The IEEE SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 watts per kilogram (W/kg), averaged over one gram of tissue. Tests for SAR are conducted using procedures accepted by the FCC and by Industry Canada with the mobile device transmitting at its highest certified power level in all tested frequencies. Although the SAR is determined at the highest certified power level, the actual SAR level of the mobile device while operating can be below the maximum value. This is because the mobile device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a mobile device is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) submitted to the FCC and available for review by Industry Canada. The highest SAR value for this mobile device when tested for use at the ear is 0.38 W/kg, and when worn on the body, as described in this guide, is 0.58 W/kg. Body-worn measurements can differ, depending upon available accessories and regulatory requirements. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Additional Information can be found on the Web sites of the World Health Organization (<http://www.who.int/emf>) or Motorola Mobility, Inc. (<http://www.motorola.com/rfhealth>).

Information from the World Health Organization

"Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body."

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

European Union Directives Conformance Statement

CE 0168



[Only Indoor Use Allowed In France for Bluetooth and/or Wi-Fi]

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives



Product
Approval
Number

The above gives an example of a typical Product Approval Number. You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the

Product Approval Number from your product's label in the "Search" bar on the Web site.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

GPS & AGPS

Your mobile device can use *Global Positioning System* (GPS) signals for location-based applications. GPS uses satellites controlled by the U.S. government that are subject to changes implemented in accordance with the Department of

Defense policy and the Federal Radio Navigation Plan. These changes may affect the performance of location technology on your mobile device.

Your mobile device can also use *Assisted Global Positioning System* (AGPS), which obtains information from the cellular network to improve GPS performance. AGPS uses your wireless service provider's network and therefore airtime, data charges, and/or additional charges may apply in accordance with your service plan. Contact your wireless service provider for details.

Your Location

Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile devices which are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.

Emergency Calls

When you make an emergency call, the cellular network may activate the AGPS technology in your mobile device to tell the emergency responders your approximate location.

AGPS has limitations and **might not work in your area**. Therefore:

- Always tell the emergency responder your location to the best of your ability; and
- Remain on the phone for as long as the emergency responder instructs you.

Performance Tips

- Go outside and away from underground locations, covered vehicles, structures with metal or concrete roofs, tall buildings, and foliage. Indoor performance might improve if you move closer to windows, but some window sun shielding films can block satellite signals.
- Move away from radios, entertainment equipment, and other electronic devices.

Navigation

When using navigation features, note that mapping information, directions and other navigational data may contain inaccurate or incomplete data. In some countries, complete information may not be available. Therefore, you should visually confirm that the navigational instructions are consistent with what you see. All drivers should pay attention to road conditions, closures, traffic, and all other factors that may impact driving. Always obey posted road signs.

Smart Practices While Driving

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas—for example, handsfree use only may be required. Go to www.motorola.com/callsmart (in English only) for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial, redial and voice dial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.

- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies (wherever wireless phone service is available).
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number (wherever wireless phone service is available), as you would want others to do for you.
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number (wherever wireless phone service is available).

Privacy & Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device’s keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device’s security, install it as soon as possible.

- **Secure Personal Information**—Your mobile device can store personal information in various locations including your SIM card, memory card, and phone memory. Be sure to remove or clear all personal information before you recycle, return, or give away your device. You can also backup your personal data to transfer to a new device.

Note: For information on how to backup or wipe data from your mobile device, go to www.motorola.com/support

- **Online accounts**—Some mobile devices provide a Motorola online account (such as MOTOLUR). Go to your account for information on how to manage the account, and how to use security features such as remote wipe and device location (where available).
- **Applications**—Install third party applications from trusted sources only. Applications can have access to private information such as call data, location details and network resources.
- **Location-based information**—Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile phones which are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.
- **Other information your device may transmit**—Your device may also transmit testing and other diagnostic (including location-based) information, and other non-personal information to Motorola or other third-party servers. This information is used to help improve products and services offered by Motorola. If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Use & Care

To care for your Motorola mobile device, please observe the following:



liquids

Don't expose your mobile device to water, rain, extreme humidity, sweat, or other liquids. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the mobile device.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



microwaves

Don't try to dry your mobile device in a microwave oven.



dust and dirt

Don't expose your mobile device to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your mobile device, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



shock and vibration

Don't drop your mobile device.



protection

To help protect your mobile device, always make sure that the battery compartment and any connector covers are closed and secure.

Recycling

Mobile Devices & Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste, or in a fire. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at:

www.motorola.com/recycling

Packaging & Product Guides

Product packaging and product guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

Software Copyright Notice

Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Content Copyright

The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended

solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Open Source Software Information

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device, you may send your request in writing to the address below. Please make sure that the request includes the model number and the software version number.

MOTOROLA MOBILITY, INC.

OSS Management
600 North US Hwy 45
Libertyville, IL 60048
USA

The Motorola website opensource.motorola.com also contains information regarding Motorola's use of open source.

Motorola has created the opensource.motorola.com website to serve as a portal for interaction with the software community-at-large.

To view additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, please press Home  >  > **Settings** > **About Phone**

> **Legal information** > **Open source notice**. In addition, this Motorola device may include self-contained applications that present supplemental notices for open source packages used in those applications.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola Mobility, Inc. warrants its mobile telephones ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories"), and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software")

to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories, and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions (Products and Accessories)

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks,

scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions (Software)

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the Internet), is provided "as is" and without warranty.

Who is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software, and applications, please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	All Products, Accessories, and Software: 1-800-331-6456
Canada	All Products: 1-800-461-4575
TTY	1-888-390-6456

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE

THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Copyright & Trademarks

Motorola Mobility, Inc.
Consumer Advocacy Office
600 N US Hwy 45
Libertyville, IL 60048

www.hellomoto.com

1-800-734-5870 (United States - Android products)

1-800-331-6456 (United States - all other products)

1-888-390-6456 (TTY/TDD United States for hearing impaired - all products)

1-800-461-4575 (Canada - all products)

Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply.

Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation. MOTOROLA, the Stylized M Logo, MOTOBLUR and the MOTOBLUR logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. The Bluetooth trademarks are owned by their proprietor and used by Motorola Mobility, Inc. under license. **WiFi** is a Certification Mark of the Wireless Fidelity Alliance, Inc. Google, YouTube, Picasa, Gmail, and the Google logo are trademarks of Google, Inc. Facebook is a registered trademark of Facebook, Inc. Microsoft, Windows, Windows Me, and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries. All other product or service names are the property of their respective owners.

© 2010 Motorola Mobility, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Product ID: Motorola MT716

Manual Number: 68XXXX442-A

www.motorola.com

