



AGES 5 & UP

# FLIP PHONE WALKIE TALKIES™

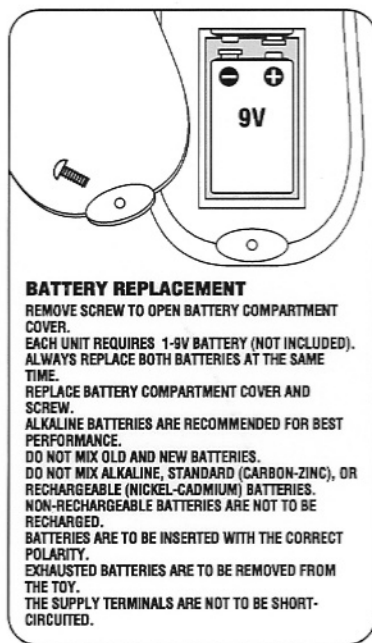

## BATTERY REPLACEMENT

REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER.  
EACH UNIT REQUIRES 1-9V BATTERY (NOT INCLUDED). ALWAYS REPLACE BOTH BATTERIES AT THE SAME TIME.  
REPLACE BATTERY COMPARTMENT COVER AND SCREW.  
ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE.  
DO NOT MIX OLD AND NEW BATTERIES.  
DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.  
NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.  
BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.  
EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.  
THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.

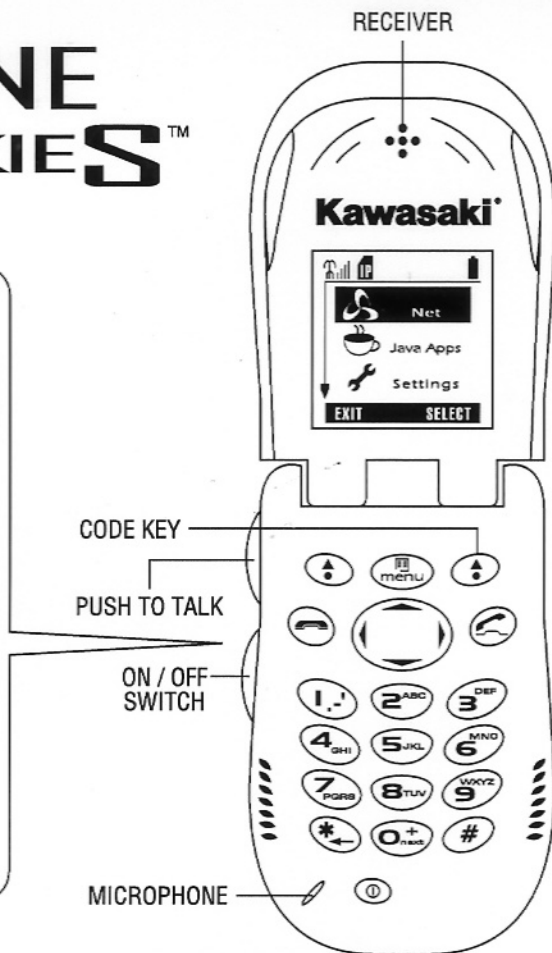

## TO OPERATE

1. Switch the ON/OFF VOLUME control ON by sliding upwards.
2. To transmit, press the 'PUSH TO TALK' button with the microphone about 4" from your mouth. Speak in a normal voice.
3. To transmit a code, press and hold the 'PUSH TO TALK' button and tap the 'CODE KEY' button to transmit the desired code characters.
4. To receive, release the 'PUSH TO TALK' button.
5. After you have finished using the walkie talkie switch the ON/OFF volume control OFF by sliding the control downward.

## CAUTION:

1. If your walkie talkie does not operate properly try a new set of batteries since your batteries may be defective or have low voltage even though they appear to be new.
2. After use always return the ON/OFF control switch to the OFF position.
3. Do not touch antenna with your fingers or hand. It will cause weak transmission.
4. Your walkie talkie set has been fully adjusted prior to shipment from the factory. Do not touch the internal parts other than replacing the battery.
5. Manufacturer recommends alkaline batteries for maximum performance.
6. To prevent damage. Do not expose the set to rain or moisture.
7. Modifications not authorized by the manufacturer may void user authority to operate this device.

\*Modifications not authorized by the manufacturer may void users authority to operate this device\*

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



because kidz like toyz

KIDZ TOYZ, INC. MT. KISCO, N.Y. 10549

# Kawasaki

Kawasaki Motors Corp., U.S.A.

OFFICIAL \* LICENSED \* PRODUCT

87-11504-45628

KAWASAKI® IS A TRADEMARK LICENSED BY  
KAWASAKI MOTORS CORP., U.S.A.,  
WHICH DOES NOT MANUFACTURE OR DISTRIBUTE THIS PRODUCT.  
CONSUMER INQUIRIES SHOULD BE DIRECTED TO  
KIDZ TOYZ, INC., 280 NORTH BEDFORD ROAD,  
SUITE 203, MT. KISCO, NEW YORK 10549 USA

For Product Questions,  
Call 1-877-KIDZTOY (877-543-9869)  
Ask for CUSTOMER SERVICE.  
Only in the U.S. and CANADA

Please visit us on the web at [www.kidztoyz.com](http://www.kidztoyz.com)

MADE IN CHINA  
ITEM NO. 22296