

Display Audio with Smartphone Link

There will be some discrepancy in the contents of this user's manual due to the technical evolution and the software improvement. Please follow the actual function display. This manual is only for users' operating reference.

Contents

Safety Information 4

Precautions	4
For safety	4

Before Using 6

Precautions on using this unit	6
--------------------------------------	---

Basic Operations 7

Operation buttons	7
Power-On operation	8
Regional Setup	8
Adjust the volume	9
Gesture Control Operation	10
Display the Settings menu	11
Power off screen	11
Home screen descriptions	12
All source screen	13
Source control screen descriptions	15
List screen	15

Connection 16

Wired Connection	16
------------------------	----

Bluetooth Control 17

Information for using Bluetooth® devices	17
Register the Bluetooth device	18
Bluetooth setup	18
Playing Bluetooth Audio device	21
Hands-Free Function	23
Phone Setup	27

MM-Link 28

Before start	28
Operation (iPhone)	29
Operation (Android phone)	30

USB 34

Connect to the USB device	34
USB Operation	34
Searching Files Operation	35

iPod / iPhone 37

Setup for iPod / iPhone	37
iPod / iPhone Basic Operation	37
Searching Files Operation	38

Apple CarPlay	39
Setup for Apple CarPlay	39
Starting procedure	39
Setting the driver position	40
Android Auto	41
Setup for Android Auto	41
Starting procedure	41
Setting the driver position	42
Radio	43
Starting procedure	43
Basic operation	43
Auto preset procedure	44
Digital Radio (Only for DAB compatible model)	45
Starting procedure	45
Basic operation	45
Dashboard Camera	46
Starting procedure	46
Basic operation	46
File management	47

Playback	48
Other External Components	50
Using the back camera	50
Settings	51
Display the Settings menu	51
Display Adjust	51
System Settings	51
Audio Settings	53
Graphic Equalizer Settings	53
Fader/ Balance Settings	53
Sound Effect Settings	54
Zone Control Settings	54
Steering Control Switch	55
Appendix	57
Important Notice on Software	62
EULA	63
Troubleshooting	65

Safety Information

Precautions

IMPORTANT

Please read this user's manual carefully before operating this product to ensure proper use.

For safety concerns of using this product, the following symbols are used in this manual to indicate the important information that you need to be aware.



DANGER

The warning against anything which may cause death or serious injury if this is ignored.
In order to reduce the risk of injury, please pay attention to the information.



CAUTION

The warning against anything that may cause accidents, personal injury or damage to the car.



NOTICE

Describe items that you should be aware of when using the product to ensure the safety.

For safety

▲ DANGER

- Driver should not look at the display or operate the system while driving because driver could be distracted or caused accidents. Before looking at the display or operating the system, driver should stop the vehicle in a safe location and use the parking brake.
- Do not pair Bluetooth device while driving. Stop your car at a safe place before attempting to pair.
- Do not attempt to install or remove the unit by yourself. For safety concerns, please contact your dealer for advice on installation or removal of the unit.
- If the unit has any abnormalities, like no power, no sound, strange noise, or odor, turn off the device immediately and consult your dealer or nearest service center.
- Do not put foreign objects into the product. If there are foreign objects in the product, please consult your dealer or the nearest service center.
- Keep the volume in an appropriate level to be aware of road and traffic conditions while driving. This unit is designed for using exclusively in automobiles.

⚠ CAUTION

- Operating the audio system for a long period while the vehicle engine is turned off will drain the battery.
- Do not disassemble, modify or repair the product by yourself. Be sure to consult your dealer or the nearest service center.
- Do not have liquids to get into the product. The liquids will result in electric shocks and damage the product.

📺 About FM radio reception

- When listening to FM broadcasts in a moving vehicle, the reception conditions constantly changes with building, terrain, distance from the transmitter and noise from other vehicles.
- The following phenomena of FM reception are normal and do not indicate a problem with the radio itself.



 
👉 NOTICE

- Fading and drifting: The range of FM is about 40 km (25 miles), except for the high-power stations. If the vehicle moves away from the transmitter, the signal tends to fade out and/or draft. This is common to FM broadcasting and might be accompanied by distortion. Fading and drifting can be minimized by tuning to a stronger signal.
- Static and flutter: When the lines of sight link between the transmitter and vehicle is blocked by large building etc. , the broadcast sound may include static or flutter. You may also experience fluttering while driving along a tree-lined road. The effects of static and fluttering on the sound can be reduced by decreasing treble.
- Multipath: Due to the reflection characteristics of FM signals, direct and reflected signals may reach the antenna simultaneously (this is called multipath) and cancel each other. As the vehicle moves through such a spot, a momentary flutter or loss of reception may occur.
- Station swapping: When two FM stations are located close to each other in the frequency spectrum and the current signal is interrupted by an electronic dead spot caused by static or multipath, the stronger signal may automatically be selected until the original signal returns. Station swapping can also occur as the vehicle moves away from a station and towards another with a stronger signal.
- Buttons and Icons in this device will be described in bold lettering, e.g. **Radio function**, or **System Screen**.

Before Using

Precautions on using this unit

- This precision mechanical device should be handled carefully.
- Please avoid using this device at extremely high or low temperatures, which can cause malfunction or failure. Metal objects and liquids should not be in contact with the device, and hard shocks can damage the device.

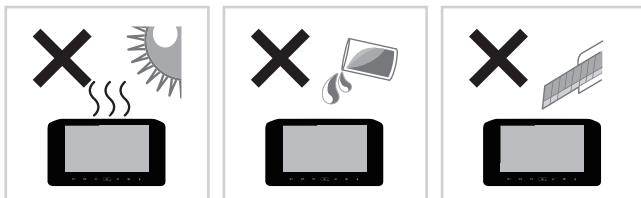

Clean the unit

- Do not use volatile liquid such as alcohol or thinner for cleaning the unit, which may scratch the case or remove the screened print.
- If you use a chemical wiping cloth, follow the instructions carefully.

Clean the display

 
- To clean the display, wipe it with a dry soft cloth, such as silicon cloth.
- Rubbing the display with a rough cloth could scratch the surface.

Protecting the monitor

- To protect the monitor from damage, do not operate the monitor using a ball point pen or similar tool with a sharp tip.
- If you stick a film screen protector on the screen, it may interfere with touch panel operation.

Basic Operations

Operation buttons

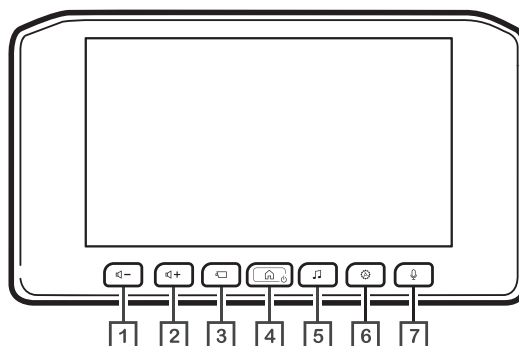

Number	Hard Key	Name	Function
1		Volume down	<ul style="list-style-type: none"> Adjust the volume down.
2		Volume up	<ul style="list-style-type: none"> Adjust the volume up. The volume goes up to 25 when you keep pressing.
3		Camera	<ul style="list-style-type: none"> Short press to enter the camera screen or to return from the camera screen.
4		Home	<ul style="list-style-type: none"> Short press to display Home screen. Long press to enter the power off screen and short press to return from the power off screen.
5		Audio	<ul style="list-style-type: none"> Short press to enter All Source or AV screen. Long press to enter audio setting menu.
6		Settings	<ul style="list-style-type: none"> Short press to enter the Setting mode or to return from the Setting mode. Long press to display sub menu on mirroring screen. *Please connect with MM-Link.
7		Voice	<ul style="list-style-type: none"> Short press to trigger Apple CarPlay Siri or Android Auto voice recognition.

Power-On operation

When turning on the car, the unit will be automatically turned on.

 
- 1 Push Start Button and turn on your car.



- 2 The opening screen on the unit will appear as below picture.




- 3 Read the precaution messages and touch [Agree] or touch [Language] to change the display language.

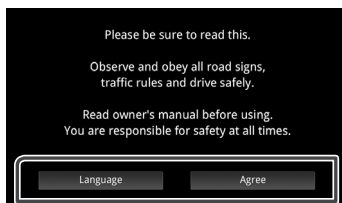

Regional Setup

 - 1 Press to display the setting menu.

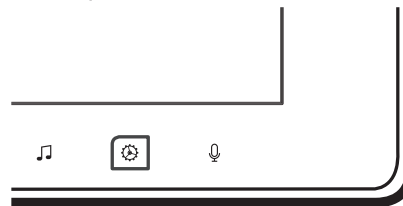

- 2 Touch [System] to display the System menu.



- 3 Touch [Regional] to display the Regional menu.



4 Set each item



■ Language

Select Language.

■ Clock Sync

Clock Sync has GPS Sync and Manual settings.

■ Time Zone

If you select [GPS-Sync] for Clock Sync, select the time zone.

■ Clock Adjust

If you select [Manual] for Clock Sync, adjust the date and time manually.

■ Time Format

Select the time display format. (**12-Hour** or **24-Hour**)

■ Adjust date and time

Select [Manual] for Clock Sync on the Regional menu.

 
- 1 Select [Clock Adjust] on the Regional menu.
- 2 Adjust date and time by touching arrow buttons.



Adjust the volume


Adjust the volume up or down by pressing + and -. Press + to increase the volume, and press - to decrease the volume (0-40).

Holding + to increase the volume continuously to level 25. Volume level 26-40 can be adjusted by pressing one step by time.

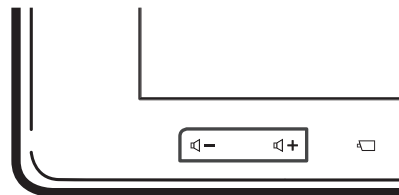


Gesture Control Operation

 
- Touch the appropriate function key on the touch screen.

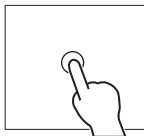

 
- Touch and hold the appropriate function key on the touch screen.

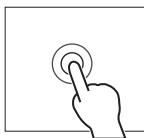

 
- Flick and swipe in the direction of the arrow on the touch screen.

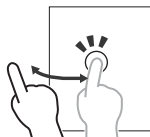

 
- Touch and drag in the direction of the arrow on the touch screen.

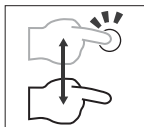

 
- Touch with two fingers in the direction of the arrow on the touch screen to move to the previous or next content in Radio and audio sources.

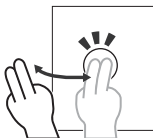

 - Touch with two fingers in the direction of the arrow on the touch screen to adjust volume up and down.

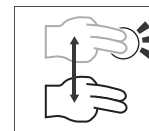

 
- Touch with four fingers in the direction of the arrow on the touch screen to mute or turn off the mute.

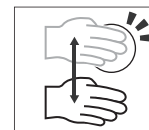

Display the Settings menu

1 Press  button to display Settings menu.

 2 The contents of the menu are as below.

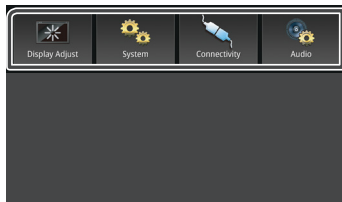

- Display the Display Adjust Settings.



- Display the System Settings.



- Display the Connectivity Settings.



- Display the Audio Settings.

 
NOTE

- On **P. 51**, "Display the Settings menu".

Power off screen

When power off screen, the screen will become black.

1 Long press  button.



2 Back to the original screen.

Short press  button and display the original screen.

Home screen descriptions

Most functions can be performed from the Home screen.

- 1** Press  button.



- 1** Display time and date.
- 2** Display current source information.
Touch to display the control screen of the current source.
- 3** Short-cut source icons.

All source screen

You can display icons of all playback sources.

1 Press  button.

2 Touch .



1 Display available sources.

2 Return to the Home screen.

From the screen, you can select the following sources and functions.



- Play files on USB devices.



- Play an iPod/iPhone.



- Display the Hands Free screen.



- Play a Bluetooth Audio player.



- Turn off the AV source.



- Play the Digital Radio (DAB).*



- Start up Dashboard Camera function if equipped with the dashboard camera device.



- Switch to the Apple CarPlay from the connected iPhone.



- Switch to the Android Auto from the connected Android device.



 
- Switch to the MM-Link from the connected iPhone / Android device.



- Play the Radio.

*Only for DAB compatible model.


■ To select the short-cut source icons on the Home screen.

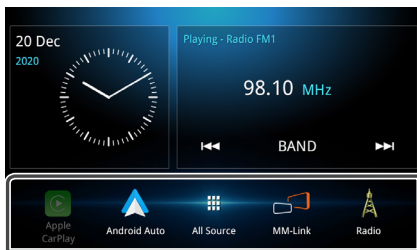

- The 4 icons other than the [All source] icon are located on the Home screen.
- Except for [Apple CarPlay] and [Android Auto] icons, you can change the icons displayed on this area by customizing the All Source selection screen.

■ To turn off the AV source

 - 1 Press button.
- 2 Touch .
- 3 Touch [AV Off].

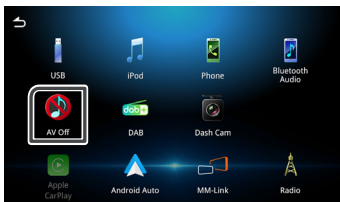

■ Customize the short-cut source icons on the Home screen.

 
You can arrange the short-cut source icons on the Home screen.

- 1 Press button.
- 2 Touch .
- 3 Touch and hold the icon which you prefer and move to the customizing area.



Source control screen descriptions

There are some functions which can be performed from most screens.

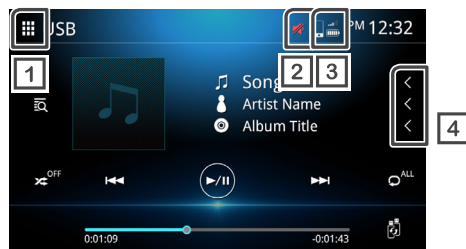

1 All source

Display the All Source screen.

2 Mute

Mute icon is indicated while this unit is muting.

3 Connected Bluetooth phone status

Phone signal and battery status.

4 Text scroll

Scrolls the displayed text.

List screen

There are some common function buttons in the list screens of most sources.



1 Return

Return to the previous screen.

2 etc.

Buttons with different functions are described as below.

- Move to the upper hierarchy.
- Move to the top.
- Play all tracks in a folder containing the current track.
- Alphabet search

3 Music / Video file switching

4 Display the list of selection type

5 Text scroll

Scrolls the displayed text.

 
 
NOTE

- Depending on the current source or mode, some functional buttons may not appear.


Connection

Wired Connection

This unit can be connected to external devices. Open the USB front cover and connect the external device via the following accessory.

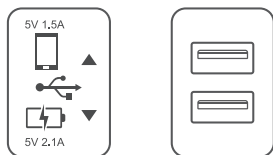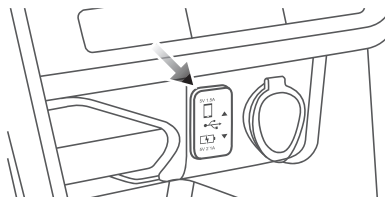


 - Depending on the model of car.
In some car models, a connector is available in the glove box.

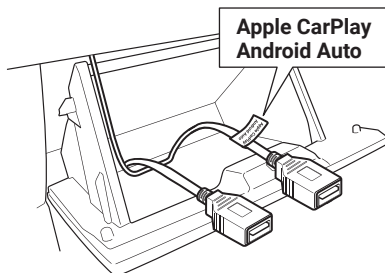


Connecting a USB device (see P. 34)

 Both connectors can be used for USB device.

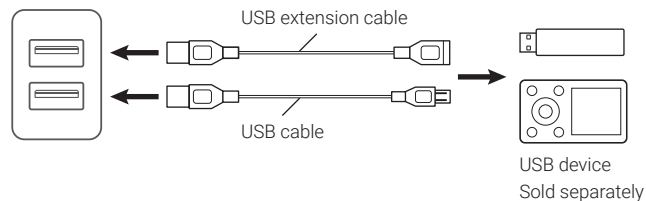


Connecting an iPod/iPhone (see P. 37)

 For iPod/iPhone usage, connect the USB cable to the top connector. The bottom connector is used for charging.

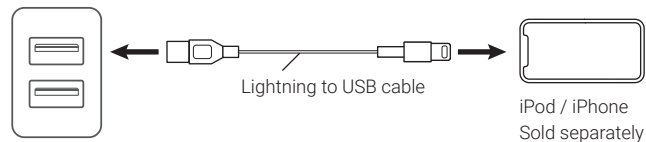

Connecting an Android smartphone (see P. 41)

 For Android smartphone usage, connect the USB cable to the top connector. The bottom connector is used for charging.

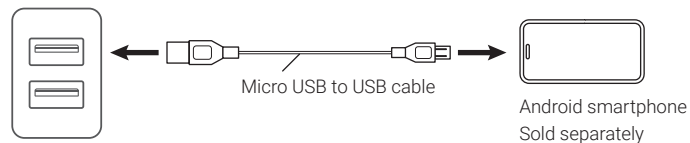

Bluetooth Control

Information for using Bluetooth® devices

Bluetooth is a short-range wireless radio communication technology for mobile devices such as mobile phones, portable PCs, and other devices.

Bluetooth devices can be connected without cables and communication with each other.



⚠ CAUTION

- While driving, do not perform complicated operations such as dialing numbers, using the phone book, etc. When you perform these operations, stop your car in a safe place.

NOTE

- The connection condition may vary depending on different environment.
- Some Bluetooth audio may be limited by the format of mobile device's application.
- This unit may not work for some Bluetooth devices.
- Some Bluetooth devices are disconnected when this unit is turned off.

Supported Bluetooth profiles

This unit conforms to the following Bluetooth specifications.

Version

- Bluetooth Ver. 5.0

Profiles (Mobile phone)

- HFP (V1.6) (Hands Free Profile)
- PBAP (V1.1) (Phonebook Access Profile)

Profiles (Audio player)

- A2DP (V1.2) (Advanced Audio Distribution Profile)
- AVRCP (V1.5) (Audio/Video Remote Control Profile)

Profiles(MM-Link)

- A2DP (V1.2) (Advanced Audio Distribution Profile)
- AVRCP (V1.5) (Audio/Video Remote Control Profile)
- HID(V1.0)(Human Interface Device)

Register the Bluetooth device

Before using the Bluetooth function, please register the Bluetooth audio player or mobile phone in the unit.

You can register up to 10 Bluetooth devices.

NOTE

- Up to 10 Bluetooth devices can be registered. When the 11th Bluetooth device had been registered, the Bluetooth device connected on the earliest date will be removed automatically.
- The devices that can be used simultaneously are
 - 2 Hands-free devices.
 - 5 Bluetooth Audio devices / 4 Bluetooth Audio devices and 1 MM-Link device.

1 Search for the name of unit (MITSUBISHI MOTORS DA001) from your mobile device.


2 Confirm the request on both unit and mobile device.

Please check the list items and connect your Bluetooth device.

Passkey 012345
Device Name



 3 Select the functions you would like to use.

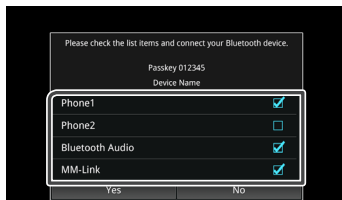

■ Phone1 / Phone2

2 hands-free devices can be connected simultaneously.

■ Bluetooth Audio

Put check mark to use Bluetooth Audio.

■ MM-Link

Put check mark to use MM-Link.

4 Touch [Yes].

- When the connection is completed and successfully connected, Bluetooth telephone connection icon appears on the top of the screen.

NOTE

- If the mobile phone supports PBAP, the phonebook data is downloaded automatically when you select **Phone1** or **Phone2**.

 
Bluetooth setup

1 Press  button.

2 Touch [Connectivity].



3 Touch [Bluetooth].

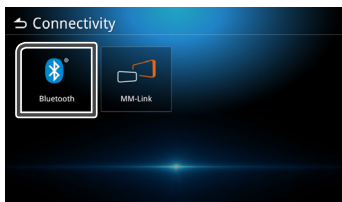

4 Set each item as follows.

■ Bluetooth

Set whether to use the Bluetooth function.
The default is ON.

■ Device Select

Connect the Bluetooth device.

■ Device Name

 
Change the device name.

Connect the Bluetooth device

1 Touch [Device Select].




2 Touch one of the devices you would like to connect.

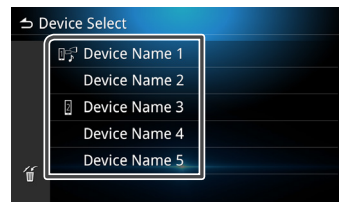

NOTE

- If the icon is lighted, it means that the unit will use that device.

 3 Set each item as follows.

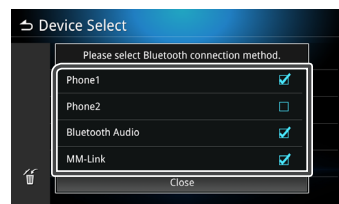

■ Phone1 / Phone2

2 hands-free devices can be connected simultaneously.

■ Bluetooth Audio

Put check mark to use Bluetooth Audio.

■ MM-Link

Put check mark to use MM-Link.

4 Touch [Close].




To delete the registered Bluetooth device

 
- 1 Touch  .



- 2 Touch the device name to delete.



-  Selects all Bluetooth devices.
 -  Clear all selected check marks.
- 3 Touch  and the confirmation message appears.

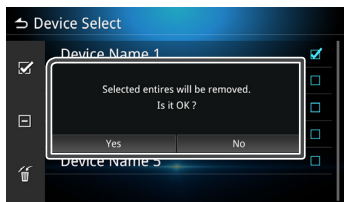

- 4 Touch [Yes].

Change the device name

- 1 Touch Device Name.



- 2 Touch  to delete letters.

- 3 Type in device name.



- 4 Touch [Enter].

 
Playing Bluetooth Audio device

Touch Bluetooth Audio icon on the source selection screen.

NOTE

- While the Bluetooth Audio is playing, if you connect your Android phone / iPhone to the USB port and enable Android Auto / CarPlay, the Bluetooth Audio will be disconnected.
- In this case, you will not be able to select the Bluetooth Audio icon from the All Sources screen, i.e., you will not be able to switch to Bluetooth Audio.
- In order to play the Bluetooth Audio, you need to disconnect your Android phone / iPhone from the USB port.

Bluetooth basic operation

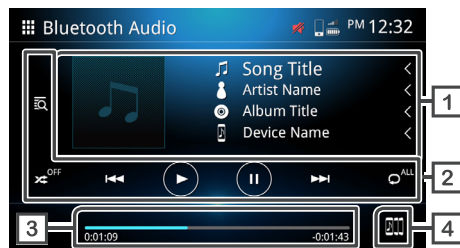

1 Track information display

Display the current track information, such as song title, artist name, album title, and connected device name.

2 Operation keys

- Search for files.
- Shuffle play.
- Shuffle play off.
- *Shuffle may not show depending on mobile device.
- Move to the previous / next content.
- Long press to fast forward or fast backward. *
- This operation is also possible with the steering control.
- *If the mobile device doesn't support this function, it can't be performed on the unit.
- Play.
- Pause.
- Repeat all files.
- Repeat a file.
- Turn off repeating.
- *Repeat may not show depending on mobile device.

3 Playing time

Display the current playing position.

4 Bluetooth audio devices switch.

Bluetooth audio device change

Up to five Bluetooth audio device can be connected and switched.

1 Touch  and list of registered devices is displayed.

2 Touch the device name you would like to connect.

- Touch  on the left of the connected device.

 The device is connected.

 The device is disconnected.


 6th and later devices.

* Up to five devices can be used simultaneously.



3 Touch .

- The device can start to play when the color changes from white to blue.

 The device is during playback.

 The device is connected.

 The device is disconnected.



4 Touch  to go back to Bluetooth Audio operation.

NOTE

- When the Bluetooth audio is switched to another one, the current audio settings will be deleted and the new connection settings will be restored.

Searching Files

1 Touch .

2 Touch the selected file or folder.





3 Touch the selected item in the content list and start to play.

Hands-Free Function

Use telephone function by connecting the Bluetooth telephone to the unit.

Make a phone call

- 1 Press  button.
- 2 Touch .
- 3 Touch [Phone].

NOTE

- If the mobile phone supports PBAP, the unit can display the phone book list and call history after mobile phone is connected with the unit.
 - Phone book list up to 1000 entries.
 - Call history up to 50 entries.

- 4 Select operation function.



- 1  Switch to another mobile phone.

You can switch between the mobile phones when you connect two mobile phones.

- 2  **History**

Call from the dialed call, received call or missed call.

- 3  **Phonebook**

Call from the phone book downloaded from the phone.

- 4  **Dial**

Call by entering a number.

- 5  **Phone Setup**

Phone Setup screen appears. (P. 27)

NOTE

- The sound quality and performance of Bluetooth hands-free will be effected by mobile phones and carrier conditions.
- Status of battery and signal reception may differ from those displayed on the mobile phone.

Call history usage

Call from the dialed call, received call or missed call.

- 1 Touch .

 
- 2 Select phone number from the list.



Phonebook usage

You can use phonebook to make a call. Before starting to use, please make sure to download the phonebook data.

- 1 Touch  insert the phonebook screen.

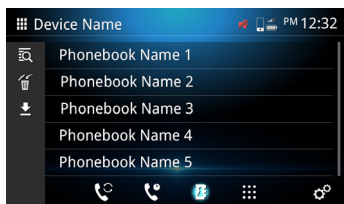


-  Searching by alphabet.

-  Remove phonebook.

-  Download phonebook to the unit.

 - 2 Touch  and start downloading.

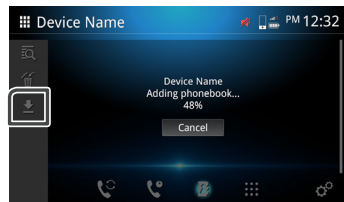

NOTE

- Up to 1000 phonebook entries can be downloaded. If the phonebook contains more than 1000 entries, remaining entries will not be transferred.
- Up to 10 Bluetooth devices can be stored in the unit.
- When you connect the mobile phone of which the phonebook data had been previously downloaded, the previously downloaded data will be displayed.

- 3 After download the phonebook data, you can start to use phonebook and make a call.

 
Call using the phonebook

- 1 Touch .


- 2 Touch .

- 3 Select the initial.


- Special characters cannot be used for searching.
- Different languages with the first character equivalent accent can be used for searching, but cannot be used to search middle word.

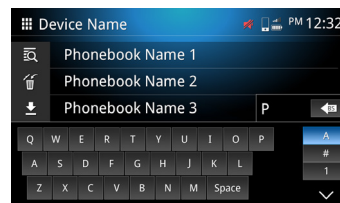

- 4 Select the name from the list.

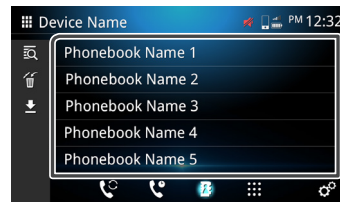 

 - 5 Select the phone number from the list.

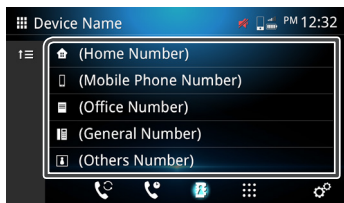


- Move to the upper hierarchy.

Entering phone numbers to make a call

- 1 Touch .

 - 2 Enter the phone number with dial pad.*

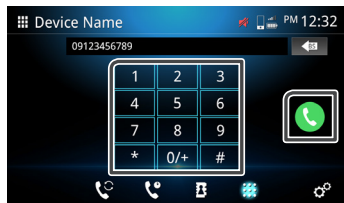


*The text box can only enter maximum 30 numbers. If over 30, the dial pad will be disabled.

- 3 Touch .

Receive Incoming call

 
- 1 Touch to answer the phone call or touch to reject the incoming call.

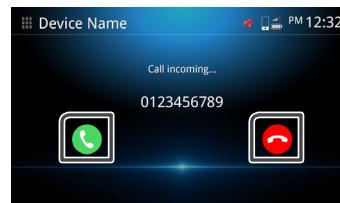

- To end the call

While talking, touch to end the call.

 Operations during the call

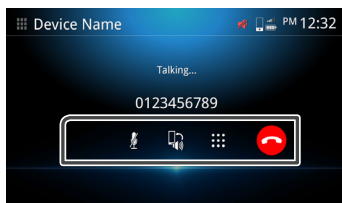

Adjust the reception volume up and down.

This operation is also possible with the steering control. Press + and - hard keys or use two fingers swipe on the screen. Swipe up is volume up and swipe down is volume down.

Mute

 
Touch to mute or unmute the voice.

Voice switch

Touch / to switch the voice from the speaker to mobile phone or from mobile phone to the speaker.

Output the dial tone

Touch to display dial pad.

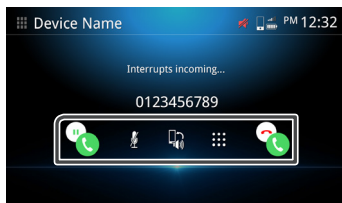


Call-waiting

When you are talking and receive a new call, you can answer the newly received call by touching . The current call is put on hold. Each time you touch , the caller will change to the other one. Touch is to hang up the interrupts incoming call and keep current call.

Phonebook deletion

1 Touch .

 2 Select the name or use below icon.

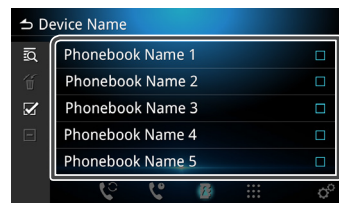

Select all.

Clear all checks.

3 Touch and appear the confirmation message.

4 Touch [Yes].

Phone Setup

1 Press  button.

2 Touch .

3 Touch [Phone].

4 Touch .



5 Setup each function as follows.



Select Phone Device.

Select the mobile phone to use as the Hands-Free phone 1 or 2 from the registered device list.

Touch  or  to switch between the selected phone device.



Auto Response

Set the automatic response time to pick-up the incoming call.

OFF (Default) : Turn off the automatic response.

1 / 5 / 10 / 15 / 20 / 25 / 30 seconds : Set the ringing duration.

Sort order

Set the way of sorting the data of phonebook.

First Name / Last Name : Sort data by the first name.

Last Name / First Name : (Default): Sort data by the last name.

Reception Volume

Adjust the reception volume (0-40).

Default value is "23".

Incoming Ring Tone Volume

Adjust the ring tone volume while talking (0-40).

Default value is "23".

MM-Link

You can use MM-Link to display the smartphone's screen on the unit.

Before start

 
1 Download 'MM-Link for Display Audio' from App Store (for iPhone) or Google Play (for Android phone).

- 'MM-Link for Display Audio' is a free Application.
Compatible devices are the following
 - iOS version 13 or later
 - Android version 6.0 or later
 - Bluetooth support

2 Pair your smartphone with the unit via Bluetooth.

- See Register the **Bluetooth device (P. 18)**
and **Bluetooth setup (P. 18)**

3 On the Bluetooth connection method screen, check the MM-Link checkbox.

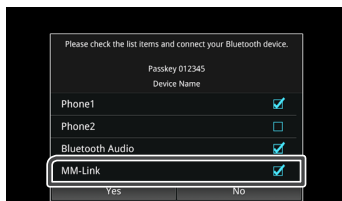

NOTE

 
- 2-way touch control may not work with some Android Smartphone due to Smartphone's OS version or technical spec.
- Some Smartphone Video Apps or Video contents cannot be displayed to Display Audio screen due to App specification or copy-right policy.
- If you recognize that your smartphone gets hot, please stop using MM-Link and disconnect USB.
- Without Bluetooth connection, some functions, such as operation, cannot be realized.

Operation (iPhone)

1 Press  button.

2 Touch .

3 Touch [MM-Link].

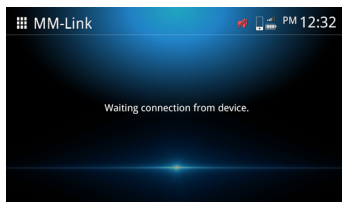

4 Activate 'MM-Link for Display Audio' in your smartphone.

5 On your iPhone, launch "Setting". Touch "Control Center".
Add "Screen Recording" to "INCLUDE" list.
Launch Control Center of your iPhone, touch and hold Screen
Recording icon and then touch "MM-Link" and start broadcast.





6 Connect your iPhone with the unit via Lightning to USB cable.

7 Read the caution carefully and touch [Agree].



8 MM-Link screen appears.

9 To enable touch operation, calibration is carried out. (P. 32)

 
- Touch , display the Next Virtual Key.
- Touch , display the Home screen.
- Touch , display the Previous Virtual Key.
- Touch , check that the calibration is successful.
* If the calibration fails, please start again from No.5.

Operation (Android phone)

1 Press  button.

2 Touch  .

3 Touch [MM-Link].

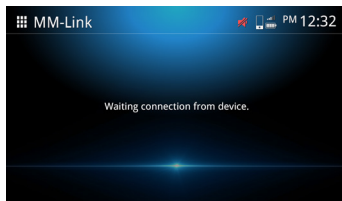

4 Activate 'MM-Link for Display Audio' in your smartphone.
Connect your Android smartphone via USB cable.
You will see the Recording Permission Toast on your Android smartphone.
Press "Start now" to start capturing your Android screen.

5 Read the caution carefully and touch [Agree].



6 MM-Link screen appears.

NOTE

- You can check "how to" tutorial in 'MM-Link for Display Audio'.
- When you use MM-Link first time, MM-Link terms of service are displayed. It is necessary to agree to the MM-Link terms of service to use this function.

NOTE

 
- While displaying the MM-Link, you can switch to another audio source from "AV Source Select" on the MM-Link setup screen.
- While you use the MM-Link function with an iPhone, MM-Link is discontinued by the following operations. To resume the MM-Link functions, disconnect the USB cable and try connecting it again.
 - Receiving a call
 - iPhone's screen recording function is stopped.
 - iPhone screen is turned off.
- Due to a restriction in the smartphone, there may be no audio for some apps.
- While you use the MM-Link function with an Android device, the software keyboard is displayed only when you operate the Android device and enable the virtual keyboard beforehand.
- You cannot use both MM-Link and iPod source at the same time.
- You cannot use both MM-Link and Bluetooth Audio source at the same time.
- After you finish using the MM-Link function, stop broadcast on iPhone's screen recording function. Otherwise iPod, Apple CarPlay and Bluetooth Audio sources may not work correctly.
- For iPhone users, due to iOS system limitations, only one application can be opened at a time. When using any navigation application, please refrain from using other applications as this will interfere with MM-Link operations.
For example, if you use Waze together with Spotify, Display Audio will stop displaying Waze Navigation screen and only Spotify sound comes from Display Audio.
- Please do not rotate your iPhone during calibration (**P 32**).
- If you manually put your iPhone to sleep, the connection will be lost. It recommend that you set your iPhone's auto-lock to "Never".
(Settings->Display & Brightness->Auto Lock)
- Android phone has different levels of driving operation restrictions depending on the application.

MM-Link Setup

- 1 Press  button.
- 2 Touch [Connectivity].




- 3 Touch [MM-Link].
- 4 Settings for each item as follows.

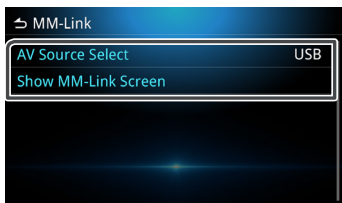

AV Source Select

When using MM-Link, you can choose the media source to be played in the background.

 AV OFF/MM-Link/Radio/DAB/USB

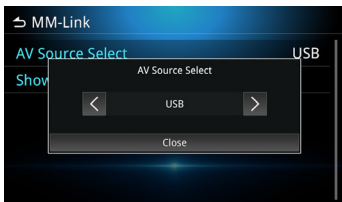


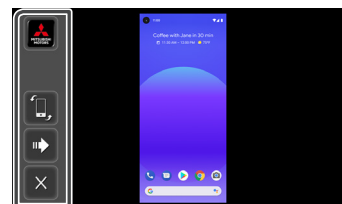 
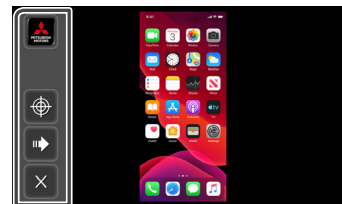 
Show MM-Link Screen

When you press the item, the screen displays MM-Link.




Virtual hard key set up



While MM-Link is connected successfully, you can operate the App by using the virtual keys.

 
 
- Long press  button.
The virtual hard key appears.







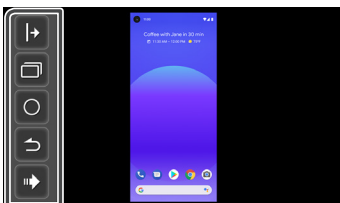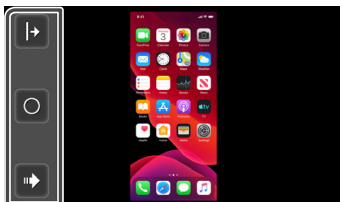

* Virtual hard keys

-  My Mitsubishi App *
* Only Indonesia has this app.
-  Touch position calibration.
* Only support iOS smartphone.
** During calibration, the display should be in portrait orientation and should not be rotated.
*** Please set the Tracking Sensitivity in the iPhone Touch Settings to as low as possible.
-  Screen rotation *
* iPhone doesn't support screen rotation.

-  Go to the next virtual hard key.
-  Close the virtual key.



* Virtual hard keys



-  /  Display the virtual key at the right/left side of screen.
-  Display the screen in pagination way.
* iPhone doesn't support.
** Depending on the smartphone, image may look expanded.
-  Back to home.
-  Go to the previous screen.
* iPhone doesn't support.
-  Go to the previous virtual hard key.

NOTE

- Each function of the MM-Link virtual hard key differs depending on the connected device and may differ from the function operated on the device.
- The screen examples shown in the manual are those for the Global model.
- Screen may vary according to the models.

USB

 
Connect to the USB device

- 1 Connect the USB device to the USB port (P. 16).
- 2 Press  button.
- 3 Touch .
- 4 Touch [USB].
 - Supported USB profile FAT16, FAT32.

USB Operation

- 1 Press  button.
- 2 Touch .
- 3 Touch [USB].

Music File

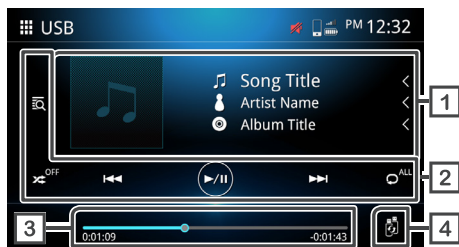

Video File











1 Track information display

Display the current track information, such as music name, artist name, album name, file name and folder name.*

* Only a file name and a folder name are displayed if there is no tag information.

2 Operation keys

-  Search for tracks / files.
-  Shuffle play.
-  Shuffle play off
-  Move to the previous/ next content.
Long press to fast forward or fast backward.
This operation is also possible with the steering control.
-  Play or pause.
-  Repeat all files.
-  Repeat a file.
-  Repeat the files in the folder.

3 Playing time

Display the current playing position. You can drag the circle point left or right.

 
-  : Play
-  : Pause

4 USB devices switch

When plug in 2 USB devices, you can touch this key to switch from USB 1 to USB 2.

5 Hide (Video file only)

Hide all information on the screen.

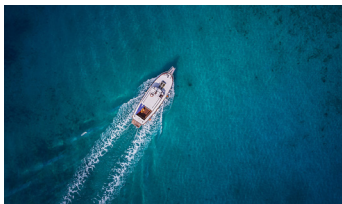

NOTE

- Touch to display the control screen.

Searching Files Operation

You can search music or video files by the following operations.

1 Touch .

2 Touch to selected a list type.



3 Touch the selected item in the content list.

NOTE

- For operation of the list screen, please see **List screen (P. 15)**.