


zūmo 220 unit label

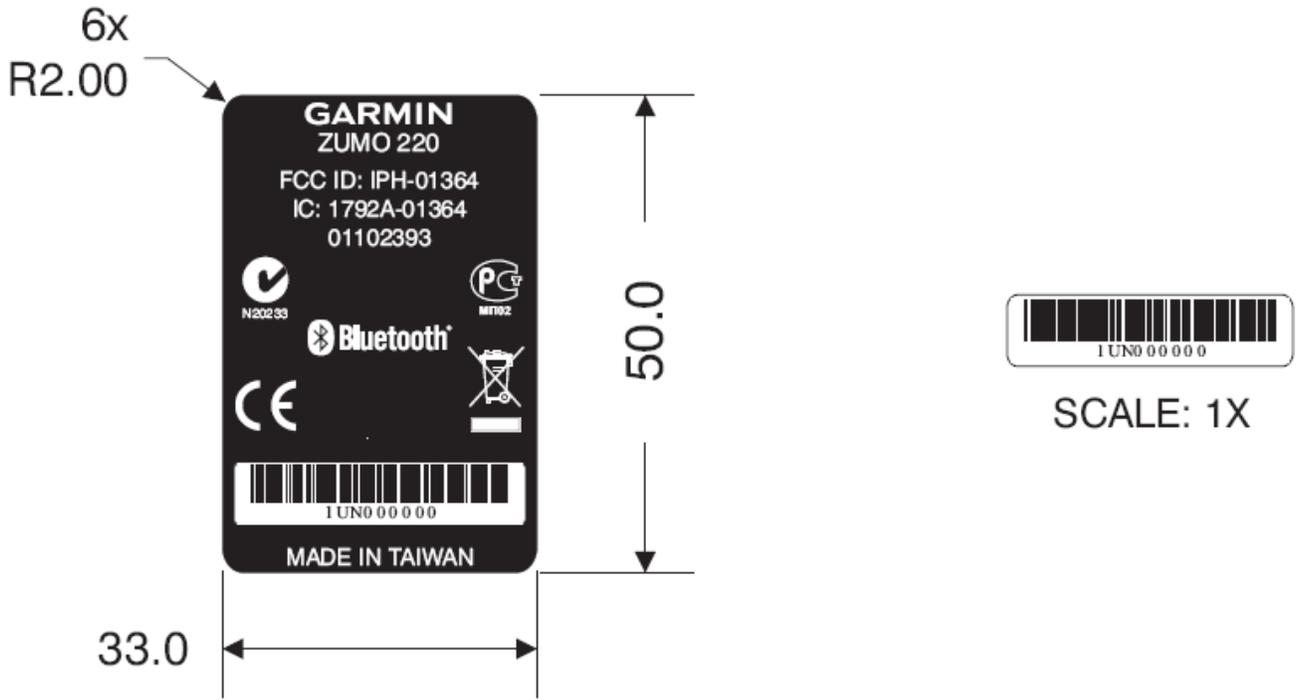

Label will be placed underneath the battery, inside the battery door.

