

GARMIN.

Quick Start Manual

Introduction

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Getting Started

- 1 Install the batteries (page 4).
- 2 Turn on the device and select your language (page 3).
- 3 Pair your phone with the Garmin Explore™ app (page 4).
The app allows you to receive notifications, view

weather forecasts, search for live geocache data, and more.

- 4 Go outdoors to an open area and wait while the device locates satellites.
When the device acquires satellite signals, it automatically starts tracking your path and recording it as an activity.
- 5 Navigate to a destination (page 6).

Device Overview



Hold to turn the device on.

- ① Hold to open the power menu.
①

Press to turn the backlight on or off.

- ② Press to scroll through menus, options, and settings.
▲

- ③ Press to scroll through menus, options, and settings.
▼

- ④ OK
📍 Press to choose an option or open the menu for a page.
Hold to save your current location as a waypoint.

- ⑤ ↶
☰ Press to return to the previous page.
Hold to view the glance loop.

- ⑥ Battery cover D-ring.

- ⑦ USB port (under battery door).

⑧ Mounting spine.

Installing AA Batteries

The handheld device operates on two AA batteries (not included).

- 1 Turn the D-ring counter-clockwise, and pull up to remove the cover.
- 2 Insert two AA batteries, observing polarity.



- 3 Replace the battery cover, and turn the D-ring clockwise.

Pairing Your Phone

To use the connected features of your device, you should pair it with the Garmin Explore app.

- 1 Bring your compatible phone within 10 m (33 ft.) of your device.
- 2 From the home page on your device, select **Setup** > **Pair Phone**.
- 3 From the app store on your phone, install and open the Garmin Explore app.

- 4 From the app, select the **Devices** option, and follow the on-screen instructions to pair your device.

After the device and phone are paired, they connect automatically when they are turned on and within range.

Glances

Your device comes preloaded with glances that provide quick information. Some glances require a Bluetooth® connection to a compatible phone.

Hold  to view the glance loop.

Geocaching: Displays the nearest downloaded

geocache. While navigating, this glance displays the geocache you are navigating to.

Weather: Displays the current temperature and weather forecast.

Sunrise/Sunset: Displays sunrise, sunset, and civil twilight times.

Notifications: Alerts you to incoming calls, texts, social network updates, and more from your paired phone (page 4).

Moon Phase: Displays the moonrise and moonset times, along with the

moon phase, based on your GPS position.

Tracking Pages

From the home page, select **Tracking**, and select ▲ or ▼ to scroll through the pages. You can press **OK** to open the options menu for each page.

Map page: Shows your position and heading on the map.

Compass page: Guides you to your destination by displaying a compass and bearing pointer.

Trip computer: Displays helpful statistics such as your current speed, trip odometer, and elevation.

You can customize the data fields displayed.

Navigation page: This page appears while navigating. It displays the name of the location, the distance to the final destination, the speed of travel, and a direction arrow. You can follow the arrow to navigate.

Navigating to a Destination

- 1 From the home page, select **Tracking**.
- 2 Press **OK** to open the options menu.
- 3 Select **Navigate**.
- 4 Select a category.

- 5 Select a destination.
- 6 Press **OK** to open the options menu.
- 7 Select **Go**.

A navigation page is added to the tracking page loop. You can navigate using the navigation page, map, or compass.

Saved Data

From the home page, select **Saved**.

Waypoints: Waypoints are locations you record and store in the device. Waypoints can mark where you are, where you are going, or where you have been.

Courses: A course is a sequence of waypoints or locations that leads you to your final destination.

Activities: Your device records your path as an activity.

Collections: You can use the Garmin Explore app to group related waypoints, courses, or activities into collections. You can show or hide the data in each collection on the device.

Device Information

Product Updates

On your computer, install Garmin Express™ (www.garmin.com/express).

On your phone, install the Garmin Explore app.

This provides easy access to these services for Garmin® devices:

- Software updates
- Data uploads to Garmin Explore
- Product registration

Getting the Owner's Manual

The owner's manual includes instructions for using device features and accessing regulatory information.

 
Go to **garmin.com**
/manuals.

Specifications

| | |
|-----------------------------|---------------------------------------|
| Operating temperature range | From -20° to 60°C (from -4° to 140°F) |
| Wireless frequency | 2.4 GHz @ 6.16 dBm maximum |

© 2022 Garmin Ltd. or its subsidiaries
Garmin®, the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Explore™ and Garmin Express™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The BLUETOOTH® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. Other trademarks and trade names are those of their respective owners.





support.garmin.com



Printed in Taiwan
October 2022
I90-02965-90_0A

