



A04813



GARMIN

2

Set Up • Configuration • Configurazione • Einrichtung • Configurar

garmin.com/driveapp



• Manuals • Videos • Support • Regulatory Information • Manuels • Vidéos • Assistance • Informations réglementaires • Manuali • Video • Assistenza • Informazioni sulle normative • Handbücher • Videos • Support • Aufsichtsrechtliche Informationen • Manuales • Vídeos • Asistencia • Información sobre las normativas vigentes



garmin.com/manuals/A04813



garmin.com/videos/A04813-gettingstarted

support.garmin.com

© 2024 Garmin Ltd. or its subsidiaries

Garmin® and the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Dash Cam™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The microSD™ logo is a trademark of SD-3C, LLC.

2.4 GHz @ 17.7 dBm Maximum




Printed in Taiwan
June 2024
190-03124-02_0A






1

Installation • Installation • Installazione • Installation • Instalación

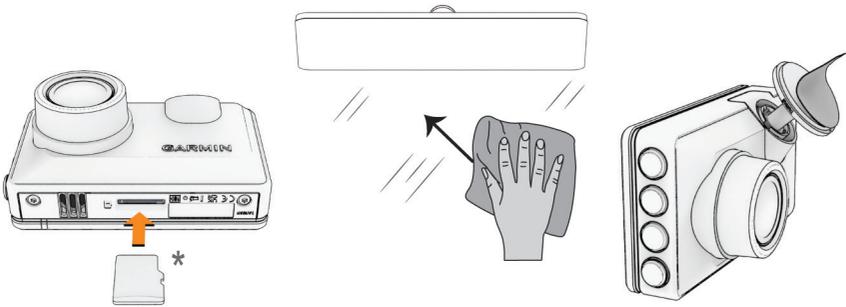

*Class 10 microSD™ card not included *Carte microSD™ de classe 10 non incluse
 *Scheda microSD™ di classe 10 non inclusa *microSD-Karte der Klasse 10 nicht im Lieferumfang enthalten
 *Tarjeta microSD™ de clase 10 no incluida

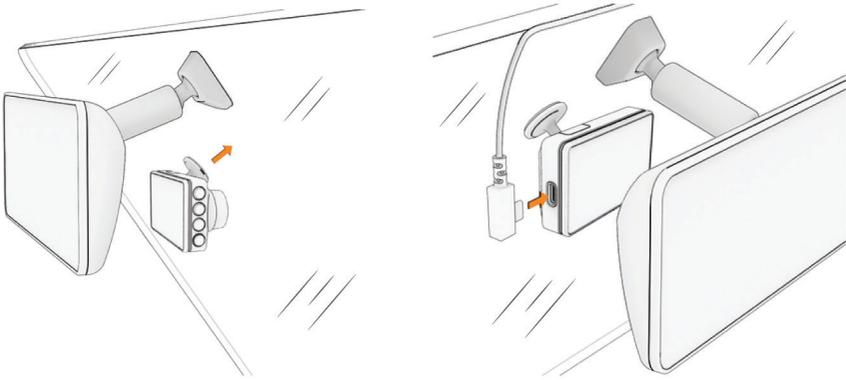

TIP: To hide the power cable, route it behind the vehicle trim along the windshield, doorframe, or dash.

ASTUCE : pour masquer le câble d'alimentation, faites-le passer sous le ciel de toit le long du pare-brise, de la portière ou du tableau de bord.

SUGGERIMENTO: per nascondere il cavo, è opportuno passarlo dietro le finiture dell'abitacolo lungo il parabrezza, lo sportello o il cruscotto.

TIPP: Verlegen Sie das Netzkabel hinter der Verkleidung des Fahrzeugs entlang der Windschutzscheibe, des Türrahmens oder des Armaturenbretts, damit es nicht zu sehen ist.

CONSEJO: Para ocultar el cable de alimentación, colócalo por la moldura del parabrisas, el marco de la puerta o el salpicadero.

