

 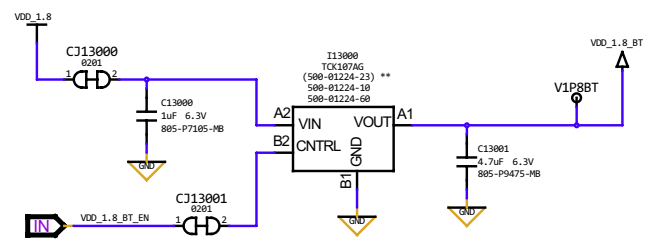


BLE Load Switch

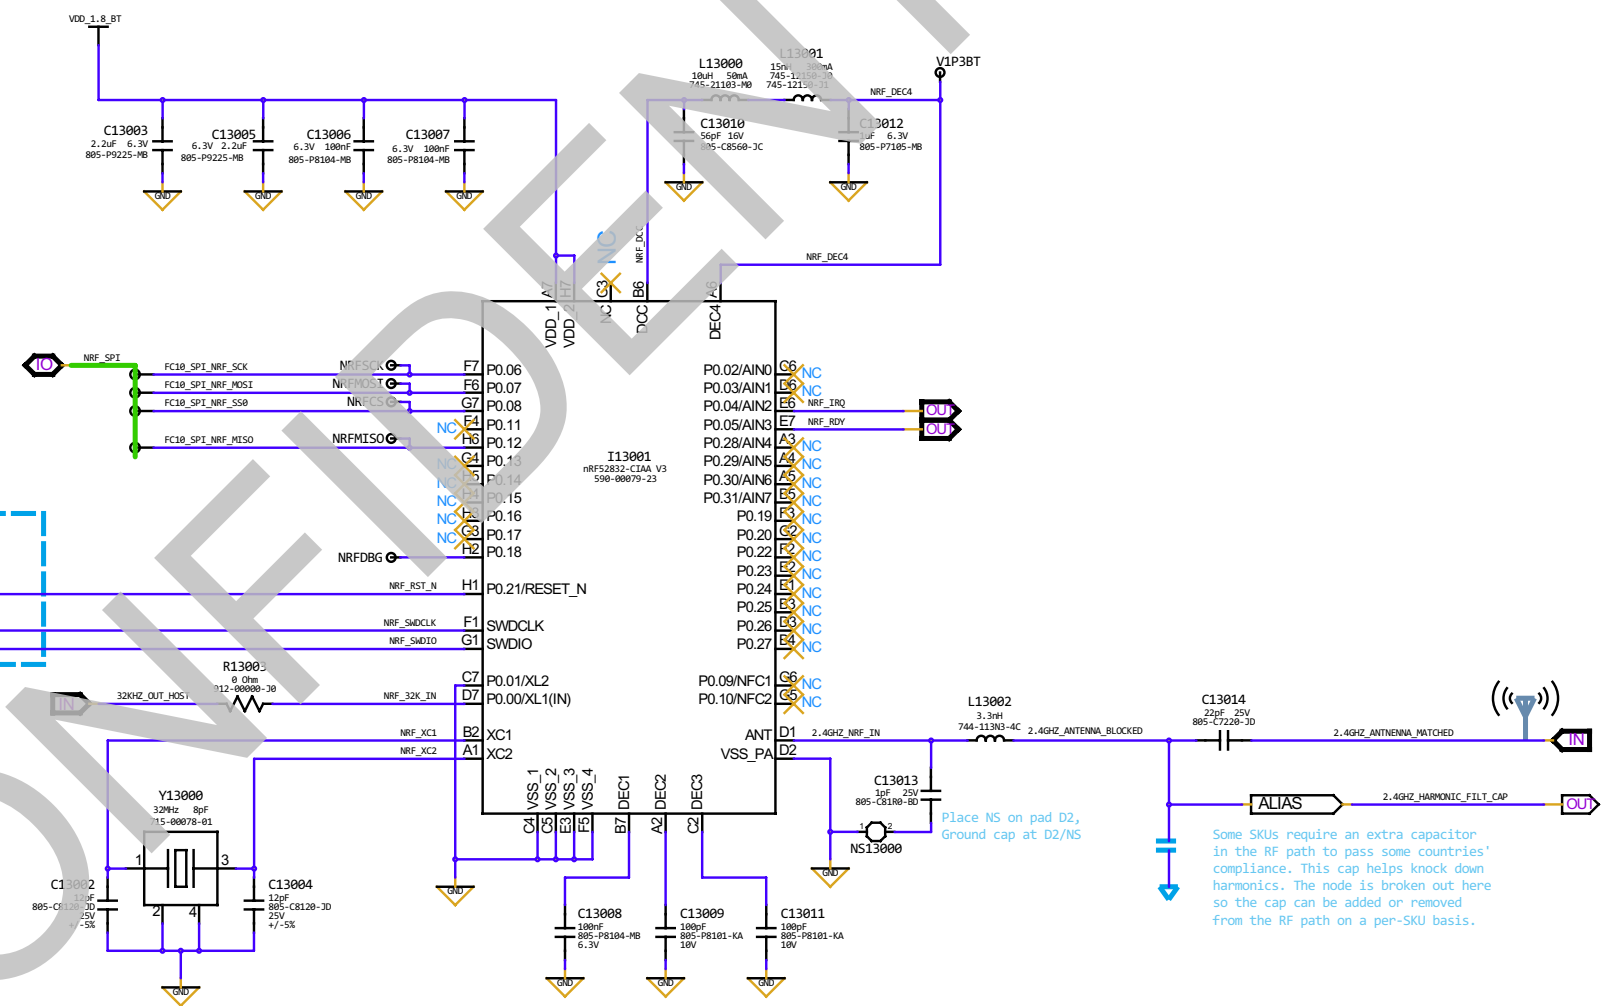

Program



Place NS on pad D2,
Ground cap at D2/NS

Some SKUs require an extra capacitor
in the RF path to pass some countries'
compliance. This cap helps knock down
harmonics. The node is broken out here
so the cap can be added or removed
from the RF path on a per-SKU basis.

BLE

GARMIN		
SIZE		REV.
B		B
DWG NO.		SHT OF
014-04883-01		10 22

