

TX3312S USER MANUAL

You can get lucky if you follow these simple instructions.

1. Accustom yourself with the future hunting ground. Pre-season scouting is very important in harvesting an animal. Pre-season scouting can give you clues to bedding and feeding patterns, game trails and watering holes. Patterning deer by thorough scouting will make you a more successful hunter.
2. When you are scouting for deer during the hunting season, you need to look for key things. Look for fresh deer droppings and fresh tracks. Look for well used deer trails and feeding areas. Also look for buck rubs on trees and buck scrapes on the ground. When you find all of these key things, you know you have found a good place to hunt.
3. Analyse the wind direction. Air currents carrying scent can have a big effect on your hunting. Always check which way the wind is blowing. The reason is so that the deer will not smell your sent on the air currents. If they do smell your sent they will turn around and leave or bed down. They might bed down and watch you for as long as you stay at your stand.
4. You should use the down wind to favour the odour from your device .
5. Preparing the REMOTE CONTROL. No special preparation is necessary as the battery is already inside this device. However when pressing on its button, if no red light appears, you will have to change the battery.(12V 23A alkaline battery). Please note that dispenser activation occurs upon release of button.
6. Preparing the DISPENSER. Remove the dispenser device and your odour refill can from packaging. Remove the battery cover located on top of device by pressing down on cover and sliding it back. Insert 4 AAA batteries (not included in kit) respecting polarity before putting the cover in its original position. Shake the refill can a few times. Place the dispenser on top of the refill can by pressing down firmly. While pressing down, slide the ring down to secure the device into clamped position. Your dispenser

is now ready to work. Turn dispenser ON. Test the device outdoors and keep yourself at a certain distance from the dispenser to avoid receiving odourous spray. Press the remote control button and release in order to trigger the spray. Dispenser may be tested without clamping the device on the can. A clicking sound can be heard upon release of remote control button in the dispenser.

7. You should tie your dispenser at 4 to 6 feet above ground, on a small tree, a branch or at your strategic location.
8. Set the dispenser at a distance no more than 150 feet away from your tree stand or hunting area. Please make sure that the remote control stays within the range distance of the dispenser.
9. We suggest to spray approximately from 3 to 5 consecutive sprays to saturate the area with the chosen odour. Take note that this will depend on the hunting ground, wind factor and the time you have entered your hunting ground.
10. Always turn off the dispenser when not in use. To remove dispenser from aerosol can, press down the dispenser on the can and lift the holding ring. This will release the dispenser from can. Remove batteries when storing away.

IMPORTANT

1. Do not pierce this container, heat it or dispose of it in a fire. It could explode.
2. Your DISPENSER is water resistant, but not completely waterproof. Do not leave it at hunting sites for extended periods. Remove it each time you leave the hunting ground.
3. Your DISPENSER is resistant to cold and snow. Keep it clean at all times and wipe it carefully before storing away.
4. For added protection, you can cover the clamp ring with camouflage tape.
5. Never use other aerosol products other than Spraylogik. Using any other substance will void the product's guarantee.

FCC ID: IXVTX3312S

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATIONS
IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,

INCLUDING INTERFEERENCE THAT MAY UNDESIRED OPERATION.

The user should not modify or change this equipment without written approval form
AutoMicro Technology Inc. "Model No: TX3312S ". Modification could void
authority to use this equipment.