




NISSHIN INDUSTRY CO., LTD.

HEAD OFFICE : 3-2-11 SHIBUKAWA CHO HIGASHI OSAKA CITY JAPAN
TEL : (06) 720-1781 FAX : (06) 721-5985

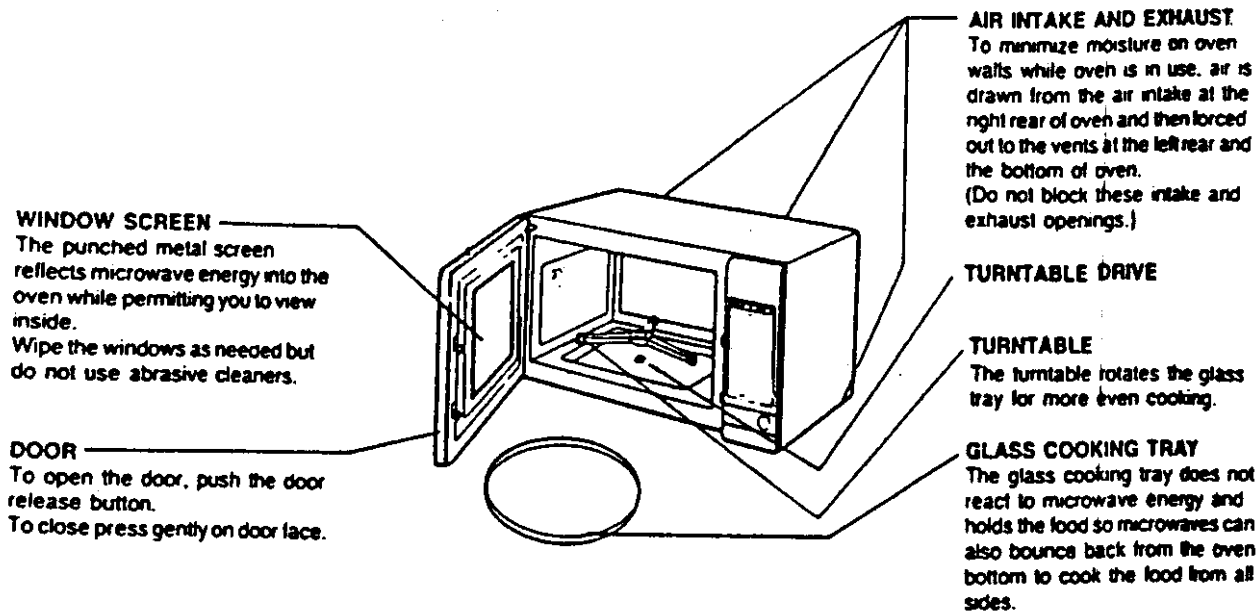

If this oven is dropped or damaged, do not use it until it is thoroughly checked by a trained service technician. This oven has a short power supply cord. Extension cords may be used if you are careful in their use. If an extension cord is used, it must be a type S, with 3 number 16 wires and have a 3-prong grounded plug. The extension cord should not drape over a countertop where it can be pulled on or tripped over accidentally, the electrical power cord must be kept dry and must not be pinched or crushed in any way. Do not store burnable material, such as food, in a microwave oven.

THIS MICROWAVE OVEN IS DESIGNED FOR HOUSEHOLD USE ONLY AND MUST NOT BE USED FOR COMMERCIAL PURPOSES.

- This oven may possibly cause reception interference on radio and/or televisions.
- In order to eliminate or minimize interference to radios and televisions from this microwave oven, the oven should be on a separate electrical circuit within the building. In addition, the oven should be physically as far away from the radio or television as possible.
- There are no user maintenance requirements for this appliance, except for normal cleaning as outlined in this owner's manual.

- 9 -

JHU 016
EXHIBIT "D"

1 OF 1

4-23-99