

 


Harmony[®]

Home Control

Setup Guide | Guide d'installation


Package contents

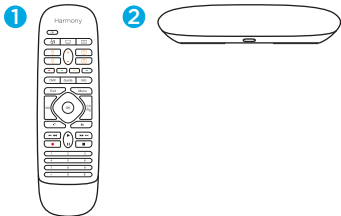

1. Home Control remote

2. Home Hub

 Controls devices via IR, *Bluetooth*, or Wi-Fi

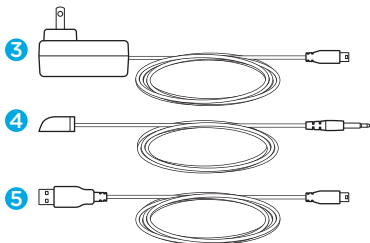

3. Power adapter

Provides power to the Harmony Hub

 
4. IR mini blaster

Extends IR coverage when used in combination with the Harmony Hub

5. USB cable

Set up hub via PC or Mac if access to mobile device is not available.

Congratulations on the purchase of Harmony Home Control

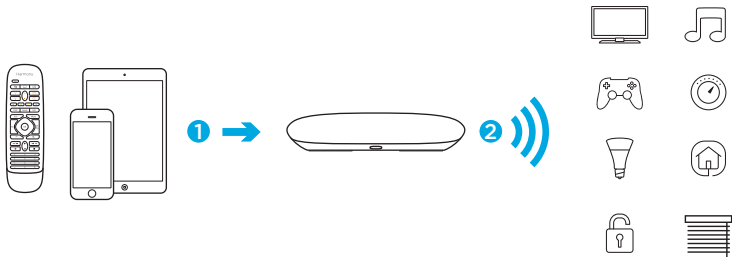


The Harmony Hub is the center of your Harmony system—always keep it powered on!

1. The hub receives commands from the remote or mobile app. The remote itself does not send commands directly to your devices.
2. The hub sends commands to your audio video and home control devices in the form of *Bluetooth*[®], Wi-Fi, and infrared signals (IR).

Lets get started

STEP 1

 Position the Harmony Hub

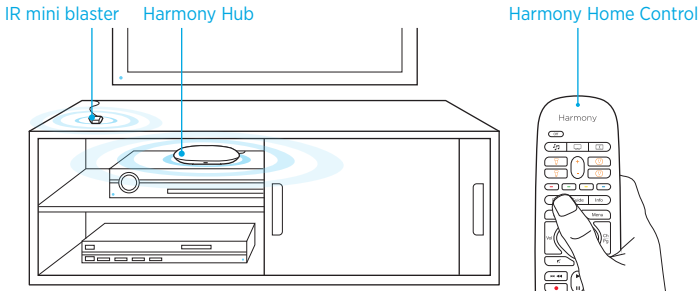


Place the Harmony Hub in an unobstructed location next to your entertainment devices.

Or... If using closed cabinets, place the Hub inside the cabinet and the IR mini blaster outside the cabinet to control your TV.

STEP 2

 Power up your Harmony Hub

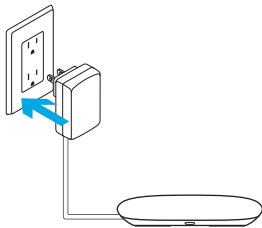

Once plugged in, the hub takes approx. 30 seconds to power up.

STEP 3

Install the Harmony App



- Visit the Apple App Store or Google Play and install the **Harmony** App.
- Launch the app, select the Setup New Remote button, and follow setup instructions.

Note: If you have an iPhone 4, iPad 1 or iPad 2, or an Android device that does not support *Bluetooth*, please visit setup.myharmony.com on a computer to connect the hub to your Wi-Fi network before beginning Step 3 of setup.

For more detailed instructions and product info, please visit support.myharmony.com/home-control

The remainder of setup will be done using your mobile device. See next section for an overview of what to expect.

Mobile App Setup Overview

- **Connect hub to Wi-Fi.** Using your mobile device's *Bluetooth*, connect your hub to your wireless network.
- **Create a Harmony account.**
- **Scan your Wi-Fi network** for devices that can be controlled by Harmony (e.g. Roku, Sonos, hue, Smart TVs).
- **Add home entertainment devices** for additional devices not found during Wi-Fi scan (e.g. TV, cable box, AVR, game console, Blu-ray player).
- **Add home control devices.** Harmony supports various devices such as select lights, locks, thermostats, and home control platforms. See Home Controls Explained section for further details.
- **Create Activities.** You'll be guided through creating Activities such as Watch TV, Listen to Music, and Play Xbox. See One-Touch Activities section for further details.

Home Controls Explained

Your Harmony Home Control supports a variety of devices such as lights, light switches, locks, thermostats, and blinds. Harmony Home Control also connects to other home control platforms to access additional devices supported by these solutions. The list of supported devices includes:*



Nest Learning Thermostats, Honeywell Thermostats



Philips hue Lights, Lutron Caséta Wireless Lights



Lutron Serena Window Shades



August Smart Locks



 
SmartThings, PĒQ

*The list of Harmony-compatible devices is always growing. Visit myharmony.com/compatibility for the most up-to-date list of compatible brands, devices, and model numbers. Device compatibility is subject to change without notice.

Activities Explained


Create your own customized Activities. Here are some examples of what you can do.

One-Touch Activities

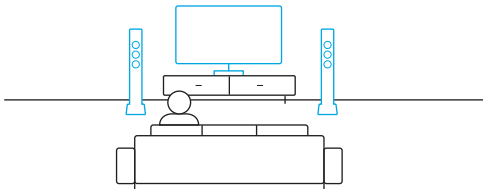

Watch Movie: One touch and your TV, surround sound system, and Blu-ray player are all powered on and switched to the right settings.

 One-Touch Activities with Home Control Devices

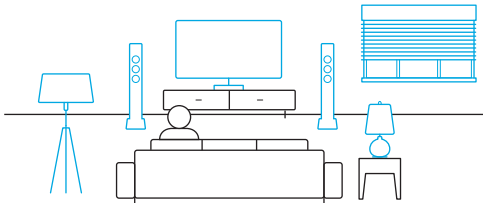

Movie Time: Your One-touch “Watch Movie” Activity PLUS your lights automatically dim to your favorite setting.

Get creative: Activities can be configured to automatically turn on lights, open blinds, adjust thermostat temperature, turn on music/TV, or unlock a door.

How to use your remote



Activity Buttons

Map these buttons to your favorite Activities. (6 total activities supported using short and long presses)



Home Control*

Map these buttons to control devices such as lights and outlets. Use the +/- buttons to adjust brightness.

* For a list of supported devices, visit myharmony.com/compatibility

Troubleshooting

Harmony Hub cannot connect to Wi-Fi or is not detected by the Harmony app.

- Ensure the hub is within range of your router.
- Ensure your phone and hub are connected to the same Wi-Fi network.
- Restart your hub by disconnecting and reconnecting its power supply. It will take 30 seconds to restart.
- Restart your router by disconnecting and reconnecting its power supply.

Support Info

There's more information and support online for your product. Please visit support.myharmony.com/home-control where you can find:

- Frequently asked questions
- Troubleshooting
- Support Community
- Online Documentation
- Warranty Information
- Phone and email support info



www.logitech.com

support.myharmony.com/home-control

© 2014 Logitech. All rights reserved. Logitech, the Logitech logo, Harmony, the Harmony logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

© 2014 Logitech. All rights reserved. Logitech, the Logitech logo, Harmony, the Harmony logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

620-006205.PB