


THE DRAFT OF INSTRUCTION MANUAL FOR
MODEL MR-500 (OURS 1997)

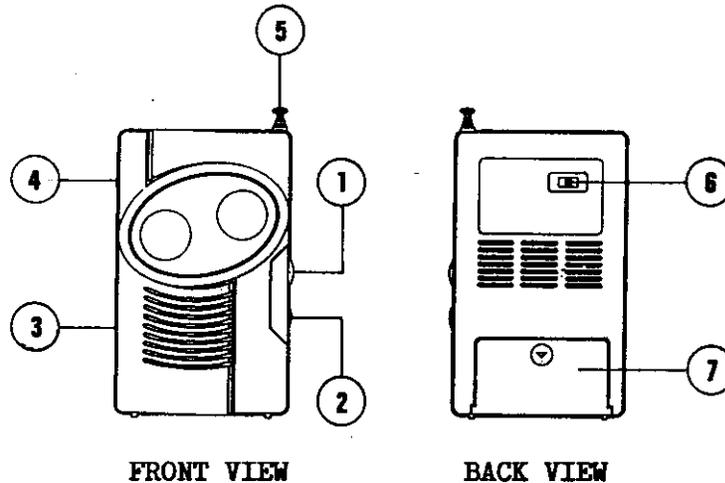

FUNCTIONS AND CONTROLS:

- (1) TUNING KNOB
- (2) ON-OFF/VOLUME CONTROL KNOB
- (3) EARPHONE JACK
- (4) AM/FM/IWB (Instant Weather Band) SWITCH
- (5) TELESCOPIC ANTENNA
- (6) WEATHER BAND SELECTOR SWITCH (on the back)
- (7) BATTERY DOOR

TO INSTALL THE BATTERY:

1. Press and slide downwards to open the BATTERY DOOR (7), insert one 9V battery and connect to battery clip (battery not included).
2. Close the BATTERY DOOR (7) by snapping-in.

RADIO LISTENING:

1. Turn the ON-OFF/VOLUME CONTROL KNOB (2) anti-clockwise, the radio is switched on with a light click (To increase the sound volume, rotate the knob further anti-clockwise. To turn the radio off, turn this knob clockwise until a slight click is heard).
2. Slide AM/FM/IWB SWITCH (4) to AM or FM position.
3. Rotate the TUNING KNOB (1) in either direction to select your desired station.
4. Adjust ON-OFF/VOLUME CONTROL KNOB (2) to desired listening level.
5. Extend TELESCOPIC ANTENNA (5) for best reception on FM. Since the AM reception is affected by the direction of the radio, rotate your radio for optimum reception.

INSTANT WEATHER BAND LISTENING:

This unit receives three major weather band frequencies directly broadcasted by National Weather Service (NOAA). See attached printed information for state/cities and frequencies.

1. Rotate ON-OFF/VOLUME CONTROL KNOB (2) anti-clockwise to turn on radio.
2. Slide the AM/FM/IWB to IWB position.
3. Slide WEATHER BAND SELECTOR SWITCH (6) to desired band (1 to 3 - see city frequencies on attached NOAA list).
4. Extend TELESCOPIC ANTENNA (5) to its full length.
5. Adjust ON-OFF/VOLUME CONTROL KNOB (2) to desired listening level.

EARPHONE JACK (3) LISTENING:

This jack accommodates a 3.5mm headphone plug for private listening. When the plug of headphone is inserted, the circuitry will automatically cut out the sound through the loudspeaker.

IMPORTANT INSTRUCTION:

- * If you plan not use your radio for more than two or three weeks, please remove the old battery. Old battery may leak and damage the radio
- * Always turn the radio off when not in use.

CLEANING:

Clean the casing with a soft cloth slightly moistened with water or mild detergent solution. Do not use solvents such as alcohol, benzine or gasoline as they may mar the finish of the casing. Never immerse the unit in water. This will damage the inside of electronic components.

MODEL 1997

FREQUENCY:
AM 530 - 1710 KHz
FM 88 - 108 MHz
WB 1 - 162.550 MHz
3 - 162.475 MHz
2 - 162.400 MHz

POWER SUPPLY:
DC 9V ONE PC. BATTERY

THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION IS SUBJECT TO THE CONDITION THAT THIS DEVICE DOES NOT CAUSE HARMFUL INTERFERENCE.

Made in China

MODEL 1997

FREQUENCY:
AM 530 - 1710 KHz
FM 88 - 108 MHz
WB 1 - 162.550 MHz
3 - 162.475 MHz
2 - 162.400 MHz

POWER SUPPLY:
DC 9V ONE PC. BATTERY

THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION IS SUBJECT TO THE CONDITION THAT THIS DEVICE DOES NOT CAUSE HARMFUL INTERFERENCE.

Made in China

[FCC ID: 1FT1997]