

McMurdo G5 and E5 EPIRBs











ACTIVATION
... see Label Artwork for more detail



Battery Expiry Label - inside dome





Compliance Information ... see Label Artwork for more detail


... to uncover Programming Label:



remove Lanyard ...






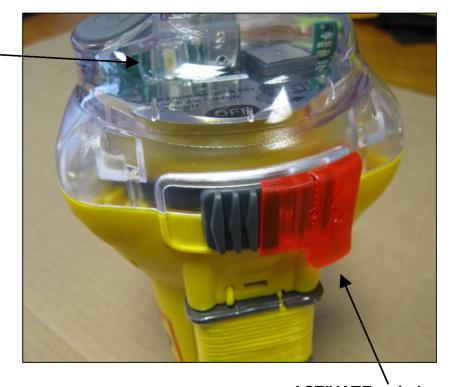

ACTIVATE switch ... red tab must be torn away to allow operation



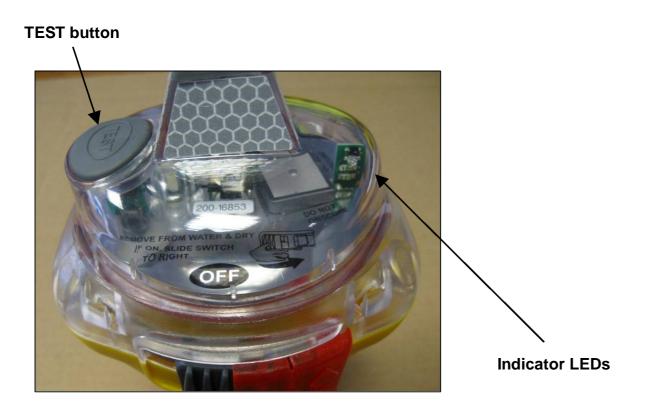




Automatic Release Housing





with BreaktHRU HRU



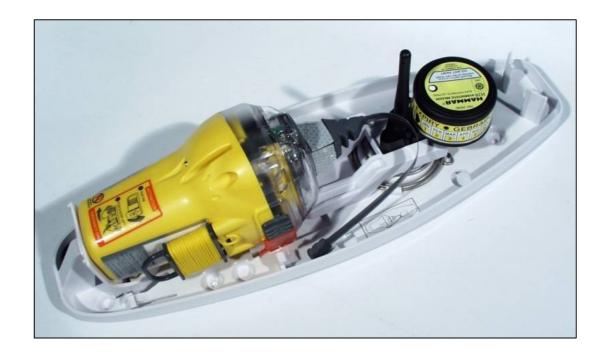

with Hammar HRU


Hydrostatic Release Units









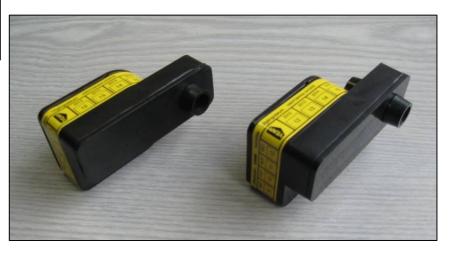

Manual Release Bracket







